

# AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

## Door Locks



### Default Lock Setting

All doors are preset to lock when your vehicle reaches about 10 mph.

### Default Unlock Setting

All doors are set to unlock when the driver's door is opened.

## Changing Settings

Program all doors to unlock when you shift to Park. See your Owner's Manual for other programmable settings.



1. Close the driver's door. Shift into Park (P) or apply the parking brake.
2. Turn the ignition switch to ON (II).
3. Press and hold the unlock side of the master door lock switch for about 10 seconds. In that time, you will hear three clicks.
4. Within 20 seconds, turn the ignition switch to LOCK (0).

**Note:** The driver's and front passenger's door can be opened by pulling the inner front door handle, regardless of the setting.