



# INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

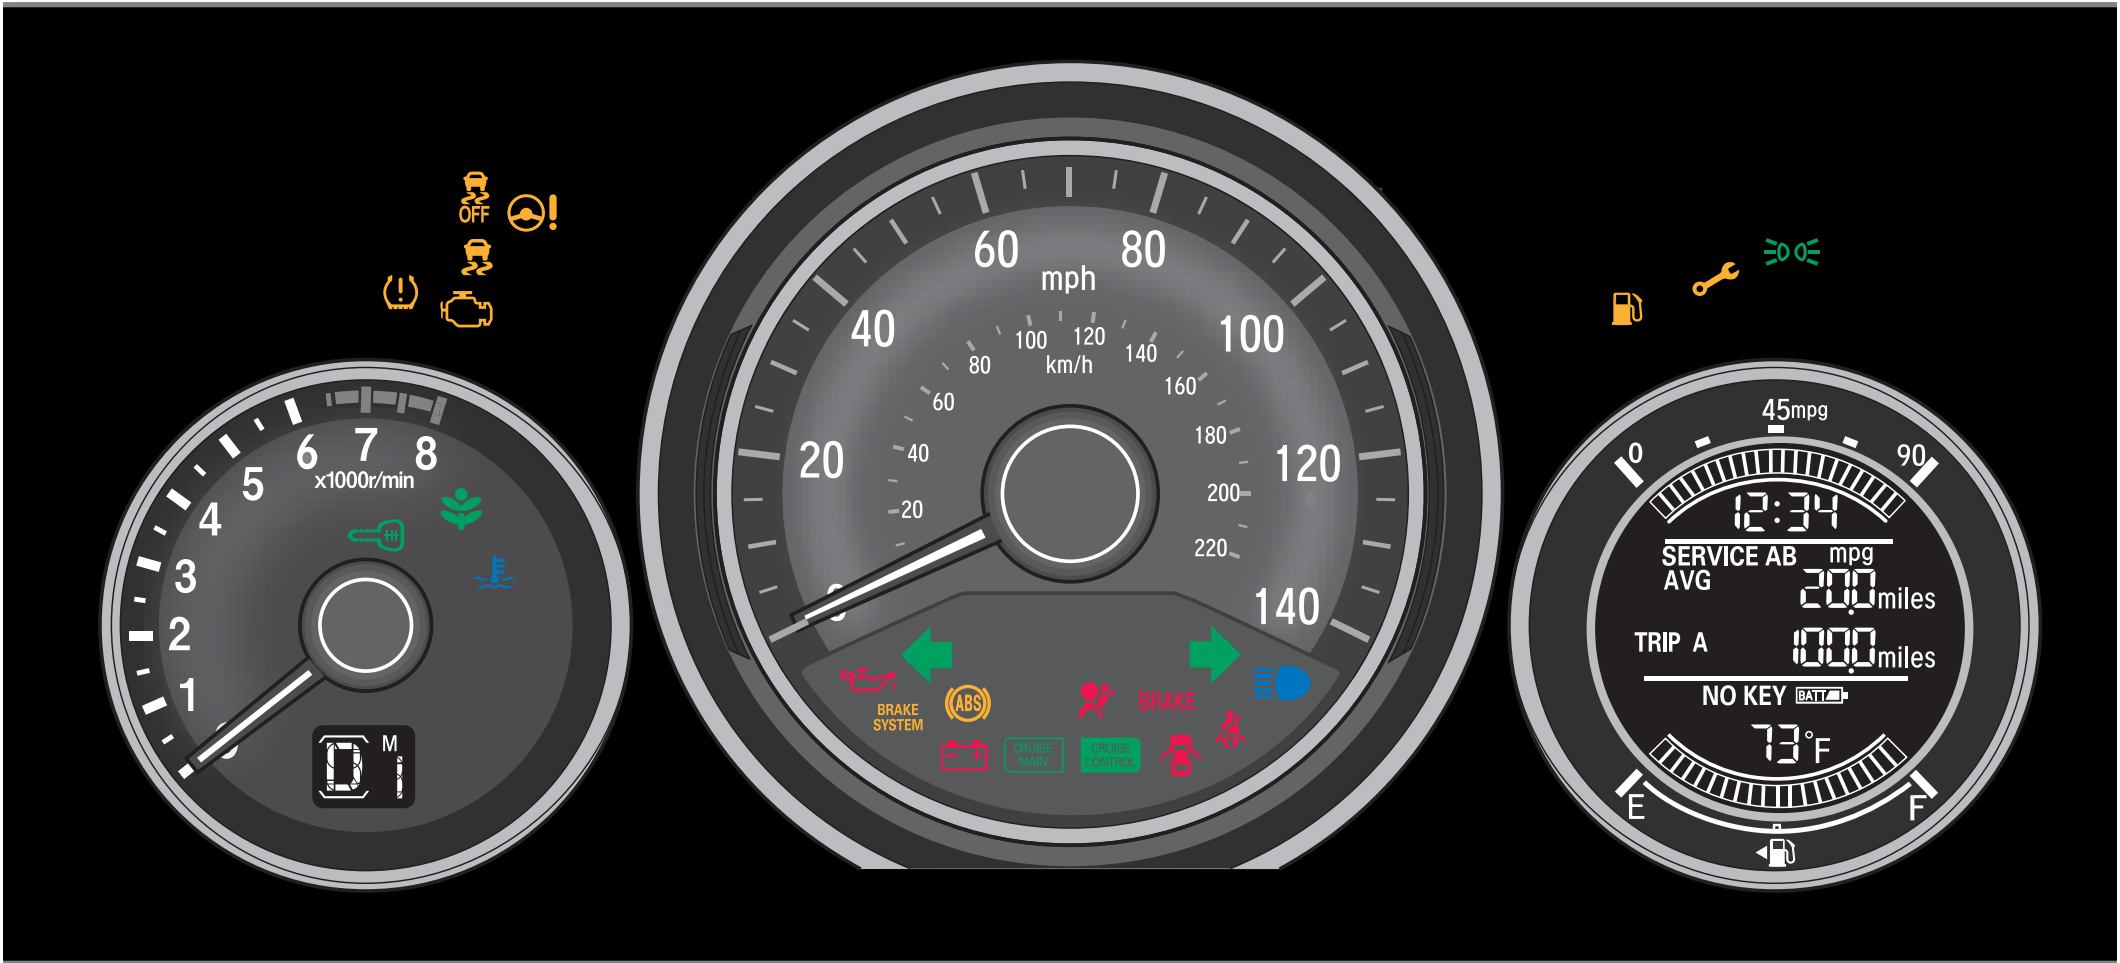

## Malfunction Indicators

 If an indicator remains on, there may be a problem; see your dealer

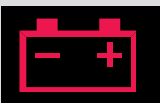


Charging system



Electric Power Steering (EPS)



 Low brake fluid, Brake system

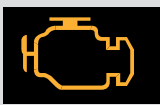

Malfunction indicator lamp (check engine light)



Low oil pressure



Vehicle Stability Assist® (VSA)



Supplemental Restraint System (SRS)



Tire Pressure Monitoring System (TPMS) (*blinks and stays on*)



Brake System



Low temperature



Anti-Lock Brake System (ABS)

## Condition Indicators

Action is needed by driver



Parking brake on:  
**Release**



Seat belt reminder:  
**Fasten seat belt(s)**



Door/Tailgate open:  
**Close door(s) / tailgate**



High temperature:  
**Drive slowly or pull over**



 
Low fuel:  
**Refill**



Maintenance minder:  
**Make dealer appointment**



Low tire pressure:  
**Add air**

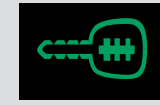


Immobilizer (*blinks*):  
**Use other vehicle key and see dealer**

## On/Off Indicators



 
VSA **OFF**

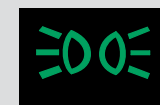

Exterior lights **on**



 CRUISE MAIN **on**

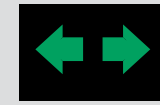

Turn signals/hazards **on**



CRUISE CONTROL **on**



High beams **on**



ECON Mode **on**