


 








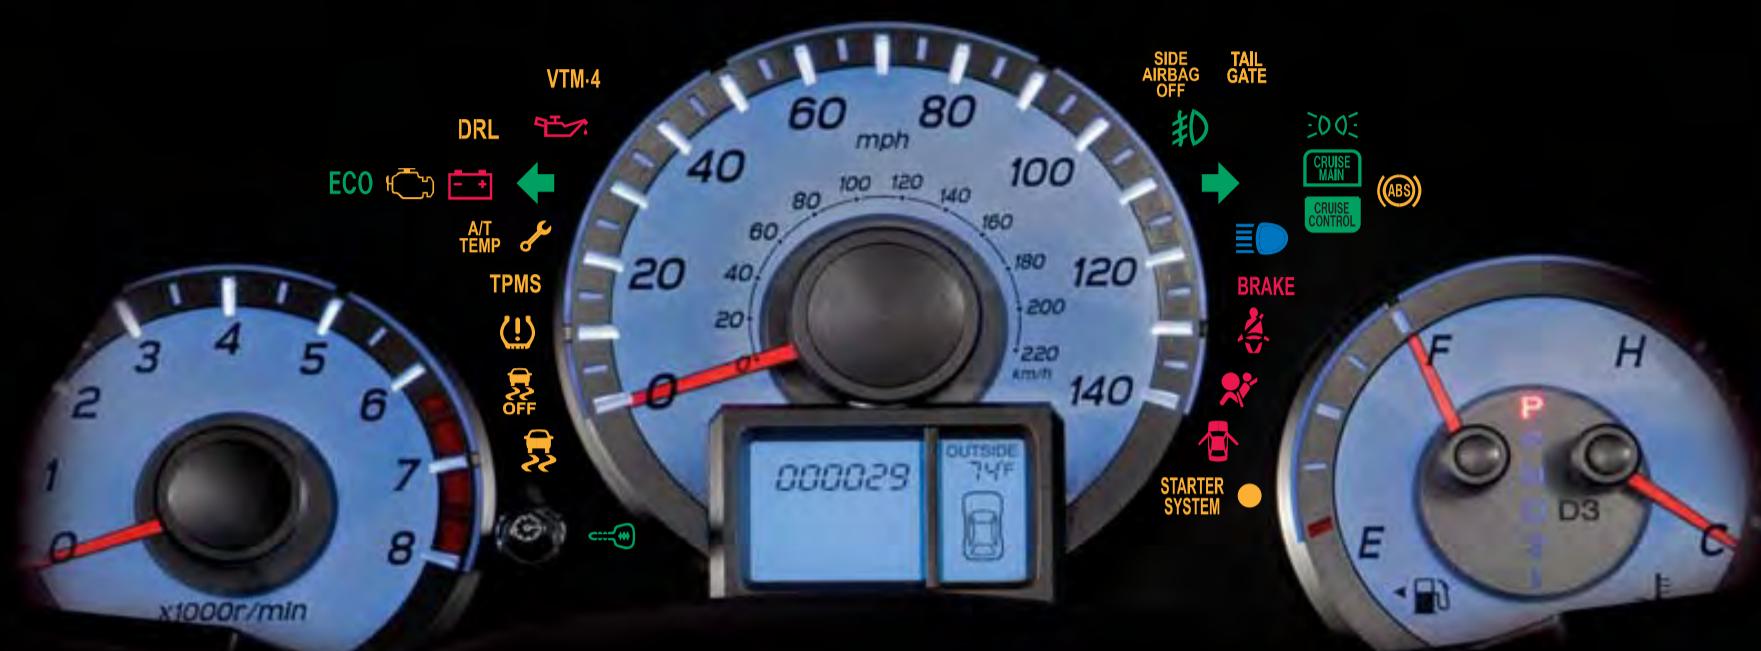

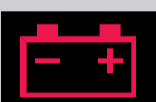INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators



 
 
If an indicator remains on, there may be a problem; see your dealer

 Charging system	 Anti-Lock Brake System (ABS)
 Low brake fluid, Brake system	 Variable Torque Management (VTM-4) (4WD only)
 Low oil pressure	 Malfunction lamp (check engine light)
 Supplemental Restraint System (SRS)	 Vehicle Stability Assist® (VSA)
 Daytime Running Lights (DRL)	 Tire Pressure Monitoring System (TPMS)
 Power tailgate	











Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Low fuel: Refill
 Door/Tailgate open: Close door(s) / tailgate	 Low tire pressure: Add air
 Seat belt reminder: Fasten seat belt(s)	 Maintenance Minder™: Make dealer appointment

 Starter system: Hold ignition switch in START (III) for up to 15 seconds	 Immobilizer (<i>blinks</i>): Use other vehicle key and see dealer
 A/T temperature (4WD only): Pull over and let engine idle	 VTM-4 (<i>blinks</i>): Pull over and let engine idle

On/Off Indicators

 PASSENGER AIRBAG OFF (located on center panel)	 Fog lights on
 SIDE AIRBAG OFF	 Exterior lights on
 VSA OFF	 Turn signals/hazards on
 CRUISE MAIN on	 High beams on
 CRUISE CONTROL on	 Fuel economy on