

# TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

## How It Works



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



The specific tire with low pressure is indicated on the information display.

## What to Do

1. Visually inspect the tires for damage.
2. Check the information display to see which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

