


## Road Departure Mitigation (RDM)\*

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings while driving between 45–90 mph (72–145 km/h).

If your vehicle is getting too close to detected lane markings without a turn signal activated, a message appears in the multi-information display. Steering wheel torque and vibrations are applied to help your vehicle stay in the lane.


Braking may also be applied if the lane lines are solid and continuous.

If the system operates several times without detecting driver response, the system beeps to alert you.

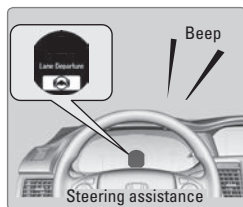

### ■ Turning the System On or Off


Press the RDM button to turn the system on or off. A green indicator appears on the button when the system is on.

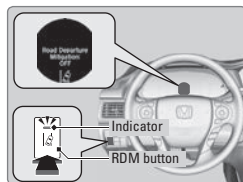

### ■ Changing Settings

Determine the warning timing. The vehicle must be in Park (P).

1. *Models with one display:* Press the SETTINGS button. Select Vehicle Settings.
1. *Models with touchscreen:* From the HOME screen, select Settings. Select Vehicle.
2. Select Driver Assist System Setup.
3. Select Road Departure Mitigation Setting.
4. Select from the options.

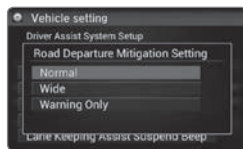

*Normal (default):* Steering control starts from inside the lane edge.

*Wide:* Steering control starts from outside the lane edge.

*Warning Only:* The system only provides a BRAKE message, but does not apply steering or braking.

5. Press BACK to exit the menu.

### Important Safety Reminder

The RDM system has limitations. Over-reliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.