


Remote Power System Start

Start the power system using the remote transmitter before you enter the vehicle.

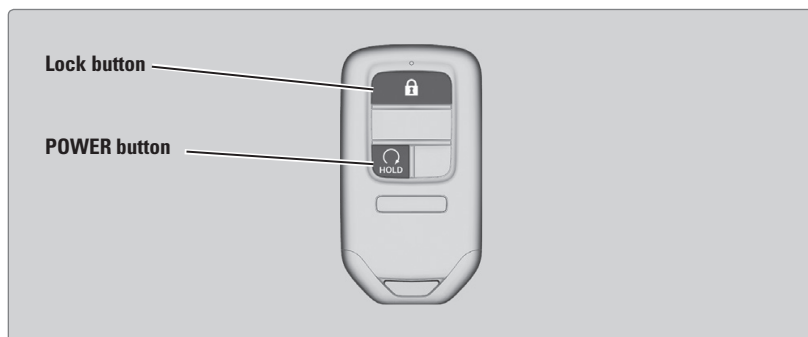

Make sure the vehicle is in a safe location when using remote power system start (i.e., a well-ventilated area, away from any flammable materials).

■ Starting the Power system

Press the Lock button, then press and hold the POWER button within 5 seconds to remotely start the power system.

The power system runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.

While the power system is running, the climate control system adjusts the cabin temperature, the security system remains on, and lights and accessories remain off.

■ Stopping the Power System

Press and hold the POWER button.

The power system will also stop if it has been running for more than 10 minutes, or if any door is opened without using the remote or smart entry.

WARNING

Engine exhaust contains toxic carbon monoxide gas.

Breathing carbon monoxide can kill you or cause unconsciousness.

Never use the remote power system starter when the vehicle is parked in a garage or other area with limited ventilation.