


Maintenance Minder™

Reminds you when indicated maintenance service is due.


Models with information display

When maintenance is due, the Maintenance Minder indicator appears every time you turn the vehicle on. Press the select/reset knob to change displays.

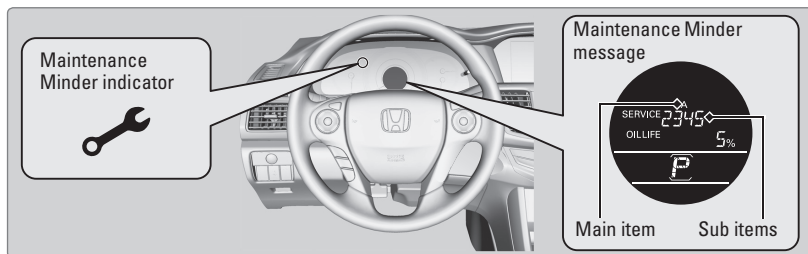

Models with multi-information display

When maintenance is due, the system message indicator comes on and a message appears on the multi-information display every time you turn the vehicle on. Press either Info (▲/▼) button on the steering wheel to change displays.

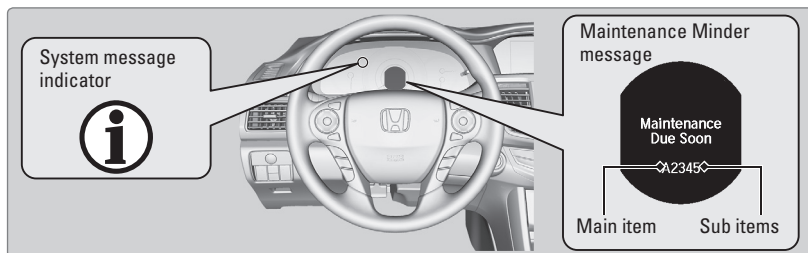

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the display.

Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

CODE	Maintenance Main Items
A	Replace engine oil ^{*1}
B	Replace engine oil ^{*1} and oil filter Inspect front and rear brakes/service as necessary Check parking brake adjustment Inspect tie rod ends, steering gearbox, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (Including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system [#] Inspect fuel lines and connections [#]

^{*1}: If a message SERVICE does not appear more than 12 months after the display is reset, change the engine oil every year.

[#]: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	Rotate tires
2	Replace air cleaner element ^{*2} Replace dust and pollen filter ^{*3} Inspect drive belt
3	Replace transmission fluid ^{*4,*5}
4	Replace spark plugs Replace timing belt and inspect water pump ^{*6,*7} Inspect valve clearance
5	Replace engine coolant

^{*2}: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

^{*3}: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

^{*4}: Continuously variable transmission (CVT) models

^{*5}: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km).

^{*6}: 6-cylinder models

^{*7}: If you drive regularly in very high temperatures (over 110 °F, 43 °C), in very low temperatures (under -20 °F/-29 °C), or tow a trailer, replace every 60,000 miles/100,000 km.