 


■ Adjusting the Sound

Adjust various sound settings.

 
Models with color audio system

1. Use the selector knob to make and enter selections.
2. Press the Sound button.
3. Select a sound mode to change, and adjust it using the selector knob.
4. Press the Back button to exit the menu.

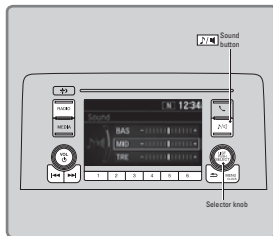

Models with Display Audio

1. Make and enter selections using the touchscreen.
2. From the audio screen, select Menu.
3. Select Sound.
4. Select the tabs to change the sound mode and adjust the setting.
5. Select OK when complete.

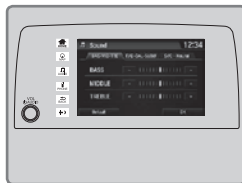

Models with Color Audio System

Color Audio System

Use the buttons to control the display and audio system.

Display button: Adjust display brightness.

Sound button: Adjust sound.

 
**Volume knob/
power button**



Selector knob:
Make and enter
selections.

**MENU/CLOCK
button:** Display menu
options.

BACK button: Go back to the
previous display.

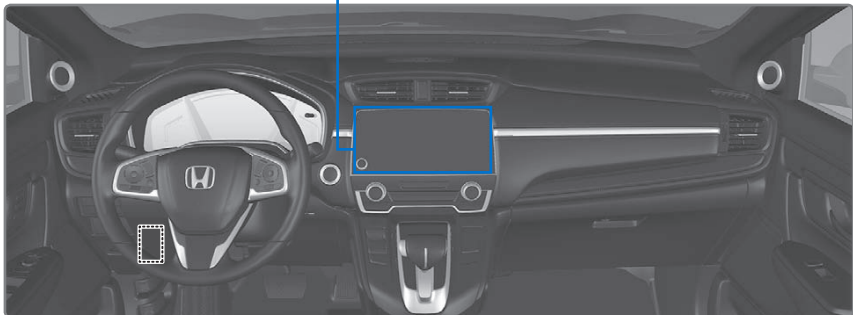


AUDIO AND CONNECTIVITY

Models with color audio system

FM/AM Radio

Play FM or AM radio stations.

 RADIO button: Select a band.

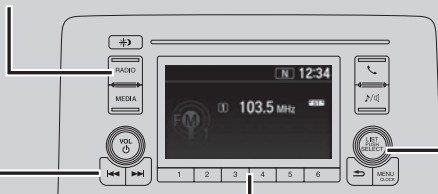

Selector knob: Rotate to tune radio frequency. Press for more options.

Seek/Skip buttons: Search up and down the selected band for a station with a strong signal.

Preset buttons (1-6): Press and hold a preset button to store the current station. Press a preset button to select a previously stored station.



Models with color audio system

iPod®

 
 
Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port.

MEDIA button: Play a connected iPod.

Selector knob: Rotate to change tracks. Press to enter the music search list.

Seek/Skip buttons:


Press to change tracks. Press and hold to move rapidly within a track.

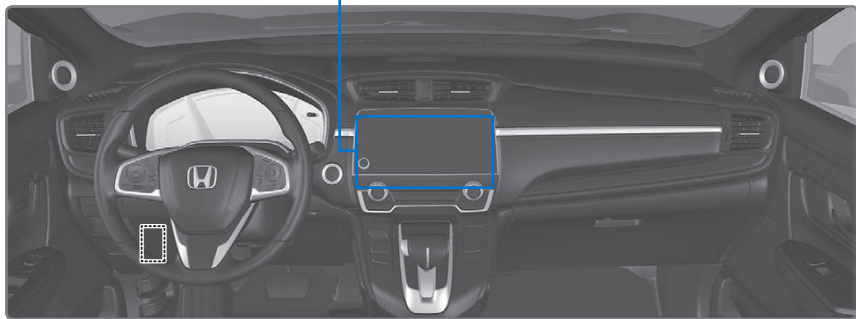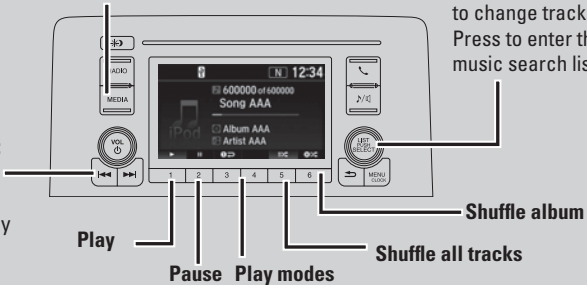

■ Searching for Music

Use the selector knob to search for tracks stored on the iPod.

 1. From the audio screen, press the selector knob.
2. Select a search option.
3. Select the track you want to play.

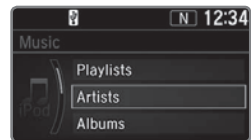

Models with color audio system

USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Connect your device to the USB port.

MEDIA button: Play a connected USB flash drive.

Selector knob: Rotate to change tracks. Press to display the folder list.

Seek/Skip buttons:

Press to change tracks. Press and hold to move rapidly within a track.

Scan tracks

 
 
Scan folders

Repeat one track

Repeat one folder

Random in folder

Random all

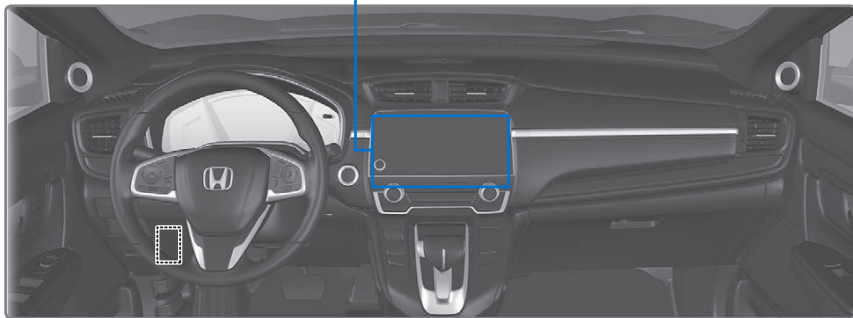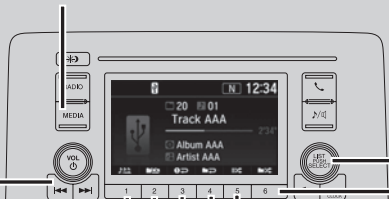

■ Searching for Music

Use the selector knob to search for tracks stored on the flash drive.

1. From the audio screen, press the selector knob.
2. Select a folder.
3. Select the track you want to play.



Models with color audio system

Pandora®*

Play and operate Pandora from your compatible phone through the vehicle's audio system. Visit handsfreelink.com to check phone compatibility. Standard data rates apply with your phone service provider.

Connect your phone when the vehicle is stopped. Disruptions in your phone's cell signal can affect audio playback.

For iPhone:

- Connect via *Bluetooth* HandsFreeLink or USB port.
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If you cannot operate Pandora through the audio system, it may be streaming through *Bluetooth* Audio. Make sure Pandora is selected on the audio system.
- If Pandora still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For other compatible smartphones:

- Connect via *Bluetooth* HandsFreeLink.

MEDIA button: Press to select Pandora.

Selector knob: Rotate to change stations. Press, then turn to make a selection.

Skip button: Press to skip a song.

**Play/
Pause**

 
 
Dislike button

Like button

Bookmark button

Menu button

Back button: Go to the previous display

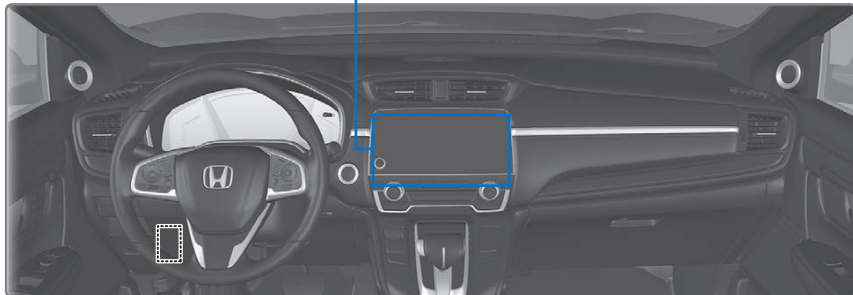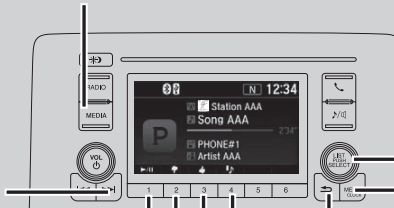


Models with color audio system

Bluetooth® Audio

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Visit handsfreelink.com (U.S.) to check phone compatibility. Standard data rates apply with your phone service provider. Connect your phone to *Bluetooth HandsFreeLink*.


MEDIA button: Play *Bluetooth* Audio.

 Seek/Skip buttons:
Change tracks.

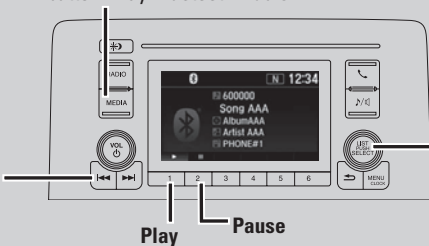

Selector knob:
Press to enter the music search list.

 Play **Pause**

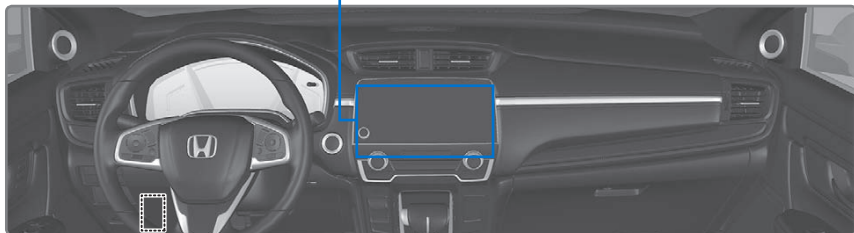

■ Searching for Music

Use the selector knob to search for tracks stored on the device.

1. From the audio screen, press the selector knob.
2. Select a category.
3. Select the track you want to play.



Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.