

Climate Control System

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the buttons on the dashboard to control the system.

Models without SYNC button

AUTO button: Press, then use the temperature control dial to set your preferred temperature.

Rear defogger/heated door mirrors button*

ON/OFF button

A/C button

Recirculation buttons:
Recirculation mode (indicator on): Recirculates air from the vehicle's interior.
Fresh Air mode (indicator on): Maintains outside ventilation.

Windshield defroster button

Mode button: Change airflow location.

Models with SYNC button

A/C button

Mode button: Change airflow location.

AUTO button: Press, then use the temperature control dial to set your preferred temperature.

System on/off button

CLIMATE button: Select climate options on the touchscreen.

SYNC button: Set the passenger's side temperature to the same as the driver's side.

Driver's side heated seat control

Passenger's side heated seat control

Recirculation buttons:
Recirculation mode (indicator on): Recirculates air from the vehicle's interior.
Fresh Air mode (indicator on): Maintains outside ventilation.

Rear defogger/heated door mirrors button*

Windshield defroster button