

Braking

Slow down or stop your vehicle, and keep it from moving when parked.

■ Foot Brake



Press the brake pedal to slow down or stop your vehicle from moving.

■ Brake Assist System

During hard or emergency braking, the system increases braking force. The brake pedal may move slightly or make a noise; this is normal. Continue to hold the brake pedal firmly down.

■ Anti-Lock Brake System (ABS)

During hard or emergency braking, the system rapidly pumps the brakes to prevent wheel lockup and help you maintain steering control. The brake pedal may pulsate slightly during ABS operation; this is normal. Do not pump the brake pedal, and continue to hold it firmly down.

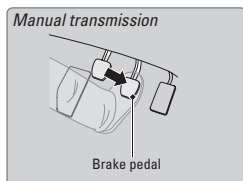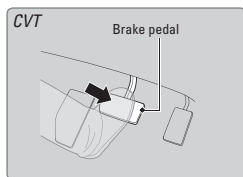

NOTICE

The ABS may not function correctly if you use an incorrect tire type and size.

■ Electric Parking Brake

Keep your vehicle from moving while parked using a simple switch.

To apply: Pull up the switch. The BRAKE indicator appears in the instrument panel.

To release: Press the brake pedal and make sure your seat belt is fastened. Press the switch down to release.

You can also lightly press the accelerator pedal (and release the clutch pedal for manual transmission) if your seat belt is fastened, the vehicle is on, and the shift lever is in Drive (D) or Reverse (R) (or a gear is engaged for manual transmission).

