
Parking Sensor System*

When the system senses an object when you are parking or backing up, indicators appear on the instrument panel and the navigation screen and a series of beeps will sound. As you get closer to the object, the beep rate increases.

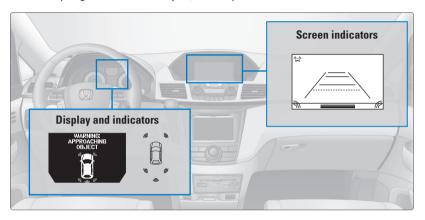

■ Turning the System On or Off

Press the parking sensor button. A green indicator light appears on the button when the system is on.

