 


■ Accessory Power Sockets

Open the socket cover to use power when the vehicle is on.

Power sockets are located in the front console and the driver's side rear cargo area.

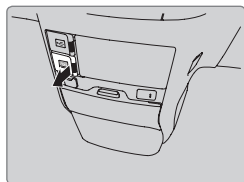

NOTICE

Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Adjusting the Sound

Adjust various sound settings using the selector knob.

1. Press the **SETTINGS** button.
2. Select Audio Settings.
3. Select Sound.
4. Select one of the options, and adjust as necessary.
5. Press the **BACK** button to exit.



 
■ Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

MODE button: Cycle through available audio modes.

VOL (▲/▼) buttons: Adjust audio volume.

CH (+/-) buttons: Change presets, tracks, albums, or folders.

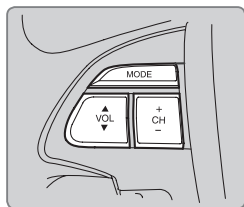

FM/AM/XM Radio

Press (+) or (-) for the next or previous station.

Press and hold (+) or (-) for the next or previous strong station.

CD/HDD*/iPod/USB/Bluetooth Audio

Press (+) or (-) for the next or previous track.

Press and hold (+) or (-) for the next or previous folder (CD/USB).

 
 
Pandora

Press (+) for the next song.

Press and hold (+) or (-) for the next or previous station.


Cruise Control

Maintain a constant vehicle speed without having to keep your foot on the accelerator pedal. Use cruise control on freeways or open roads where you can travel at a constant speed with little acceleration or deceleration.

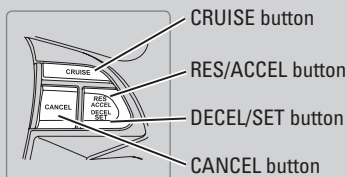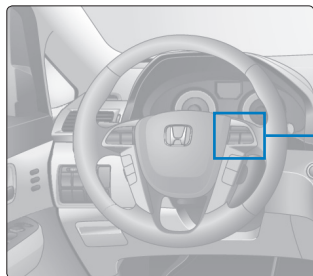

■ Activating and Setting the Vehicle Speed

 
1. Press the CRUISE button. The CRUISE MAIN indicator appears.
2. Accelerate to the desired speed (above 25 mph/40 km/h). Press the DECEL/SET button and take your foot off the pedal to set the speed. The CRUISE CONTROL indicator appears.

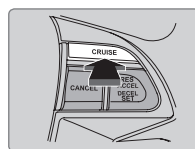

■ Adjusting the Vehicle Speed

Press the RES/ACCEL button to increase speed or the DECEL/SET button to decrease speed.

 Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the button pressed, the vehicle speed increases or decreases until you release it.

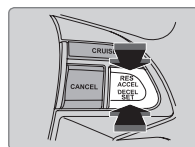


■ Canceling Cruise Control

Press the CANCEL button or the brake pedal. The CRUISE CONTROL indicator goes off.

After cruise control has been canceled, you can still resume the prior set speed by pressing the RES/ACCEL button while driving at a speed of at least 25 mph (40 km/h).

 Press the CRUISE button to turn the system off.

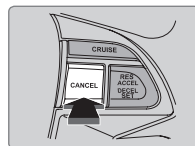

WARNING

 
 
Improper use of cruise control can lead to a crash.

Use cruise control only when traveling on open highways in good weather.

available.

■ Steering Wheel Controls

Use the steering wheel controls to give voice commands.

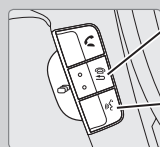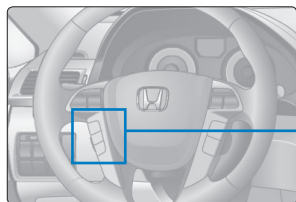

BACK button: Press to cancel a command or operation.

TALK button: Press to give navigation commands.

■ Talk Button Tips

- When using the Talk button, wait for the beep before saying a command.
- To bypass the system prompts, simply press the Talk button again to say your command.
- When the Talk button is pressed, all available voice commands are highlighted in yellow.
- The system recognizes only the commands listed in the Voice Command Index
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows and moonroof.

WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Operate system controls only when the conditions permit you to safely do so.

**if equipped*