

# INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.



Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

## Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

### U.S.

Canada



Canada

### Brake system

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



### Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



### Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



### **Malfunction indicator lamp (check engine light)**

- The emissions control system may have a problem or the fuel cap is loose or missing.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place and wait for the engine to cool down.



### **Anti-lock Brake System (ABS)**

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



### **Tire Pressure Monitoring System (TPMS)**

There is a problem with the tire pressure monitoring system or the vehicle is fitted with the compact spare tire.



### **Vehicle Stability Assist (VSA)**

There is a problem with the VSA system.



### **Brake system**

There is a problem with the brake system.



### **Electric Power Steering (EPS)**

There is a problem with the EPS system.



### **Adaptive Cruise Control (ACC)\* with Low Speed Follow (LSF)\***

There is a problem with the system, the temperature is too high, or the radar sensor is blocked.



### **Lane Keeping Assist System (LKAS)**

There is a problem with the system, the temperature is too high, or the camera is blocked.



### **Safety Support System**

There is a problem with the Road Departure Mitigation, Collision Mitigation Braking System or Blind Spot Information\* systems. Have your vehicle checked by a dealer.

### Condition Indicators

These indicators may require you to perform an action.

**BRAKE**

U.S.



Canada

#### **Parking brake**

Release the parking brake before driving. You will hear a beep if you drive with it not fully released.



#### **Seat belt reminder**

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you and/or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.



#### **Low fuel**

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.



#### **Low tire pressure**

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. Recalibrate the TPMS after adjusting air pressure. The indicator also appears if your vehicle is fitted with the compact spare tire\*. Have your regular tire repaired or replaced as soon as possible.



#### **System message\***

When a condition or malfunction indicator comes on, a message also appears in the driver information interface\*. Check the display for more information.



#### **Immobilizer**

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

## On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



Turn signals/hazards on



VSA engaged (blinking)



Fog lights\* on

**ACC**

ACC\* with LSF\* on



Auto High-Beam System on

**LKAS**

LKAS on



ECON mode on



Brake hold system on

**SPORT**

SPORT mode\* on



Brake hold activated




Safety Support Systems on



## Driver Information Interface (DII)

Consists of several displays that provide you with useful information.

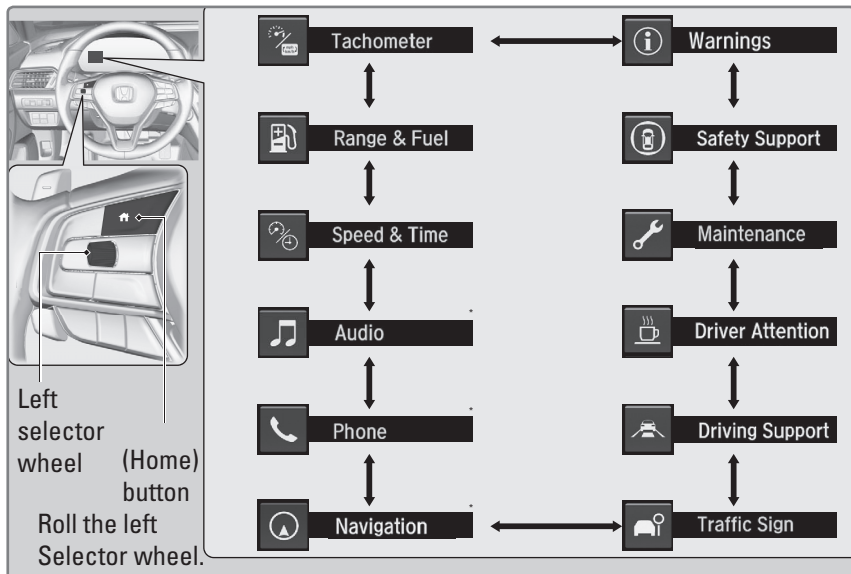

*\*if equipped*