

■ Exterior Lights

Rotating the light switch turns the lights on and off.


OFF: All exterior lights are off.

☞☞: Turn on exterior lights except headlights.

AUTO: Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the vehicle is on. Headlights automatically* come on after the wipers are engaged for a certain time. When you turn the light switch to AUTO, the headlights and other exterior lights will switch on and off automatically depending on the ambient brightness. The headlights come on when you unlock a door in dark areas with the headlight switch in AUTO.

☺☺: Turn on all exterior lights including headlights.

☞☺: Turn fog lights* on or off.

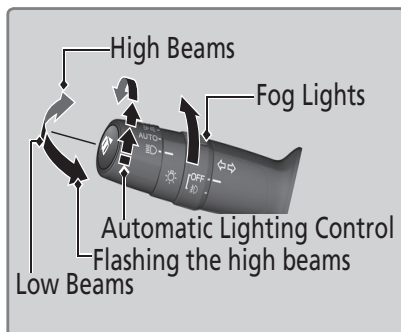

Auto High-Beam System

Using a camera mounted to the inside of the windshield, this system detects light sources ahead of the vehicle. Depending on the light source, the system automatically switches the headlights to high beam for optimal visibility at night.

■ How It Works


When the camera detects lights coming from a preceding or oncoming vehicle, the headlights remain in low beam. When the camera detects no lights coming from a preceding or oncoming vehicle, the headlights change to high beam. The view angle or distance that the camera can detect lights ahead differs depending on conditions, such as the brightness of the lights and the weather.

■ System Operation Conditions

The system operates when:

- The headlight switch is in **AUTO**.
- The lever is in the low beam position.
- The low beams are on and the system recognizes that you are driving at night.
- The vehicle speed is above 25 mph (40 km/h).

**if equipped*

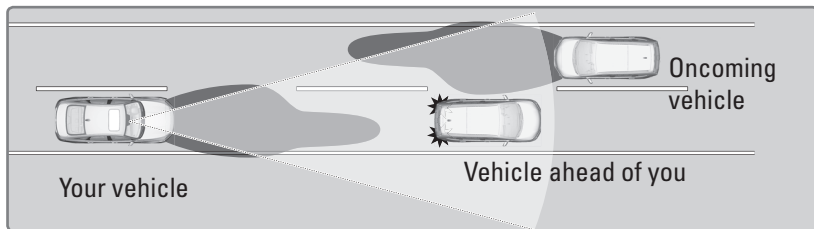

If you do not want the system to be activated at any time when the headlight switch is in **AUTO**, consult a dealer or disable the system.

■ Turning the System On or Off


Make sure the headlight lever is in the low beam position with the switch rotated to the **AUTO** position. The auto high-beam system indicator comes on.

The system is canceled temporarily when you drive continuously at a speed below 15 mph (24 km/h), the vehicle speed drops below 6 mph (10 km/h), the windshield wipers run at high speed for more than a few seconds, or you enter a well lit location.

The high beams come back on once the condition that caused them to turn off no longer exists.

Disabling the system: Pull the light switch lever toward you and hold it for at least 40 seconds. The auto high-beam indicator in the meter will blink twice.

Re-enabling the system: Pull the light switch lever toward you and hold it for at least 30 seconds. The auto high-beam indicator in the meter will blink once.

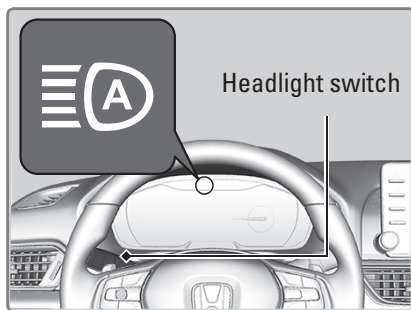

If needed, you can temporarily turn the system off manually. Turn on the high beams by pushing the lever forward until you hear a click or flash the high beams once by pulling the lever toward you. To turn the system back on, pull and hold the lever toward you for a few seconds.

■ Using the Auto High-Beam System

If you find the timing of beam changes inconvenient for driving, change the headlight beams manually.

If the **Some Driver Assist Systems Cannot Operate: Camera Temperature Too High** message appears:

- Use the climate control system to cool down the interior and, if necessary, also use defroster mode with the air flow directed toward the camera.
- Start driving the vehicle to lower the windshield temperature, which cools down the area around the camera.

If the **Auto High-Beam Cannot Operate: Clean Windshield** message appears:

- Park your vehicle in a safe place and clean the windshield. If the message does not disappear after you have cleaned the windshield and driven for a while, have your vehicle checked by a dealer.

For the auto high-beam system to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windshield around the camera clean.
When cleaning the windshield, be careful not to apply the windshield cleanser to the camera lens.
- Do not attach an object, sticker, or film in the area around the camera.
- Do not touch the camera lens.

If the camera receives a strong impact or repairing of the area near the camera is required, consult a dealer.