


## Driver Information Interface (DII)

The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.


### ■ Accessing contents of the Main Display

Press the HOME button, then roll the left selector wheel to scroll to the content you want to see. Press the left selector wheel to see detailed information.

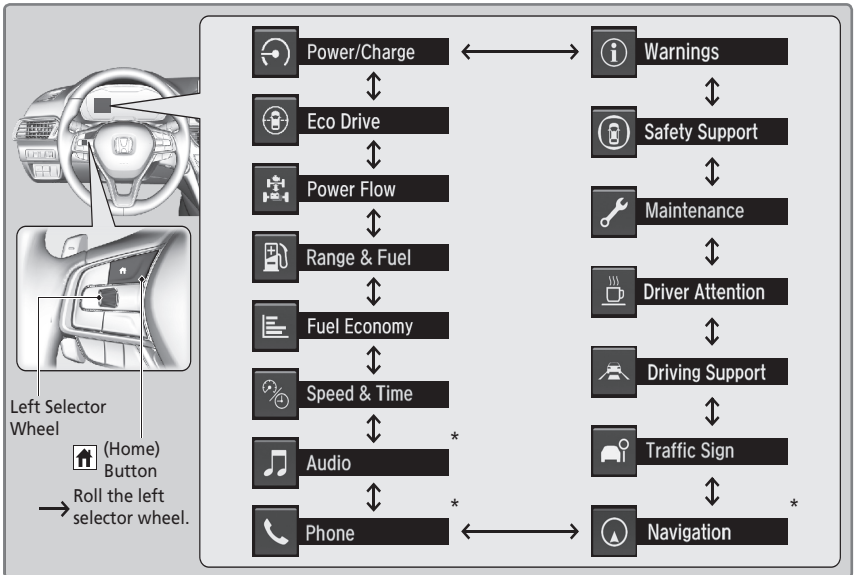

### ■ Sub display

Press the TRIP button to change the display.

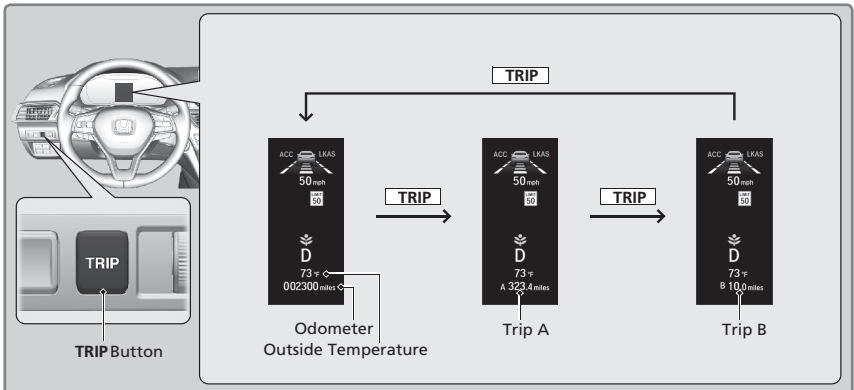

*\*if equipped*