

Driving Position Memory System*

You can store two driver's seat (except for power lumbar) with the driving position memory system. When you unlock and open the driver's door with smart entry remote, the seat adjusts to retracted positions of one of the two preset positions automatically. The seat will move to the stored position when you set the power mode to **ACCESSORY**.

When you enter the vehicle, the driver information interface briefly shows you which remote transmitter you used to unlock the vehicle.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.



The driver's seat moves rearward depending on the set seating position once you:

- Stop the vehicle.
- Put the transmission in P.
- Set the power mode to **VEHICLE OFF**.
- Then open the driver's door.

Once the power mode is in the **ACCESSORY** position, the driver's seat moves forward to the **DRIVER 1** or **2** preset position.


1. Set the power mode to ON. Adjust the driver's seat to the desired position.

2. Press the **SET** button.

You will hear the beeper and the memory button indicator light will blink.

3. Press memory button **1** or **2** within five seconds of pressing the **SET** button. Once the seat position has been memorized, you will hear the beeper twice, and the indicator light on the button you pressed stays on.

Press memory button **1** or **2** to recall a stored position.

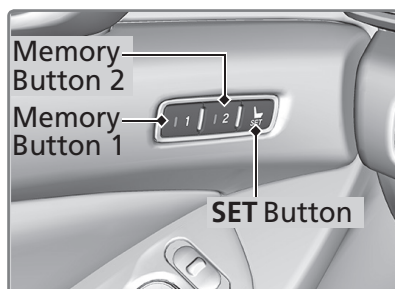

**if equipped*