


## Smart Entry System\*


When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and trunk without handling the transmitter.

### ■ Unlocking/Locking the Doors

**To unlock:** Grab the driver's door handle when the vehicle is off to unlock the driver's door. Grab the front passenger's door handle to unlock all doors.

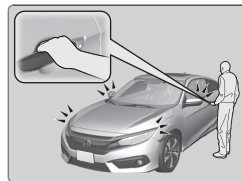


**To lock:** Press the door lock button on either door handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.

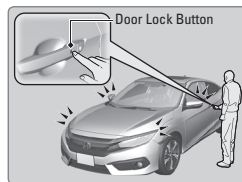

### ■ Unlocking the Trunk

Press the trunk release button to unlock and open the trunk.

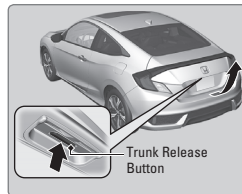

*\*if equipped*

## ■ Customizing Door Lock Settings

Customize the auto door-lock setting to your preference. Begin with the vehicle off.

### Models with information display and continuously variable transmission

1.	<b>Apply the parking brake</b>	
2.	<b>Position the driver's door</b>	
	<i>To enable auto door lock:</i> Move the shift lever out of Park (P), then close the driver's door	<i>To disable auto door lock:</i> Move the shift lever to Park (P), then open the driver's door
3.	<b>Set your preference</b>	
	<b>Models with key ignition</b>	<b>Models with Smart Entry</b>
	a. Set the ignition switch to ON	a. Push ENGINE START/STOP twice (do not press the brake pedal)
	b. Press and hold the lock side of the master door lock switch until you hear a click (~ 5 sec.)	b. Press and hold the lock side of the master door lock switch until you hear a click (~ 5 sec.)
	c. Set the ignition switch to ACC	c. Push ENGINE START/STOP twice (do not press the brake pedal)

### Models with Driver Information Interface

Follow the steps below when the vehicle is stopped and the power mode is ON.

#### Auto Door Lock Choices

With Vehicle Speed

Shift from Park

Off

#### Auto Door Unlock Choices

All Doors When Driver's Door Opens

All Doors When Shifted to Park

All Doors When Ignition Switched Off

Off

- From the home screen, press Settings.
- Press Vehicle.
- Press Door/Window Setup:
  - To customize door lock settings, press Auto Door Lock.
  - To customize door unlock settings, press Auto Door Unlock.
- Choose a setting:
  - The default lock setting is With Vehicle Speed, unless you have a CVT, for which the default is Shift from Park (P).
  - The default unlock setting is All Doors when Driver's Door Opens, unless you have a CVT, for which the default is All Door When Shifted to Park (P).
- Press BACK when you are done.


## ■ Walk Away Auto Lock®\*

When you walk away from the vehicle while carrying the remote transmitter, the doors can automatically lock if the following conditions are met:

- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the hood are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

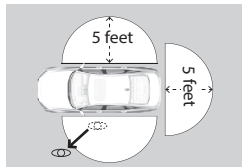

To turn on this feature, follow the steps below:

1. The vehicle must be in Park (P). From the HOME screen, select Settings.
2. Select Vehicle.
3. Select Door/Window Setup.
4. Select Walk Away Auto Lock.
5. Select On.
6. Select BACK to exit the menus.

*\*if equipped*