


Driver Information Interface (DII)


Consists of several displays that provide you with useful information.

Press the Display/Information button
see the current display.

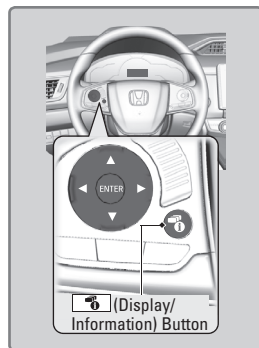

■ Main Displays


Press ◀ or ▶ button to cycle through the displays shown below. Press ENTER to see detailed information.

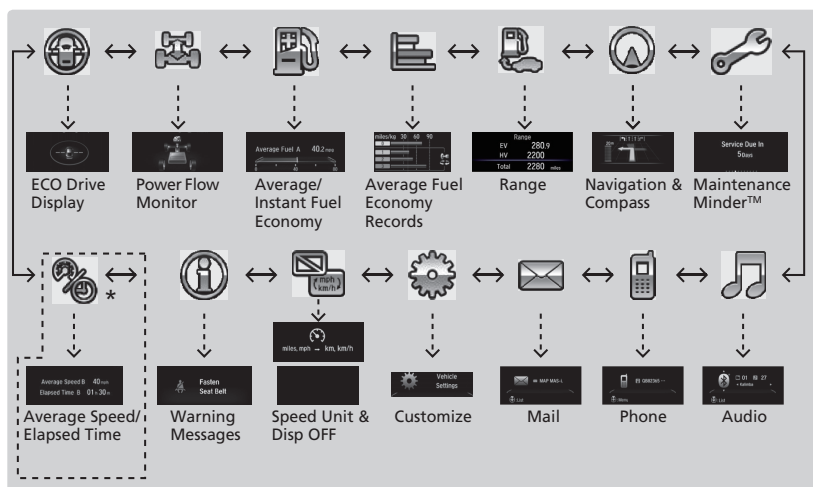

**You can add content using the audio/information screen.*

■ Lower Displays

Press the TRIP button to cycle through the displays shown below:

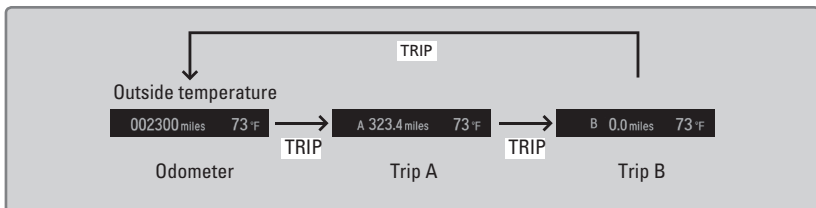


■ Energy Flow Monitor

Displays the energy flow of the motor and engine, indicating the vehicle's power source and whether the battery is being charged.

Energy Flow


Engine on

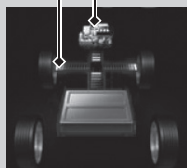

Hybrid (HV)

Power is supplied by the motor and the engine.

Engine off

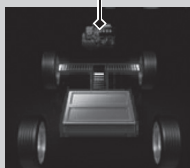

Electric Vehicle (EV)

Power is supplied by the motor.



Engine

Power is being supplied to the wheels and to charge the High Voltage battery.



Regeneration

The motor is charging the High Voltage battery.



Power is supplied only by the engine.



The engine is running and the motor is charging the High Voltage battery.