


VISUAL INDEX


Quickly locate items in the vehicle's interior.

Steering Wheel and Nearby Controls

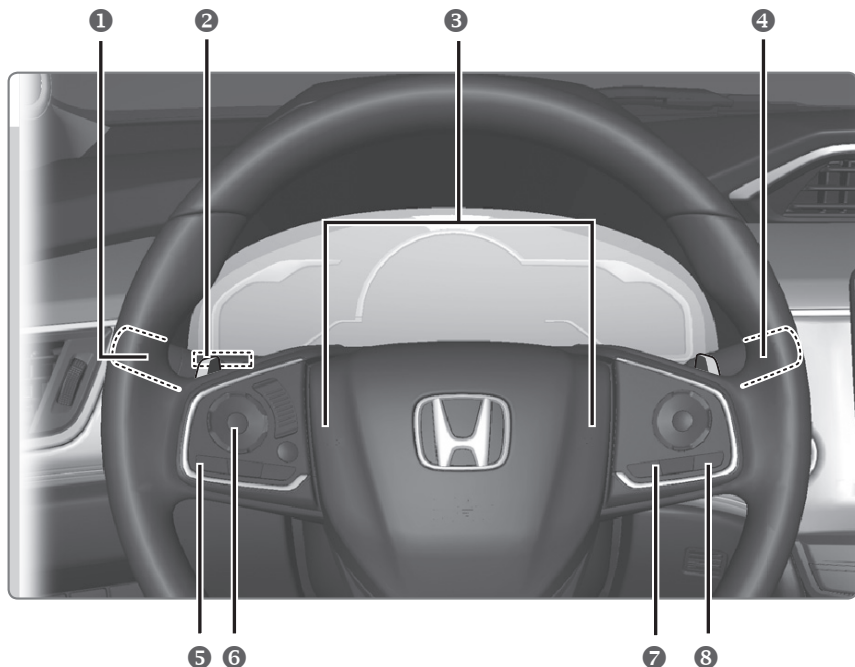

- ① Lights/turn signals
LaneWatch™ button
- ② Brightness control
TRIP button
- ③ Horn
- ④ Wipers/washers
- ⑤ Voice controls
Bluetooth® HandsFreeLink® buttons
- ⑥ Display/Information button
Audio controls
- ⑦ Adaptive Cruise Control (ACC)
with Low Speed Follow (LSF)
buttons
Lane Keep Assist System
(LKAS) button
- ⑧ Interval Button

Steering Wheel and Nearby Controls (continued)

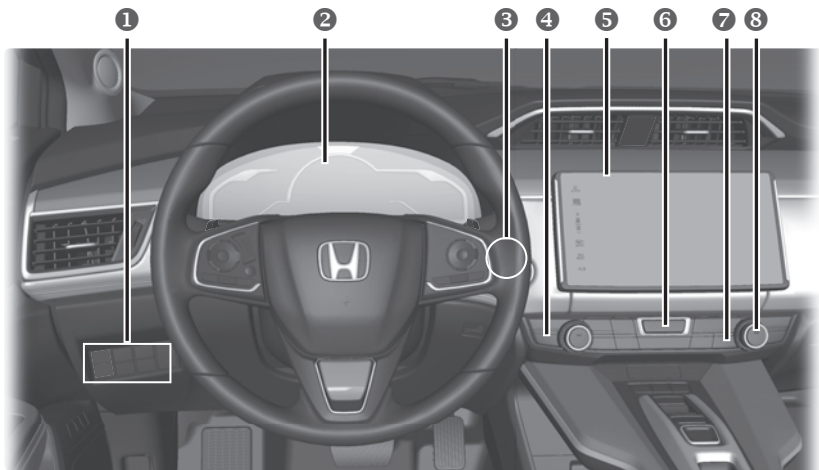

- ① Vehicle Stability Assist (VSA[®]) system OFF button
Road Departure Mitigation (RDM) button
Collision Mitigation Braking System™ (CMBS™) OFF button
Charge lid release button
Acoustic Vehicle Alerting System OFF button*
- ② Instrument panel
Driver information interface
- ③ POWER button
- ④ Seat Heater Buttons
- ⑤ Navigation system
Audio system
- ⑥ Hazard Warning Button
- ⑦ Heated door mirror
Rear window defogger button
- ⑧ Climate control system

* if equipped

Driver Information Interface (DII)


Consists of several displays that provide you with useful information.

Press the Display/Information button
see the current display.



■ Main Displays


Press ◀ or ▶ button to cycle through the displays shown below. Press ENTER to see detailed information.

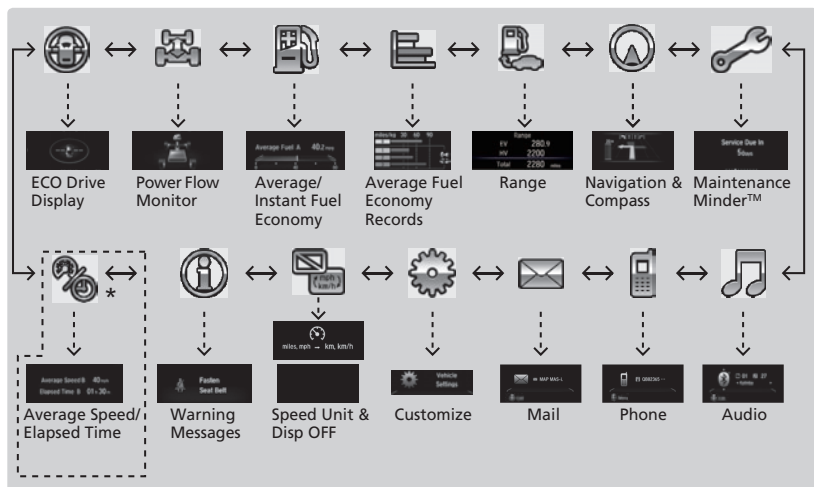

**You can add content using the audio/information screen.*

■ Lower Displays

Press the TRIP button to cycle through the displays shown below:

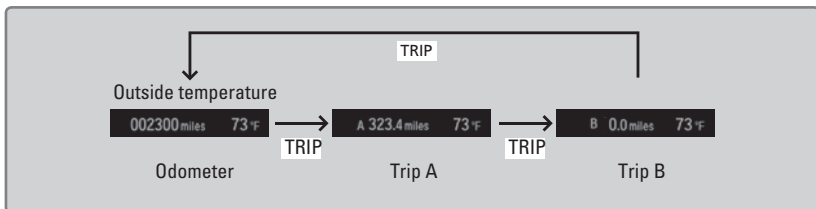


■ Energy Flow Monitor

Displays the energy flow of the motor and engine, indicating the vehicle's power source and whether the battery is being charged.

Energy Flow

Engine on

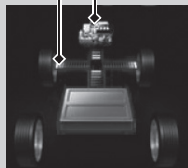

Hybrid (HV)

Power is supplied by the motor and the engine.

Engine off



Electric Vehicle (EV)

Power is supplied by the motor.



Engine

Power is being supplied to the wheels and to charge the High Voltage battery.



Regeneration

The motor is charging the High Voltage battery.



Power is supplied only by the engine.



The engine is running and the motor is charging the High Voltage battery.

■ Audio Remote Controls


You can operate certain functions of the audio system using the steering wheel controls.

i button: Press until the audio screen is displayed in the Driver Information Interface.

+ / - bar: Press the ends of the bar to adjust audio volume.

ENTER button: Make audio selections in the Driver Information Interface.

↵ button: Go back to the previous command or cancel a command.

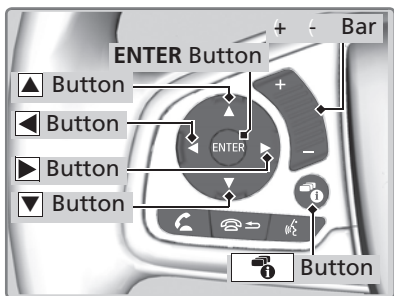

◀ / ▶ buttons: Change presets, tracks, albums, or folders.

From the audio screen in the Driver Information Interface:

FM/AM/SiriusXM® Radio*

Press ◀ or ▶ for the next or previous preset station.

Press and hold ◀ or ▶ to seek the next or previous strong station.

iPod®/USB/Bluetooth® Audio

Press ◀ or ▶ for the next or previous track.

Press and hold ◀ or ▶ for the next or previous folder (USB).

Pandora®

Press ▶ for the next song.

Press and hold ◀ or ▶ for the previous or next station.

**if equipped*

BLUETOOTH® HANDSFREELINK® (HFL)

Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit automobiles.honda.com/handsfreelink (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function. Voice commands are also available.


■ HFL Controls

Use the controls to enter information and make selections.

Hang-Up/Back button: End or decline a call, go back to the previous command, or cancel an operation.

Pick-Up button: Go to the phone menu or answer an incoming call.

Talk button: Access the Voice Portal.

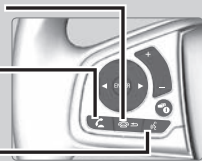


Phone icon button: Select the phone screen icon, then press ENTER to view the phone menu in the Driver Information Interface.

▲ / ▼ buttons: Select an item in the phone menu in the Driver Information Interface.

ENTER button: Call a number listed in Speed Dial, Call History, or Phonebook menus in the driver information interface.

■ **Steering Wheel Controls**

Use the steering wheel controls to say voice commands.


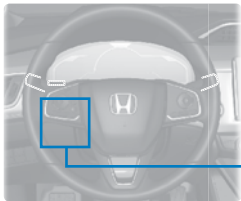


Back button: Press to cancel a command or operation.

Talk button: Press to say navigation commands.

Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of you.

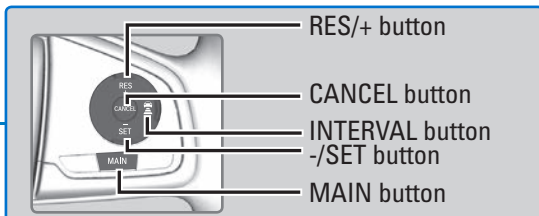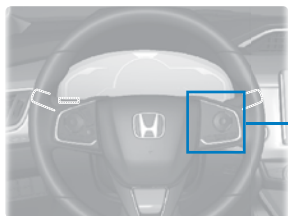

■ Activating and Setting the Vehicle Speed

1. Press the MAIN button. The ACC indicator appears.
2. Accelerate to the desired speed.
Above 25 mph (40 km/h): Take your foot off the pedal and press the -/SET button to set the speed

Below 25 mph (40 km/h) (Low Speed Follow):


Press the -/SET button to set the speed at 25 mph (40 km/h) regardless of current speed.



■ Adjusting the Vehicle Speed


Press the RES/+ button to increase speed, or the -/SET button to decrease speed.

Each time you press the switch up or down, the vehicle speed is increased or decreased by about 1 mph or 1 km/h.

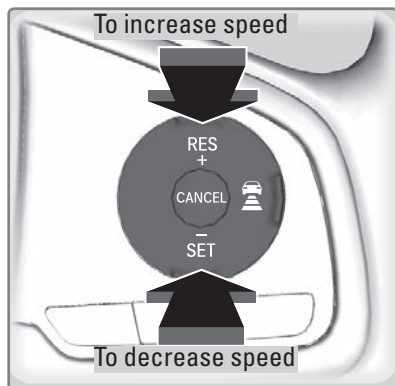

■ Adjusting the Following Interval

Press the Interval button to change the following interval. Each time you press the button, the following-interval setting cycles through short, middle, long, and extra long.

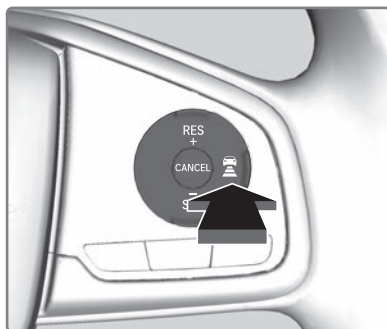

Interval	Short	Middle	Long	Extra Long
Approx. Gap (seconds)	1.1	1.5	2.1	2.8

■ Switching to Standard Cruise Control

- Press and hold the Interval button.
- Cruise Mode Selected appears in the Driver Information Interface. Press and hold the Interval button again to switch back to ACC. ACC Mode Selected appears.


■ When in Operation

If a vehicle is detected ahead of you when ACC is turned on, the system maintains, accelerates, or decelerates your vehicle's set speed to keep the vehicle's set following interval from the vehicle ahead.

If a vehicle detected ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beep sounds and BRAKE appears on the Driver Information Interface to alert you.

When a vehicle detected ahead is within range and stops, your vehicle also stops. The Stopped message appears on the Driver Information Interface.

When the vehicle ahead of you starts again, the vehicle icon on the Driver Information Interface blinks. Press the RES/+ button or the -/SET button, or press the accelerator pedal to resume the prior set speed.

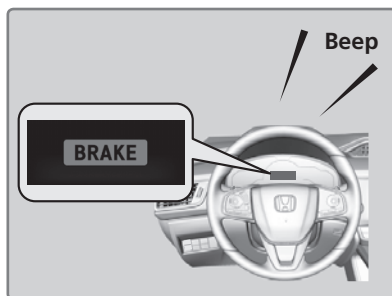

■ Canceling ACC

Press the CANCEL or MAIN buttons, or press the brake pedal.

Certain conditions may cause ACC to cancel automatically. When this happens, a message appears on Driver Information Interface.



After adaptive cruise control has been canceled, you can still resume the prior set speed by pressing the RES/+ button.

Press the MAIN button to turn the system off.

WARNING

Exiting a vehicle that has been stopped while the ACC with LSF system is operating can result in the vehicle moving without operator control.

A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with LSF.

WARNING

ACC with LSF has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you.

Always be prepared to apply the brake pedal when conditions require.

WARNING

Improper use of ACC with LSF can lead to a crash.

Use ACC with LSF only when driving on expressways or freeways and in good weather conditions.

Lane Keeping Assist System (LKAS)



Provides steering input to help keep the vehicle in the middle of a detected lane and visual and tactile alerts if the vehicle is detected drifting out of its lane while driving between 45–90 mph (72–145 km/h).

If your vehicle is getting too close to detected left or right side lane markings without a turn signal activated, a message appears on the Driver Information Interface, and the steering wheel vibrates. Steering torque is also applied to help keep your vehicle within your driving lane.



■ Turning the System On or Off

1. Press the MAIN button. LKAS appears in the Driver Information Interface.
2. Press the LKAS button. Lane outlines appear in the Driver Information Interface. Dotted lane lines turn solid when the system starts operating.
3. Press the MAIN button or the LKAS button to turn the system off.

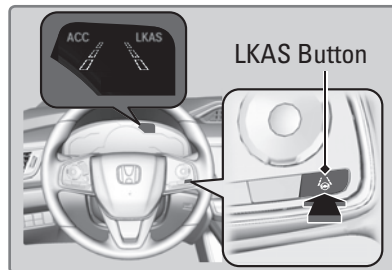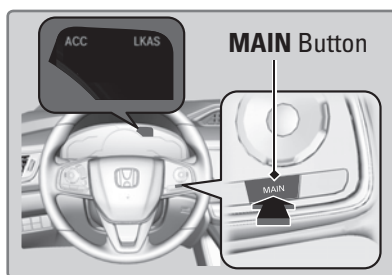

Important Safety Reminder

LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.