

Adjusting the Third-Row Passenger's Seats

Pull up the right strap to change the angle of the right-hand seat back or the left strap for the left and center seat backs.

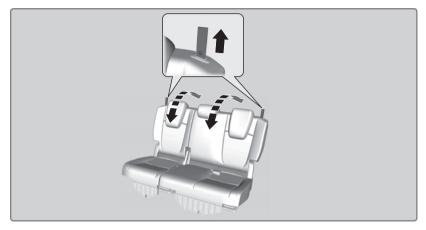

Third-Row Seat Access

Pull up on the walk-in lever or pull the release strap to tilt the second-row outer seat forward. Slide the whole seat forward.

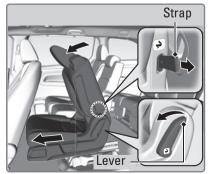


Storing the One-Motion Third-Row Magic Seat^{®*}

You can store the third-row seats to create a flat cargo area.

- Release the center seat belt detachable anchor (insert a key into the slot on the side of the anchor buckle) and retract the seat belt into the holder on the ceiling.
- 2. Lower the head restraints to their lowest positions.
- 3. Pull one of the straps to release the leg lock. Keep pulling to tuck the seats and straps into the cargo area.

To reinstall the seats: Grab the handle, pull up the folded seat and pivot it forward. The front of the seat automatically locks into place. Pull the strap to return the seat-back to its upright position.

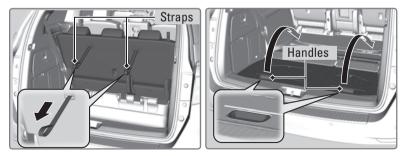

*if equipped