


Seat Heaters and Ventilation*

Quickly warm or ventilate the front seats when the vehicle is on. An appropriate indicator appears for each setting.

Press the appropriate button on the front console to cycle through the settings.

After a period of time, the heat setting will reduce until the heater shuts off.

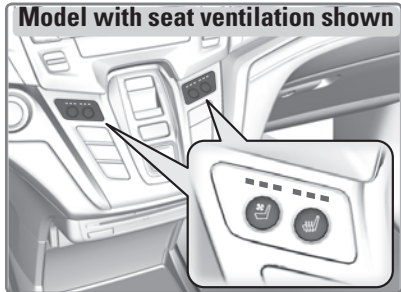

**if equipped*