

■ Customizing Door Lock/Unlock Settings

Customize the auto door-lock setting to your preference. Begin with the vehicle off.

Models with color audio

Begin with the vehicle stopped and the power mode set to ON. Use the ▲ / ▼ buttons to make selections, then press Enter.

1. Press Home on the steering wheel.
2. Select Settings.
3. Select Vehicle Customization.
4. Select Door/Window Setup.
5. Select Auto Door Lock or Auto Door Unlock
6. Select an option.
 - The default for Auto Door Lock is With Vehicle Speed.
 - The default for Auto Door Unlock is All Doors When Driver's Door Opens.

