

Models with Display Audio


Rear Entertainment System (RES)*

Rear passengers can enjoy a different audio or entertainment source than front passengers. The system supports DVD and Blue-ray™ discs.

■ Starting the System

Use the touchscreen to enable the rear entertainment system.

1. From the Home screen, select Rear Entertainment.
2. Select Rear to turn the system on.
3. Press the Home button on the remote control to display the rear entertainment Home screen.
4. Use the remote control to select the rear-entertainment input source app (such as USB or HDMI) for your media.
Or, use the Rear Apps/Now Playing button on the touchscreen to control the rear system.

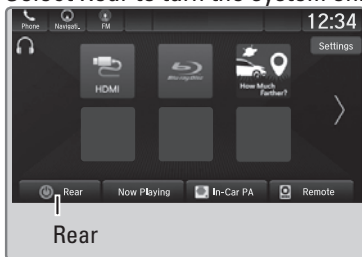


■ System Components

Wireless headphones

Your vehicle comes with two wireless headphones.

Press the power button on the right earpiece to turn on the headphones.

Turn the dial on the right earpiece to adjust the volume.

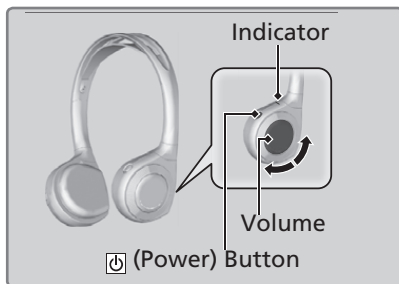

Headphone connectors


Both sides of the third-row seats have jacks for wired headphones. Each connector has its own volume control.

**if equipped*




HDMI™ port

The rear of the center console has an HDMI port for connecting compatible devices, including media players and game devices.

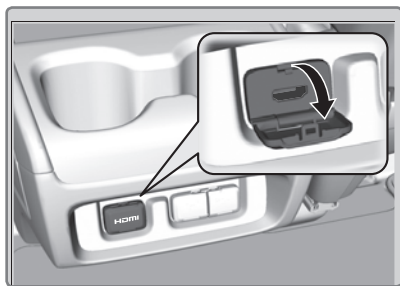

Overhead screen

Pull down the screen to one of the two detents.

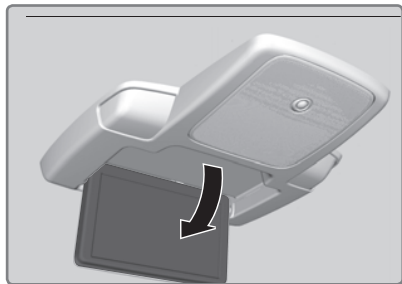

NOTICE

This vehicle's overhead mounted display includes mercury-containing components. Upon removal or replacement, please reuse, recycle, or dispose of as hazardous waste.


■ System Apps

In addition to apps for source inputs, the rear entertainment system can access the front USB port. In addition the home screen has two added apps:

- **How Much Farther?:** Shows the time and distance to the destination set in the navigation system.
- **Media Servers:** Plays streaming audio or video from a personal device connected via Wi-Fi.

■ Playing a Disc

Start the system, then insert a DVD or Blue-ray disc into the slot. The disc will auto play on the rear entertainment screen.

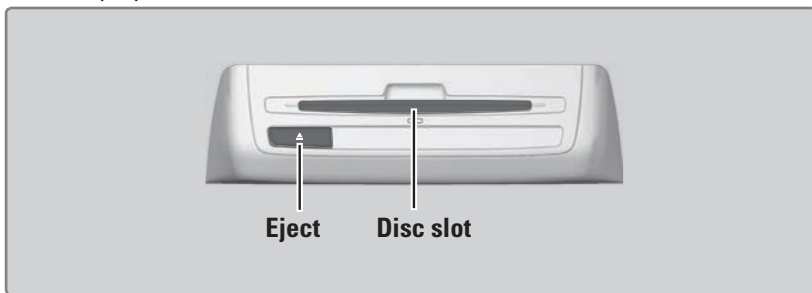

NOTICE

Do not use discs with adhesive labels or insert a damaged disc. Inserting these types of discs may cause them to get stuck or damage the audio unit.

Use the remote control to manage the system.

