 


## Adaptive Cruise Control (ACC)\*<sup>1</sup> with Low Speed Follow\*<sup>1</sup>

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours. When the vehicle ahead changes speed, ACC senses the change and accelerates or decelerates to maintain a set interval. and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator. When ACC with Low Speed Follow slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

### When to use

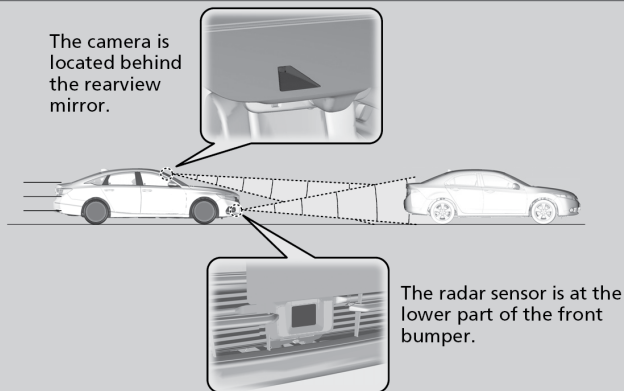

- Vehicle speed for ACC with LSF: **A vehicle is detected ahead within ACC with LSF range** – ACC with LSF operates at speeds up to 90 mph (145 km/h).  
**No vehicle is detected within ACC with LSF range** – ACC with LSF operates at the speed of 25 mph (40 km/h) or above.
- Gear position for ACC with LSF: In **D** or **S**\*.

 
 
\* Not available on all models

*\*1 - If equipped*

## ■ Activating and Setting the Vehicle Speed

1. Press the **MAIN** button. The ACC indicator appears in the multi-information display.
2. Accelerate to the desired speed (above 25 mph/40 km/h). Take your foot off the pedal and press the **DECEL/SET** button to set the speed.

■ Press the **MAIN** button on the steering wheel.

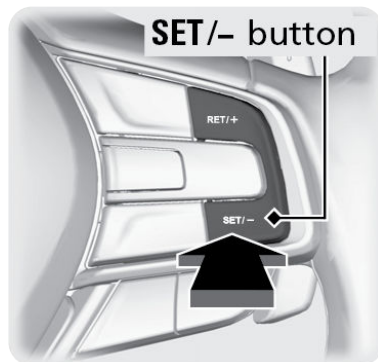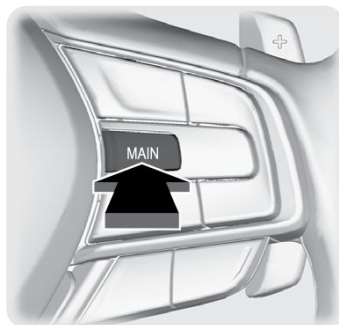


Press and release

### ■ Adjusting the Vehicle Speed

 Press the RES/+ button to increase speed or the SET/- button to decrease speed. Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the button pressed, the vehicle speed increases or decreases by 5 mph or 5 km/h until you release it.


To increase speed

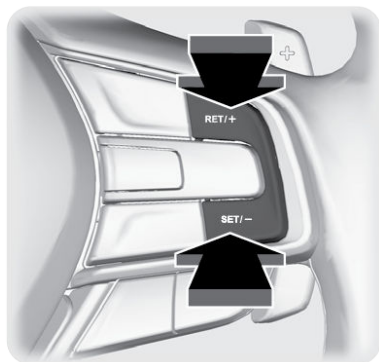

To decrease speed

### ■ Adjusting the Vehicle Distance

 
Press the Interval button to change the following interval. Each time you press the button, the setting cycles through extra long, long, middle, and short.

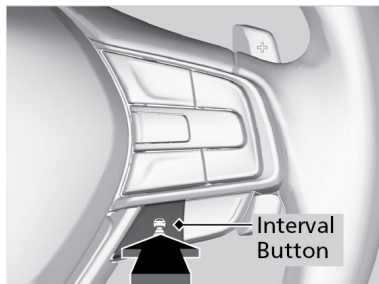

### ■ During Operation

If a vehicle is detected ahead of you when ACC is turned on, the system maintains, accelerates, or decelerates your vehicle's set speed to keep the vehicle's set following interval from the vehicle ahead.

 If a vehicle detected ahead of you slows down abruptly, or if another

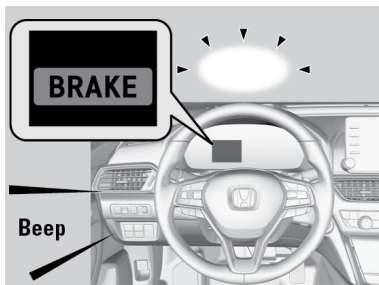

vehicle cuts in front of you, a beep sounds and BRAKE appears on the driver information interface to alert you .

### ⚠ WARNING

ACC has limited braking capability.

 
When your vehicle speed drops below 22 mph (35 km/h), ACC will automatically cancel and no longer will apply your vehicle's brakes.

Always be prepared to apply the brake pedal when conditions require.

### ■ Canceling ACC

You can press the CANCEL button, MAIN button or the brake pedal. The ACC with Low Speed Follow indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, appears on the driver information interface.

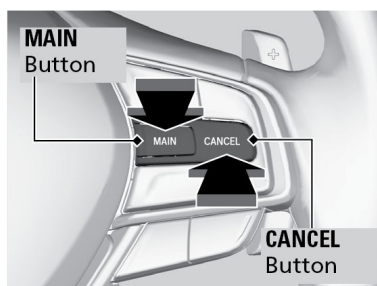

### ⚠ WARNING

Improper use of ACC can lead to a crash.

Use ACC only when traveling on open highways in good weather.

### ■ Switching to Standard Cruise Control

Press and hold the Interval button for one second.

**Cruise Mode Selected** appears in the driver information interface for two seconds, and then the mode switches to Cruise. Press and hold the interval button again to switch back to ACC .

**ACC Mode Selected** appears on the driver information interface display for two seconds.

