


INSTRUMENT PANEL

Head-Up Display*1

Shows the current mode for ACC with LSF, tachometer, traffic sign recognition system, gear position indicator, or turn-by-turn directions along with the vehicle

**1 - If equipped*

speed. You can choose which item to be displayed using the HUD button on the steering wheel. They are displayed when the power mode is in ON.

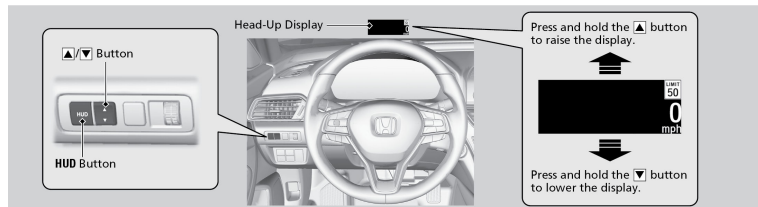

To turn the head-up display on and off: Press the HUD button on the driver side control panel.

The display can be moved up and down to come level with your eyes.

To raise or lower the head-up display: Press and hold the up or down button until the desired position is reached.