


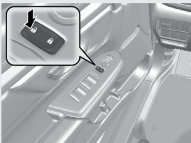
## ■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and door unlock settings to your preference. Begin with the vehicle off.

Steps	Drive Lock Mode <sup>*2</sup>	Off
1	Apply the parking brake. Put the transmission into <b>P</b> .	
2	Close the driver's door.	Open the driver's door.
3	Turn the ignition switch to ON <b>II</b> <sup>*1</sup> .	
4	Take the transmission out of <b>P</b> with the brake pedal depressed.	—
5	Press and hold the right side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice. 	Press and hold the right side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear one click.
6	Put the transmission into <b>P</b> .	—
7	Turn the ignition switch to ACCESSORY <b>I</b> <sup>*1</sup> within 20 seconds. ► Customization is completed.	

\*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

\*2: Default setting

Steps	Driver's Door Open Mode <sup>*2</sup>	Park Unlock Mode	Off
1	Apply the parking brake. Put the transmission into <b>P</b> .		
2	Close the driver's door.		Open the driver's door.
3	Turn the ignition switch to ON <b>II</b> <sup>*1</sup> .		
4	Take the transmission out of <b>P</b> with the brake pedal depressed.	—	
5	Press and hold the left side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice. 		
6	Put the transmission into <b>P</b> .	—	
7	Turn the ignition switch to ACCESSORY <b>I</b> <sup>*1</sup> within 20 seconds. ► Customization is completed.		

\*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

\*2: Default setting

### Models with Color Audio

1. Select **Vehicle Settings**.
2. Select **Door Setup**.
3. Select **Auto Door Lock** or **Auto Door Unlock** to customize.

### Models with Display Audio

1. From the HOME screen, select **Settings**.
2. Select **System**.

## VEHICLE CONTROLS

---

3. Select **Vehicle**.
4. Select **Door/Window Setup** **Door Setup**.
5. Select **Auto Door Lock** or **Auto Door Unlock** to customize.