

### Lane Keeping Assist System (LKAS)\*1

Provides steering input to help keep the vehicle in the middle of a detected lane and provides audible and visual alerts if the vehicle is detected drifting out of its lane while driving between 45–90 mph (72–145 km/h).

*\*1 - If equipped*

**Warning Only** is selected on **Road Departure Mitigation Setting**


Beeps and a warning display alert you that the vehicle is drifting out of a detected lane.

**Normal or Wide** is selected on **Road Departure Mitigation Setting**

Rapid vibrations on the steering wheel and a warning display alert you that the vehicle is drifting out of a detected lane.



■ Front Sensor Camera  
Monitors the lane lines

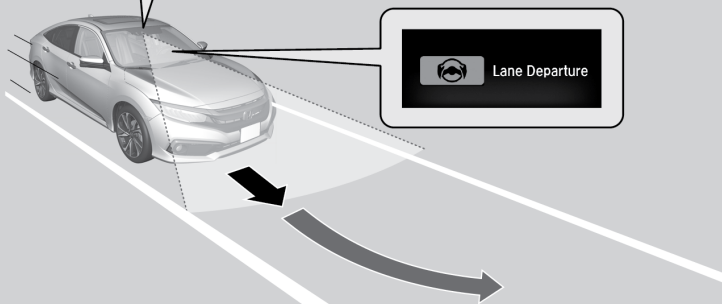

When you operate the turn signals to change lanes, the system is suspended, and resumes after the signals are off.

If you make a lane change without operating the turn signals, the LKAS alerts activate, and torque is applied to the steering.

## ■ Turning the System On or Off

1. Press the MAIN button. LKAS appears in the driver information interface.
2. Press the LKAS button. Lane outlines appear in the driver information interface. Dotted lane lines turn solid when the system activates.
3. Press the MAIN button or the LKAS button to turn the system off.

## ■ Important Safety Reminder

LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.