

### Smart Entry System\*1

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors, and the tailgate without handling the transmitter.

*\*1 - If equipped*

### ■ Unlocking/Locking the Doors

**To unlock:** Grab the driver's door handle to unlock the driver's door. Grab the front passenger's door handle to unlock all the doors and the tailgate. You can customize this feature's behavior.

**To lock:** Press the door lock button on the front door or the tailgate.



### ■ Walk Away Auto Lock®

When you walk away from the vehicle while carrying the remote transmitter, the doors and tailgate can automatically lock if the following conditions are met:


- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the tailgate are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps:

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

The auto lock function is set to OFF as the factory default setting. The auto lock function can be set to ON using the

multi-information display. If you set the auto lock function to ON using the multi-information display, only the remote transmitter that was used to

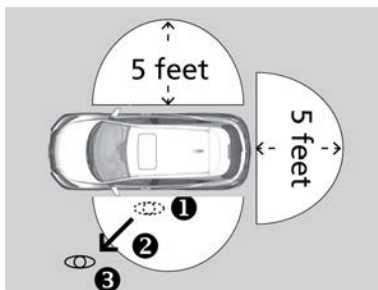


unlock the driver's door prior to the setting change can activate auto lock. To turn on this feature, follow the steps below:

1. From the HOME screen, select Settings.
2. Select Door Setup.
3. Select Walk Away Auto Lock.
4. Select SEL/RESET.


## ■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and door unlock settings to your preference. Begin with the vehicle off.

Steps	Drive Lock Mode <sup>*1</sup>	Off
1	Apply the parking brake.	
2	The driver's door must be closed at this stage.	Open the driver's door.
3	Turn the ignition switch to ON <sup>*2</sup> .	
4	Press and hold the front of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.	
		
5	Turn the ignition switch to OFF within 20 seconds <sup>*2</sup> . Customization is completed. All doors unlock and all turn signals blink three times.	

<sup>\*1</sup> Default setting

<sup>\*2</sup> Models with the smart entry system have an ENGINE START/STOP button instead of an ignition switch.

Steps	Driver Door Open Unlock Mode <sup>*1</sup>	Park Unlock Mode	Off
1	Apply the parking brake. Move the shift lever out of P with the brake pedal depressed.	Apply the parking brake. Move the shift lever to P.	Apply the parking brake. Move the shift lever to P.
2	The driver's door must be closed at this stage.		Open the driver's door.
3	Turn the ignition switch to ON <sup>*2</sup> .		
4	Press and hold the rear of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.		
			
5	Turn the ignition switch to OFF within 20 seconds <sup>*2</sup> . Customization is completed. All doors lock and all turn signals blink three times.		

<sup>\*1</sup> Default setting

<sup>\*2</sup> Models with the smart entry system have an ENGINE START/STOP button instead of an ignition switch.

# HANDLING THE UNEXPECTED

Learn about what to do in critical or emergency situations.

## Smart Entry System Battery Strength

If the battery life in your remote transmitter is weak, a message appears in the display with information on how to start the engine.

1. Touch the back of the remote transmitter to the ENGINE START/STOP button while the indicator is flashing.
2. With the brake pedal pressed, press the ENGINE START/STOP button within 10 seconds.



When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and the tailgate without handling the transmitter.