


## Wiper Operation

The windshield wipers and washers can be used when the vehicle is on.

### ■ Front Wipers

Move the wiper lever up or down to the desired position.

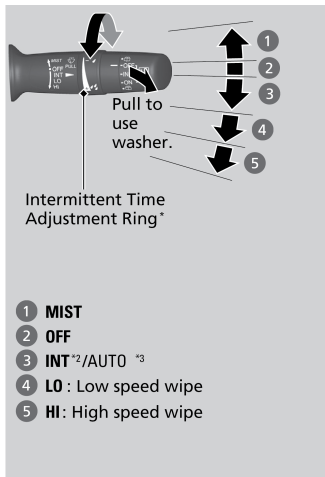

\*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

\*2: Models without automatic intermittent wipers.

\*3: Models with automatic intermittent wipers.

\* Not available on all models

### ■ Headlight Integration with Wipers


When the headlights are in the **AUTO** position, they automatically turn on when the front wipers operate several times within a certain interval. The

headlights turn off shortly after the wipers are turned off or if there is enough ambient light.

### ■ Intermittent (INT) Wipers\*1

When you move the lever to the INT position, the wipers operate based on the delay adjustment.

Rotate the adjustment ring to adjust the wiper delay.

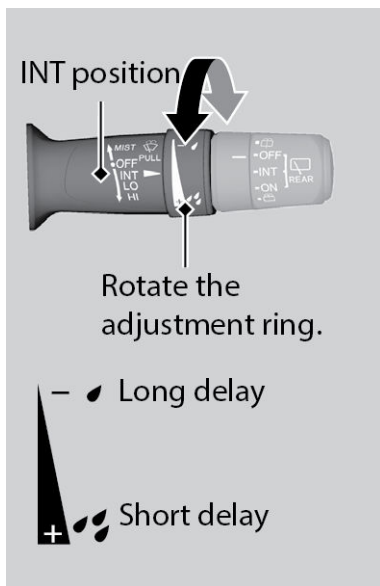

*\*1 - If equipped*