


Front Seat Heaters and Ventilation^{*1}

Press the seat heater or the seat ventilation^{*1} button to cycle through settings. The appropriate indicator (red for heat, blue for ventilation) appears for each setting.

**1 - If equipped*

VEHICLE CONTROLS

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

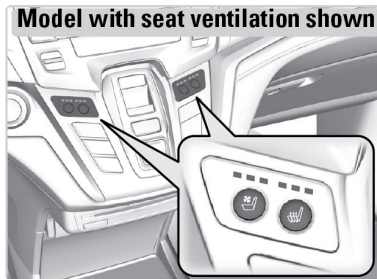

⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.