

## Auto Idle Stop\*1

To help maximize fuel economy, the engine automatically stops when the vehicle comes to a stop, depending on environmental and vehicle operating conditions. The indicator (green) comes on at this time.

### ■ Activating Auto Idle Stop

When the vehicle stops with the gear position in Drive (D) and the brake pedal is pressed, the engine turns off and the auto idle stop indicator appears if conditions permit.

When you release the brake pedal, turn the steering wheel, or press the accelerator pedal, the engine restarts and the vehicle begins to move.

Auto idle stop may not activate (or the engine may automatically restart) when the vehicle is stopped by braking suddenly, the vehicle comes to a stop again before the vehicle speed reaches 3 mph (5 km/h) after the engine starts, the 12V battery is low, or when other conditions are met. For a complete list of conditions, see your Owner's Manual at [www.owners.honda.com](http://www.owners.honda.com) when the driver's seat belt is unfastened, the



*\*1 - If equipped*

vehicle is stopped on a steep hill, the windshield defroster is on, and other conditions..

### ■ Turning the System On or Off

Press the Auto Idle Stop Off button to turn the system off. The amber auto idle stop indicator comes on. Press the button again to turn it on. The Auto Idle Stop system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.



Auto Idle Stop System Indicator (Amber)

