


## VEHICLE CONTROLS

---

### Customized Features

Use the Settings menu to customize certain features when the vehicle is stopped and the power mode is ON

## Models with Display Audio

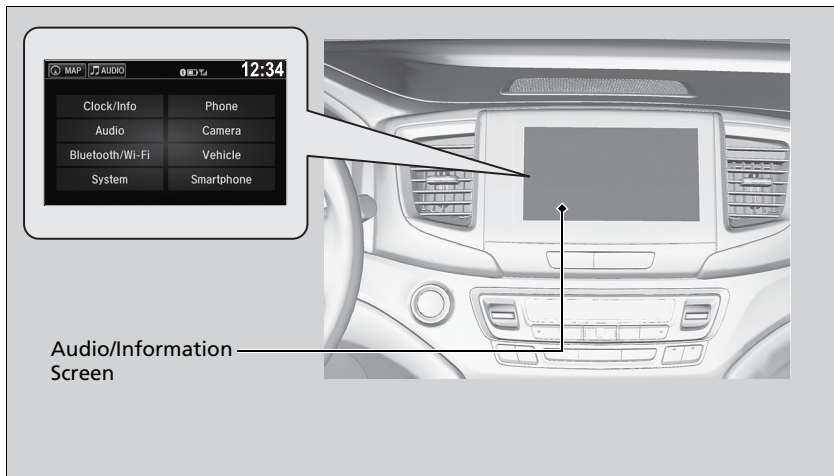

- Select **Settings**, then select a setting item.

### Setting the Clock

On vehicles without navigation, use the interface dial to adjust the time in the clock display. On vehicles with navigation, the time is automatically set using GPS signals.

1. Press the **SETTINGS** button.
2. Select **Clock Settings**.
3. Select **Clock Adjustment**.
4. Tilt the interface dial to choose the item you wish to change. Rotate the interface dial to change the value. Press the interface dial to exit the screen.
5. Press the **BACK** button to exit out of the menus.