


Driving Position Memory System*1

You can store two driver's seat positions with the driving position memory system (except for power lumbar).


When the driver's door is unlocked, and you open the driver's door with a remote transmitter, or smart entry system, the seat adjusts to retracted positions of one of the two preset positions automatically.

The seat will move to the stored position when you set the power mode to ACCESSORY.

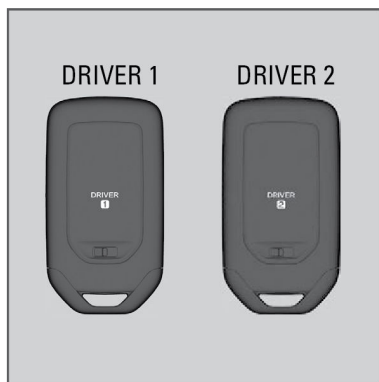

■ Storing a Position in Memory

1. Set the power mode to ON. Adjust the driver's seat to the desired position.
2. Press the **SET** button.
You will hear a beep, and the memory button indicator light will blink.
3. Press and hold memory button 1 or 2 within 5 seconds of pressing the **SET** button.


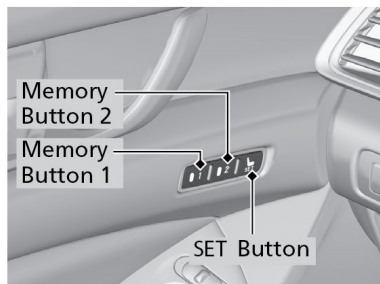


You will hear two beeps, and the indicator light on the button you pressed stays on once the seat, the steering wheel, and the outside mirror positions have been memorized.

**1 - If equipped*

Front Seat Heaters*¹ and Ventilation*¹

Press the seat heater or the seat ventilation button to cycle through settings. The appropriate indicator (red for heat, blue for ventilation) appears for each setting.

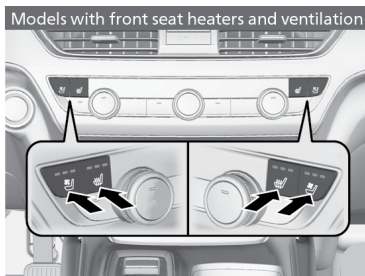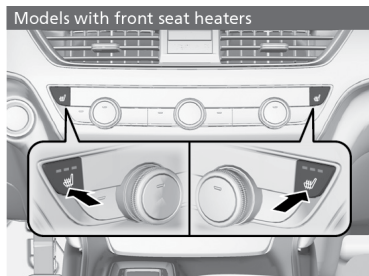

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

After a certain period of time, the strength setting for the seat heaters will automatically be reduced by one level at a time until the seat heater shuts off. The elapsed time varies according to the interior environment.

There is no heater in the rear center seating position.

WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**4 - Canadian models only, if equipped*


**1 - If equipped*

Rear Seat Heaters^{*1}

The power mode must be in ON to use the seat heaters.

Press the seat heater button:

- Once - The HI setting (three indicators on)
- Twice - The Mid setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

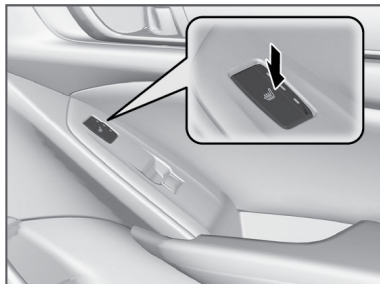

Do not use the seat heaters even in LO when the engine is off. Under such conditions, the battery may be weakened, making the engine difficult to start.

After a certain period of time, the strength setting for the seat heaters will automatically be reduced by one level at a time until the seat heater shuts off. The elapsed time varies according to the interior environment.

WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**1 - If equipped*