


Parking Sensor System*1

The corner and center sensors monitor obstacles around your vehicle. The beeper, audio/information screen, and driver information interface let you know the approximate distance between your vehicle and the obstacle.

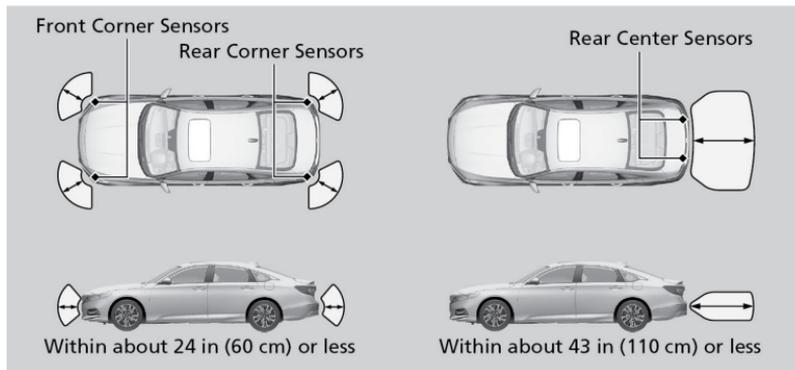

■ Turning the System On or Off

With the power mode in ON, press the parking sensor system button to turn on or off the system. The indicator in the button comes on when the system is on.

Even when the system is on, always confirm if there is no obstacle near your vehicle before parking.



⚠ WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that (P) is shown on the shift position indicator.

*1 - If equipped