

AUDIO AND CONNECTIVITY

How to operate the vehicle's audio system.

Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.

 
Note: When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen.

■ USB Port

Models with Color Audio

Install the device USB connector or the USB flash drive to the USB port.

The USB port (1.0A) is for playing audio files on a USB flash drive and connecting a cellular phone and charging device.

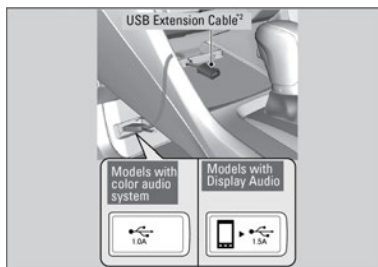

*2: U.S. models only

 
Models with Display Audio

The USB port (1.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay[®] or Android Auto[™]

In the console compartment^{*1}

The USB port (1.0A) is for playing audio files on the USB flash drive and connecting a cellular phone and charging device.

Move the removable beverage holder tray rearward.

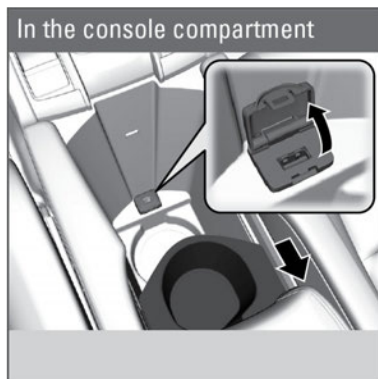


**1 - If equipped*

Tip: To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay® or a USB cable certified by USB-IF to be compliant with USB 2.0 Standard for Android Auto™.

■ Accessory Power Socket

There is an accessory power socket in the front console panel. It can be used when the vehicle is ON or in ACCESSORY Mode.

 Open the cover to use it.

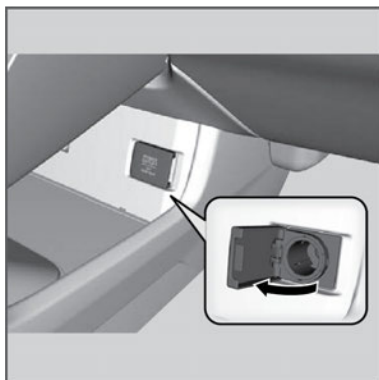

NOTICE

Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Adjusting the Sound

Models with Color Audio

Press the sound button and rotate the selector knob to scroll through the following choices.

- Bass
- Middle
- Treble
- Fader
- Balance
- Speed-sensitive Volume Compensation



Models with Display Audio

1. Press the Sound button.
2. Select Menu
3. Select Sound.

 
Select a tab from the following choices:



- BAS-MID-TRE: Bass, Middle, Treble
- FAD-BAL^{*1}/FAD-BAL-SUBW^{*1}: Fader, Balance, Subwoofer^{*1}
- SVC^{*1}/SVC-Neural^{*1}: Speed Volume Compensation, DTS Neural SurroundTM^{*1}

■ Audio Remote Controls

Models with Color Audio

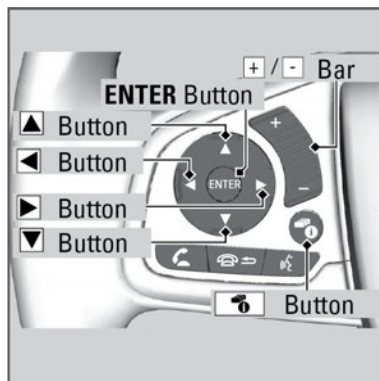


Volume Buttons (+/-): Press to adjust the volume.

Up/Down Arrows: Press to cycle through the available audio modes.

**1 - If equipped*

 Models with Display Audio

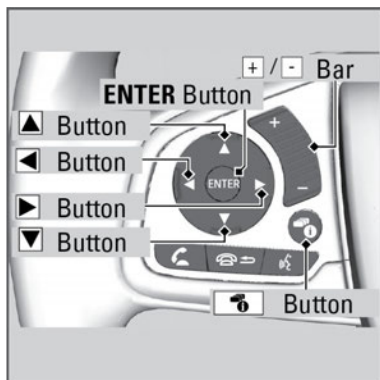


Volume Buttons (+/-): Press to adjust the volume.

Up/Down Arrows: Press to cycle through the available audio modes.


Audio/Information Screen

 Displays each mode status and wallpaper. From this screen, you can go to various setup options.

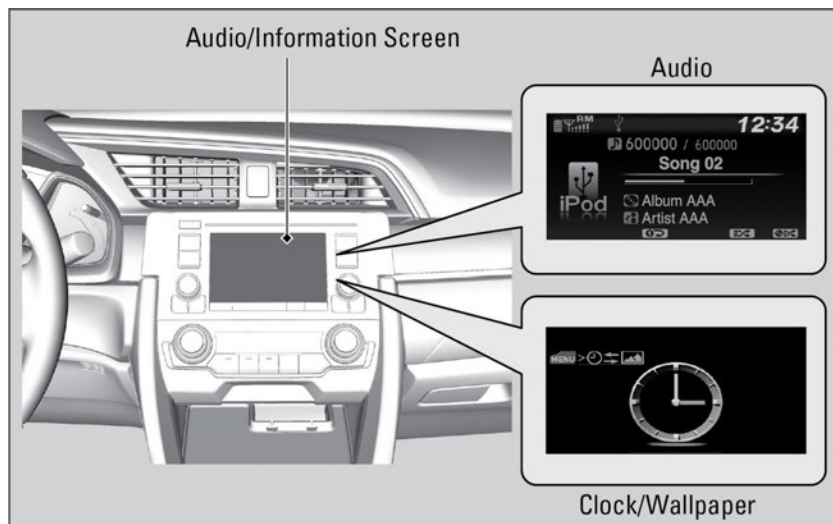

■ Switching the Display

 Press the NAV, PHONE, INFO and AUDIO buttons to go to the corresponding display.

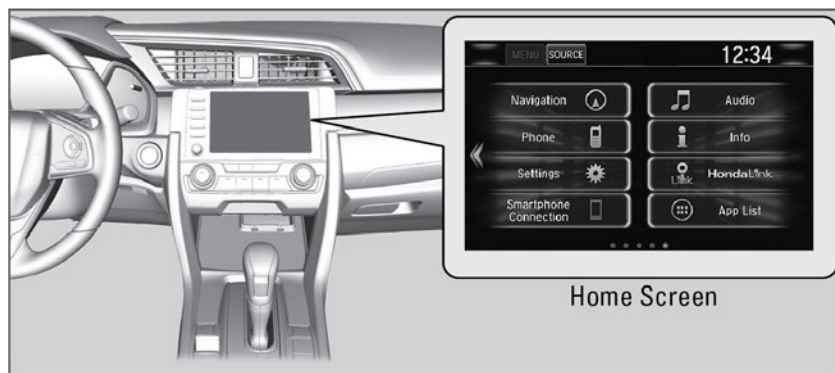

Color Audio System

 
Use the buttons to control the color audio system.



1. Day/Night Button
2. Radio Button
3. Media Button
4. Volume/Power Knob
5. Seek/Skip Button
6. Seek/Skip Button
7. Audio Information Screen
8. Phone Button
9. Sound Button
10. Selector Knob
11. Menu/Clock Button
12. Back Button
13. Preset Buttons (1-6)

Display Audio System

Use simple gestures-including touching, swiping and scrolling-to operate certain audio functions.

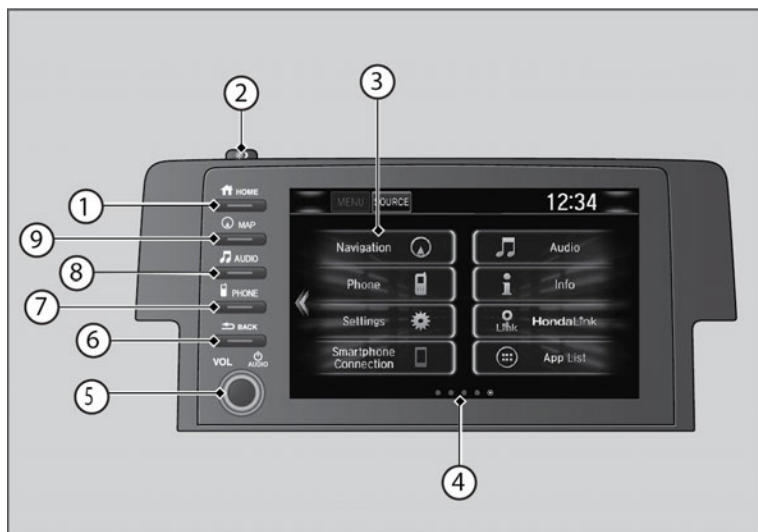

- | | |
|-----------------------------|-----------------------------|
| 1. Home Button | 6. Back Button |
| 2. Day/Night Button | 7. Phone Button |
| 3. Navigation* ¹ | 8. Audio Button |
| 4. Audio/Information Screen | 9. Map Button* ¹ |
| 5. Volume/Power Knob | |

 
Note: Some items may be grayed out during driving to reduce the potential for distraction. You can select them when the vehicle is stopped or use voice commands.

Wearing gloves may limit or prevent touchscreen response.

**1 - If equipped*

AM/FM Radio

Models with Color Audio

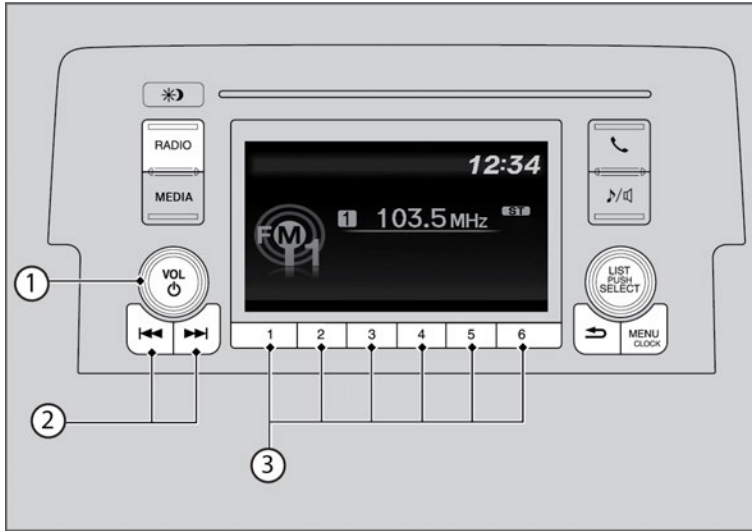

1. **Volume/Power Knob** - Push to turn the audio system on and off. Turn to adjust the volume.
2. **Skip/Seek Buttons** - Press to change tracks or files.
3. **Preset Buttons/Icon** - Tune to the selected station.

Models with Display Audio

 


1. **Volume/Power Knob** - Push to turn the audio system on and off. Turn to adjust the volume.
2. **Skip/Seek Buttons** - Press to change tracks or files.
3. **Preset Buttons/Icon** - Tune to the selected station.

Bluetooth® Audio


Play audio from your compatible phone when it is paired to *Bluetooth®* HandsFreeLink® (see Pairing a Phone). Visit handsfreelink.com to check phone compatibility. Canada customers can phone (855) 490-7351 for any HandsFreeLink® related inquiry.

Models with Color Audio

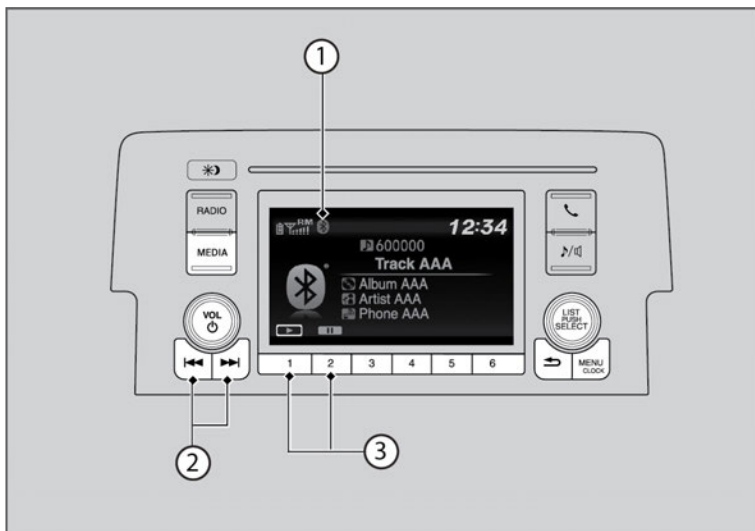

1. **Bluetooth® Indicator** - Appears when your phone is connected to HFL.
2. **Skip/Seek Buttons** - Press to change tracks or files.
3. **Play/Pause Icon**

 Models with Display Audio

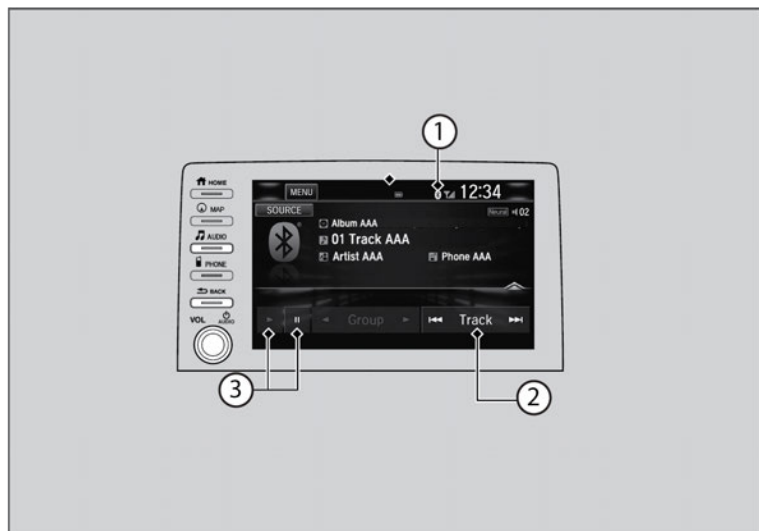

1. **Bluetooth®** Indicator - Appears when your phone is connected to HFL.
2. **Skip/Seek Buttons** - Press to change tracks or files.
3. **Play/Pause Icon**