


Door Operation

There are a few different ways of unlocking the doors from inside the vehicle.

■ Using the Lock Tab

To unlock: Pull the lock tab rearward. When you unlock either front door using the lock tab, the specific door (driver's or passenger's) unlocks.


To lock: Push the lock tab forward. When you lock the door using the lock tab on the driver's door, all the other doors and the tailgate lock at the same time. When you lock the door using the lock tab on the front passenger's door, only that door locks.

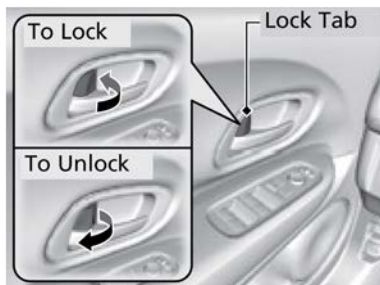

■ Using the Front Door Inner Handle

Pull the front door inner handle. The door unlocks and opens in one motion. Unlocking and opening the driver's door from the inner handle unlocks all other doors.


Do not pull a front door inner handle while the vehicle is moving.

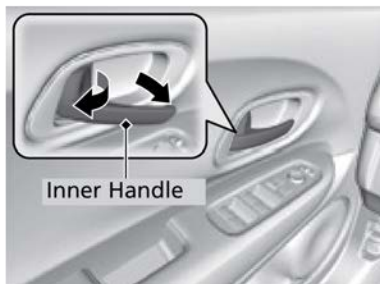

■ Using the Master Door Lock Switch

To unlock: Press the unlock side of the switch to unlock all doors and the tailgate.

To lock: Press the lock side of the switch to lock all doors and the tailgate.

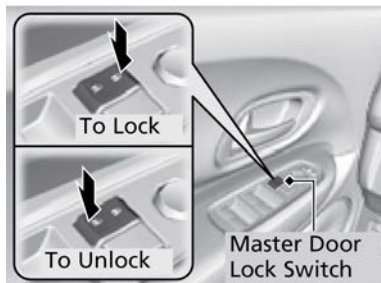


■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and unlock settings to your preference.

Models without Smart Entry

Customizing Flow for Auto Door Locking Options


Steps	Drive Lock Mode*1	Off
1	Apply the parking brake.	
2	The driver's door must be closed at this stage.	Open the driver's door.
3	Turn the ignition switch to ON **.	
4	Press and hold the front of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch. 	
5	Turn the ignition switch to OFF within 20 seconds? Customization is completed. All doors unlock and all turn signals blink three times.	

*1: Default setting

2: Models with the smart entry system have an **ENGINE START/STOP button instead of an ignition switch.

VEHICLE CONTROLS

Customizing Flow for Auto Door Unlocking Options

Steps	Driver Door Open Unlock Mode ^{*1}	Park Unlock Mode	Off
1	Apply the parking brake. Move the shift lever out of P with the brake pedal depressed.	Apply the parking brake. Move the shift lever to P.	Apply the parking brake. Move the shift lever to P.
2	The driver's door must be closed at this stage.		Open the driver's door.
3	Turn the ignition switch to ON ^{*2} .		
4	<p>Press and hold the rear of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.</p> 		
5	<p>Turn the ignition switch to OFF within 20 seconds^{*2}. Customization is completed. All doors lock and all turn signals blink three times.</p>		

^{*1}: Default setting

^{*2}: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Models with Smart Entry

Please see Smart Entry System