


Road Departure Mitigation (RDM)*1

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether while driving between 45-90 mph (72-145km/h).

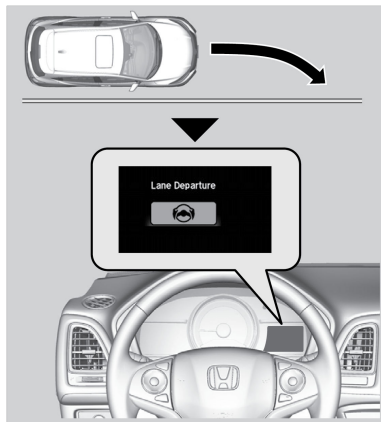


Braking may also be applied if the lane lines are solid and continuous. If the system operates several times without detecting driver response, the system beeps to alert you.

■ Turning the System On or Off

Press the RDM button to turn the system on or off.

The indicator in the button comes on and the message appears on the multi-information display when the system is on.

When you have selected **Warning Only** from the customized options using the audio/information screen, the system does not operate the steering wheel and braking.

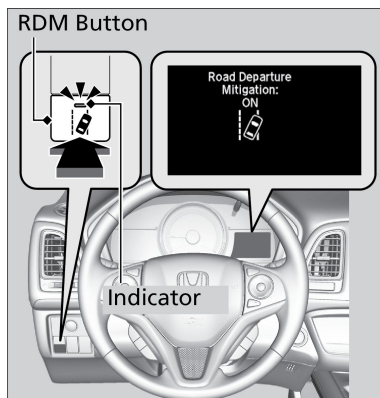

■ **Changing Settings**

1. From the steering wheel, press the up/down arrow (information button).
2. Select Vehicle Settings.
3. Select Driver Assist System Setup.
4. Select Road Departure Mitigation Setting.
5. Make a selection from the options.

■ **Important Safety Reminder**

Like all assistance systems, the RDM system has limitations. Over-reliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.

The RDM system only alerts you when lane drift is detected without a turn signal in use. The RDM system may not detect all lane marking or lane or roadway departures; accuracy will vary based on weather, speed, and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.