


Road Departure Mitigation (RDM)


Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether while driving between 45-90 mph (72-145km/h).

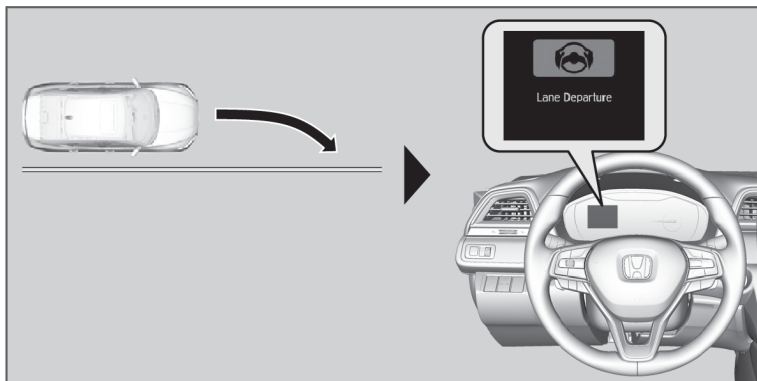

■ Turning the System On or Off

When you turn the RDM on and off, do the following:

Press the safety support switch, roll the left selector wheel to the RDM symbol and push it.

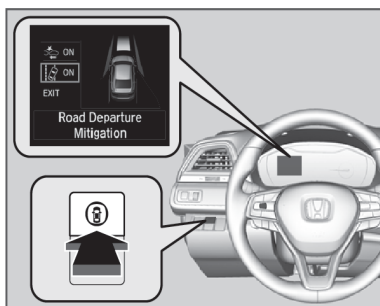

■ Changing Settings

Models with Color Audio

1. Select Vehicle Settings.
2. Select Driver Assist System Setup.
3. Select Road Departure Mitigation Setting.

■ Changing Settings

Models with Display Audio

Determine the warning timing or turn the system off. The vehicle must be in Park (P) and the power mode ON.

1. Press the HOME button, the select Settings.
2. Select Vehicle.
3. Select Driver Assist System Setup.

4. Select Road Departure Mitigation Setting.

Select from the following options:

Normal, Wide, Warning Only, or Narrow.

■ **Important Safety Reminder**

The RDM system has limitations. Over-reliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.

The RDM system only alerts you when lane drift is detected without a turn signal in use. The RDM system may not detect all lane marking or lane or roadway departures; accuracy will vary based on weather, speed, and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.