

System Updates

Models with Display Audio

The audio system's firmware can be updated with a Wi-Fi connection or with a USB device.



■ Wireless Connection Setup

1. Press the Home button.
2. Select System Updates.
3. Select Settings.
4. Select Connection Setup.
5. Select Change Mode.
6. Select Network, then Confirm.

The display returns to the network list.

7. Select an access point from the network list, then Save.



If the audio system requires a password, enter a password.

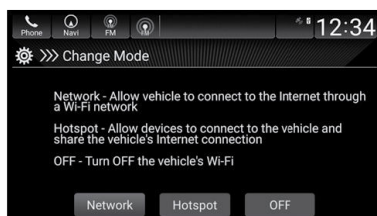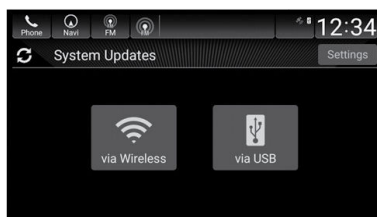

■ Wireless Updating


1. Press the Home button.
2. Select System Updates.
3. Select via Wireless. If a notification is displayed on the screen, the screen of step 5 will be displayed.
4. Select Download Now.

A notification appears on the screen.

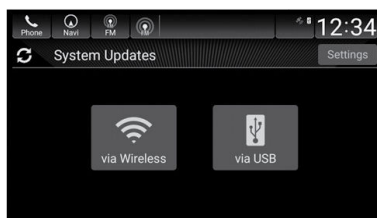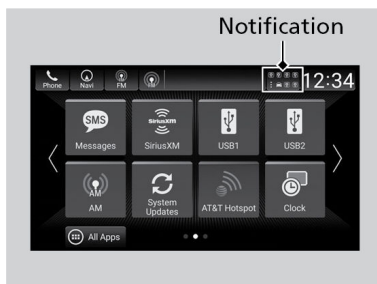

5. Select Install Now or Install while Vehicle OFF.

A notification appears on the screen if the update is successful.

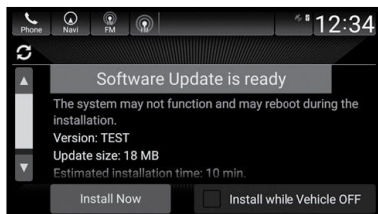

■ USB Updating

Download the update files from the server

1. Press the Home button.
2. Select System Updates.
3. Select via USB.

A notification appears on the screen.

4. Connect a USB device into the USB port.

The inventory data is copied into the USB device.

5. Remove the USB device from the USB port.
6. Connect the USB device into your computer, and then download the update files.

Follow the link to download the required software update files.
Refer to <https://usb.honda.com> for instructions.

