

 
Starting to Drive

Turn on the vehicle and start the engine to begin driving.


■ Before Starting the Engine - Automatic Transmission

Models with electronic gear selector


1. Make sure the parking brake is applied.

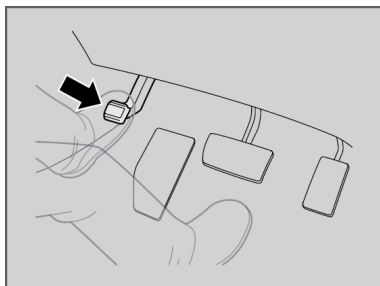

 2. Depress the brake pedal.



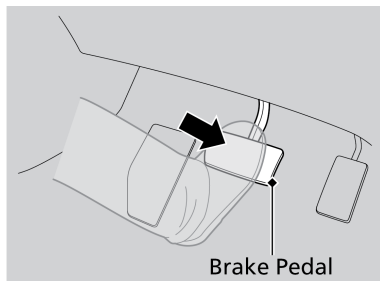


 3. Press the **ENGINE START/STOP** button without depressing the accelerator pedal.

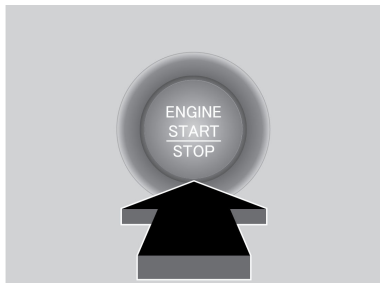

Models without electronic gear selector

   1. Make sure the parking brake is applied.
2. Check that the transmission is in Park, then depress the brake pedal. Although it is possible to start the vehicle in N, it is safer to start it in P.
3. Press the **ENGINE START/STOP** button without depressing the accelerator pedal.

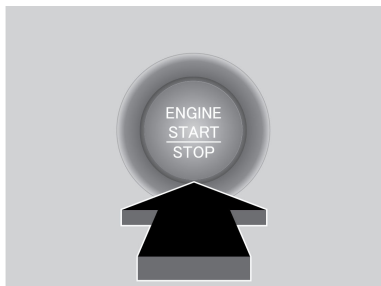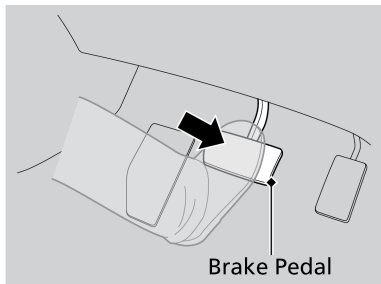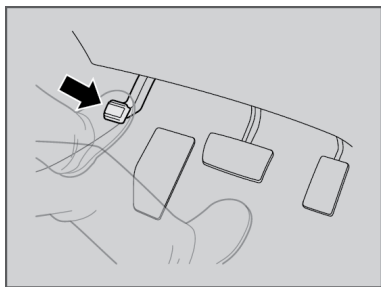

■ Changing the Power Mode

Use the **ENGINE START/STOP** button to cycle through power modes or start the engine.

Automatic transmission models with shift lever

VEHICLE OFF (LOCK)
 The button is off.
 The steering wheel is locked.*¹
 The power to all electrical components is turned off.



ACCESSORY
 The button blinks (in red).
 Operate the audio system and other accessories in this position.



ON
 The button blinks (in red).
 All electrical components can be used.

Without pressing the brake pedal

 
 
➡ Press the button without the transmission in **P**.

➡ Press the button with the transmission in **P**.

*¹: Canadian models

*²: U.S. models

Automatic transmission models with electronic gear selector

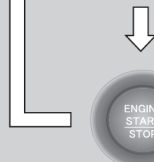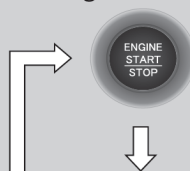

Without pressing the brake pedal

➡ Press the button.

➡ Put the transmission into **P**.

Canadian models:

If the power mode does not change from VEHICLE OFF to ACCESSORY, press the **ENGINE START/STOP** button while moving the steering wheel left and right. The steering wheel will unlock, allowing the mode to change.