

 
Audio System





* Not available on all models


Audio System Basic Operation

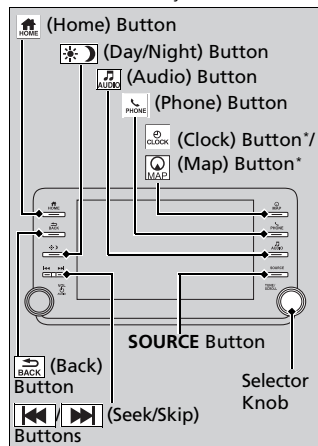
To use the audio system function, the power mode must be in ACCESSORY or ON.




 **(Home) Button:** Press to go to the home screen.


 **(Back) Button:** Press to go back to the previous display when it is displayed.

 **(Seek/Skip) Buttons:** Press to change songs.

 **(Clock) Button*:** Press to display the clock screen.


 **(Map) Button*:** Press to display the map screen.


 **(Phone) Button:** Press to display the phone screen.




 **(Audio) Button:** Press to display the current audio information.


SOURCE Button: Press to display the source select screen.

Selector Knob: Rotate left or right to scroll through the available choices.



Press  to set your selection.

 **(Day/Night) Button:** Press to change the audio/information screen brightness.

Press  once and select  or  to make an adjustment.

- ▶ Each time you press , the mode switches among the daytime mode, nighttime mode and off mode.

Audio System Basic Operation

These indications are used to show how to operate the Selector Knob.
Rotate  to select.
Press  to enter.

Selector Knob

When the list is not displayed, songs, frequency, etc. can be changed.

While connected to Apple CarPlay, it changes as follows:

- Pressing the Phone Button, display the Apple CarPlay phone screen.
- Pressing the Audio Button, display the Apple CarPlay audio screen.

 
* Not available on all models


Audio/Information Screen


Displays the audio status and wallpaper. From this display, you can go to various setup options.

■ Switching the Display

■ Using the audio/information screen

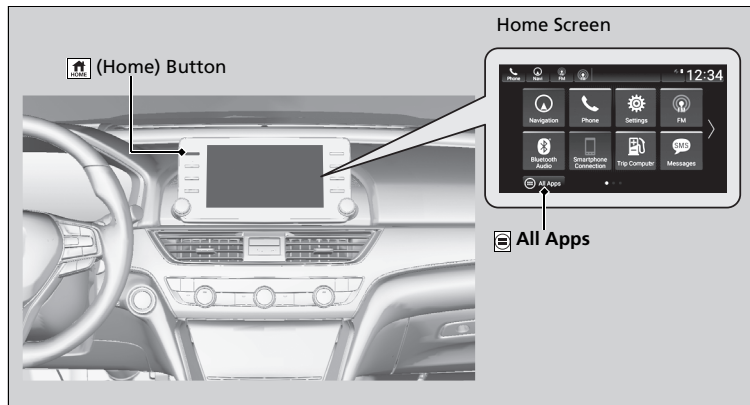

Press the  button to go to the home screen.

Select the following icons on the home screen or after selecting  **All Apps**.

■ Phone

Displays the HFL information.

⌘ Audio/Information Screen

Touchscreen Operation

- Use simple gestures - including touching, swiping, and scrolling - to operate certain audio functions.
- Some items may be grayed out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped or use voice commands.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.

■ Trip Computer

Displays the trip computer information.

- **Current Drive** tab: Displays the current trip information.
- **Trip A/Trip B** tab: Displays information for the current and three previous drives.
The information is stored every time you reset Trip A/B.
To reset the Trip A/B, select **Settings**, then select **Delete Trip History**.
To change the setting of how to reset Trip A/B, select **Settings**, then select **“Trip A” Reset Timing** or **“Trip B” Reset Timing**.

■ Clock

Displays the clock.

■ System Updates*

Updates the software version of the audio system.

■ FM/AM/SiriusXM*/USB1 (USB)/USB2*/Bluetooth Audio/Smartphone Connection

Displays information for each audio format.

■ Settings

Enters the customizing menu screen.

■ Navigation*

Displays the navigation screen.

* Not available on all models

■ **HondaLink**

Displays the HondaLink screen.

■ **Apple CarPlay/Android Auto**

Displays the **Apple CarPlay** or **Android Auto** screen.

■ **Messages**

Displays the text message screen.

■ **AT&T Hotspot***

Displays the AT&T Hotspot screen.

■ **Compass***


Displays the compass screen.

System Updates*


The audio system's firmware can be updated with a Wi-Fi connection, or with a USB device.

How to Update Wirelessly

Wireless connection mode setup

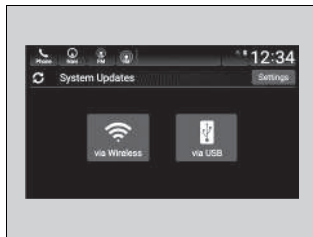

 1. Press the  button.
2. Select **System Updates**.
3. Select **Settings**.
4. Select **Connection Setup**.
5. Select **Wi-Fi**.

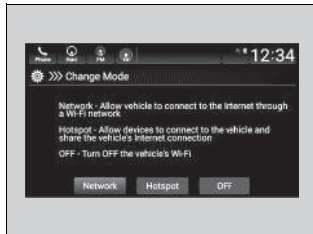

6. Select **Change Mode**.
7. Select **Network**, then **Confirm**.
 - ▶ The display returns to the network list.
8. Select an access point from the network list, then **Save**.
 - ▶ If the audio system requires a password, enter a password.


Wireless connection mode setup

If your vehicle has a telematics control unit (TCU), you do not need the wireless connection mode setup.

* Not available on all models

■ How to update

When the audio system update is available, the notification is shown on the audio/information screen. Use the following procedure to update the system.

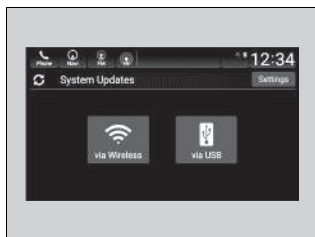

1. Press the  button.
2. Select **System Updates**.

3. Select **via Wireless**.
 - ▶ If a notification is displayed on the screen, the screen of step 5 will be displayed.
4. Select **Download Now**.
 - ▶ A notification appears on the screen.

 
☒ How to update

You can update the system via Wi-Fi, but cannot use the captive portal that require login or agreement the terms of use on the browser.

Your download will be canceled if:

- Your Wi-Fi connection is severed.
- You turn off the ignition when the battery is low on power.

Your download will recommence the next time a Wi-Fi connection is established.

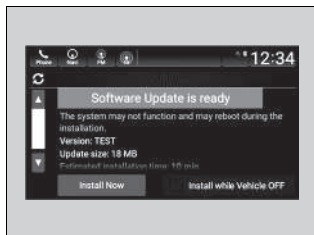

5. Select **Install Now** or **Install while Vehicle OFF**.

 
- ▶ A notification appears on the screen if the update is successful.


⊗ How to update

For battery protection, **Install while Vehicle OFF** cannot be selected when the battery is low on power. If you want to install the updated data, recharge the battery or select **Install Now**.

■ Automatic download settings

Use the following procedure to change to the automatic download setting.

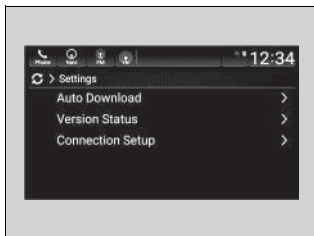

1. Press the  button.
2. Select **System Updates**.
3. Select **Settings**.
4. Select **Auto Download**.
5. Select the access point, then **Yes**.


 
■ View a version and update status


Use the following procedure to confirm the version and update status.

1. Press the  button.
2. Select **System Updates**.
3. Select **Settings**.
4. Select **Version Status**.

How to Update with a USB Device

Download the update files from the server

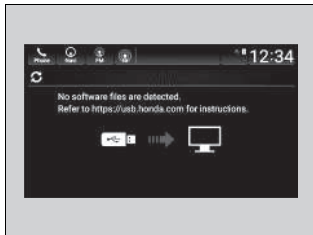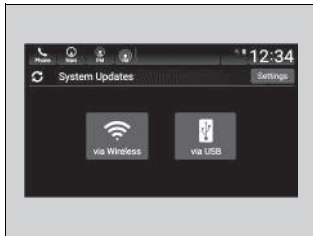

1. Press the  button.
2. Select **System Updates**.
3. Select **via USB**.
 - ▶ A notification appears on the screen.
4. Connect a USB device into the USB port in the center pocket.
 - ▶ The inventory data is copied into the USB device.
5. Remove the USB device from the USB port.
6. Connect the USB device into your computer, and then download the update files.
 - ▶ Follow the link to download the required software update files. Refer to <https://usb.honda.com> for instructions.

 
How to Update with a USB Device


A USB device with a minimum of 8 GB of free space or more is recommended.


Be sure to delete any previous inventory or update files from the USB before starting the USB update process.

* Not available on all models

■ Update the audio system

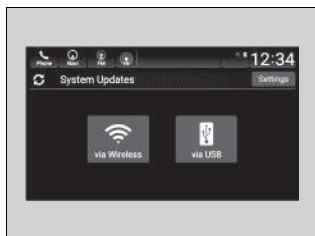

 
1. Press the  button.
2. Select **System Updates**.
3. Select **via USB**.
 - ▶ A notification appears on the screen.
4. Connect the USB device with the update files into the USB port.
 - ▶ A notification appears on the screen.
5. Select **Install Now**.
 - ▶ A notification appears on the screen if the update is successful.

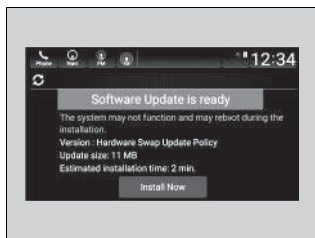


Adjusting the Sound



1. Press the  button.
2. Select an audio source icon.
3. Select **Sound**.
4. Select the setting you want.
5. Select **Save**.

Select an item from the following choices:

 - **Bass / Treble:** Treble, Midrange, Bass, Subwoofer*
- **Balance / Fader:** Balance, Fader
- **DTS Neural Surround*:** DTS Neural Surround™
- **Speed Volume Compensation:** Speed Volume Compensation (SVC)

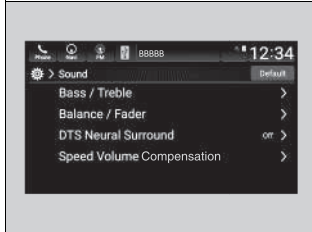

Adjusting the Sound

The SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

You can also adjust the sound by the following procedure.

1. Press the  button.
2. Select **Settings**.
3. Select **Sound**.

To reset each setting for **Bass / Treble**, **Balance / Fader**, **DTS Neural Surround*** and **Speed Volume Compensation** select **Default**.

* Not available on all models