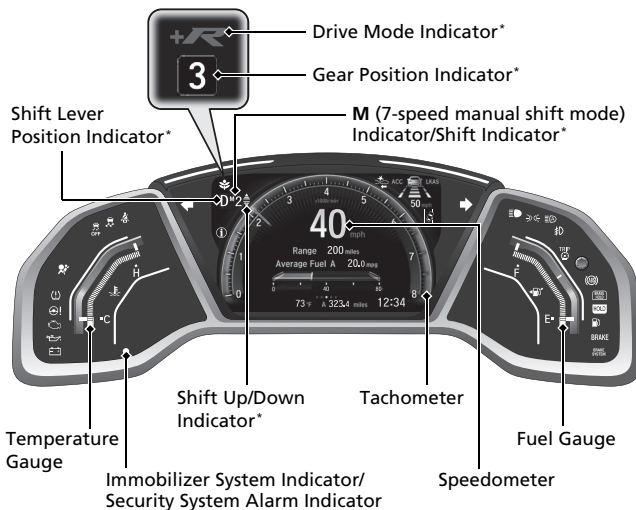
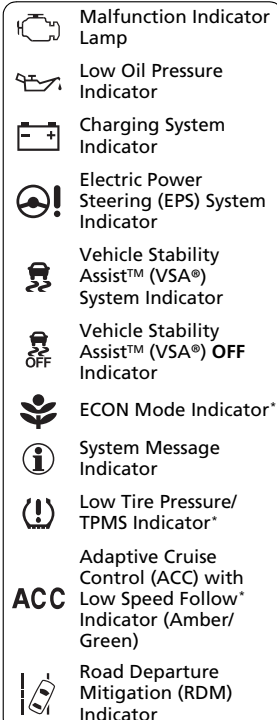


Instrument Panel

Gauges /Driver Information Interface /System Indicators

System Indicators



System Indicators



Collision Mitigation Braking System™ (CMBST™) Indicator



Lane Keeping Assist System (LKAS) Indicator (Amber/Green)

Lights Indicators



Lights On Indicator



High Beam Indicator



Fog Light Indicator*



Auto High-Beam Indicator

System Indicators



Turn Signal and Hazard Warning Indicators



Anti-lock Brake System (ABS) Indicator



Low Fuel Indicator



Seat Belt Reminder Indicator



Supplemental Restraint System Indicator



Automatic Brake Hold System Indicator



Automatic Brake Hold Indicator



Canada



Parking Brake and Brake System Indicator (Red)



Canada

 
 


Parking Brake and Brake System Indicator (Amber)

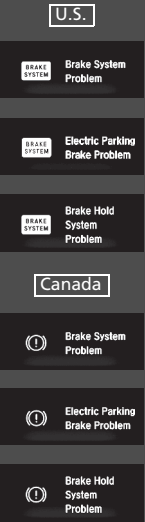


Canada

* Not available on all models

Indicator	Name	On/Blinking	Explanation	Message
  (Red)	Parking Brake and Brake System Indicator (Red)	- Comes on for a few seconds when you turn the ignition switch to ON ^{*1}, then goes off if the parking brake has been released. - Comes on when the parking brake is applied, and goes off when it is released. - Comes on when the brake fluid level is low. - Comes on if there is a problem with the brake system. - The beeper sounds and the indicator comes on if you drive with the parking brake not fully released. - Comes on for about 15 seconds when you pull the electric parking brake switch while the ignition switch is in LOCK ^{*1}. - Stays on for about 15 seconds when you turn the ignition switch to LOCK ^{*1} while the electric parking brake is set.	Comes on while driving - Make sure the parking brake is released. Check the brake fluid level. Comes on along with the ABS indicator - Have your vehicle checked by a dealer. Blinks and the parking brake and brake system indicator (amber) comes on at the same time - There is a problem with the electric parking brake system. The parking brake may not be set. Avoid using the parking brake and have your vehicle checked by a dealer immediately.	  

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Parking Brake and Brake System Indicator (Amber)	- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Comes on if there is a problem with a system related to braking other than the conventional brake system. - Comes on if there is a problem with the electric parking brake system or the automatic brake hold system.	Stays on constantly - Have your vehicle checked by a dealer. Comes on while driving - Avoid using the parking brake and have your vehicle checked by a dealer immediately.	
		- Comes on if there is a problem with the radar sensor. - Indicator may come on temporarily when the Maximum Load Limit is exceeded.	- Make sure the total load is within the Maximum Load Limit. Stays on constantly - Have your vehicle checked by a dealer.	

 
*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Automatic Brake Hold System Indicator	- Comes on for a few seconds when you turn the ignition switch to ON ^{*1}, then goes off. - Comes on when the automatic brake hold system is on.	—	
	Automatic Brake Hold Indicator	- Comes on for a few seconds when you turn the ignition switch to ON ^{*1}, then goes off. - Comes on when the automatic brake hold is activated.	—	—
	Low Oil Pressure Indicator	- Comes on when you turn the ignition switch to ON ^{*1}, and goes off when the engine starts. - Comes on when the engine oil pressure is low.	Comes on while driving - Immediately stop in a safe place.	

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Malfunction Indicator Lamp	1.5 L engine models - Comes on when you turn the ignition switch to ON ^{*1}, and goes off when the engine starts, or after several seconds if the engine did not start. If “readiness codes” have not been set, it blinks five times before it goes off. 2.0 L engine models - Comes on when you set the power mode to ON, and goes off when the engine starts. If “readiness codes” have not been set, it blinks five times before it goes off. - Comes on if there is a problem with the emissions control systems. - Blinks when a misfire in the engine's cylinders is detected.	- Readiness codes are part of the on board diagnostics for the emissions control systems. Comes on while driving - Have your vehicle checked by a dealer. Blinks while driving - Stop in a safe place where there are no flammable objects. Stop the engine for 10 minutes or more, and wait for it to cool down. Then, take your vehicle to a dealer.	 Emissions System Problem
	Charging System Indicator	- Comes on when you turn the ignition switch to ON ^{*1}, and goes off when the engine starts. - Comes on when the battery is not charging.	Comes on while driving - Turn off the climate control system and rear defogger in order to reduce electricity consumption.	 12 Volt Battery Charging System Problem

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Shift Lever Position Indicator*	Indicates the current shift lever position.	—	—
	M (7-speed manual shift mode) Indicator/Shift Indicator*	Comes on when 7-speed manual shift mode is applied.	—	—
	Transmission System Indicator*	Blinks if the transmission system has a problem.	Blinks while driving - Avoid sudden starts and acceleration and have your vehicle checked by a dealer immediately.	
	Shift Up Indicator*	Comes on when shifting up is recommended.	—	—
	Shift Down Indicator*	Comes on when shifting down is recommended.	—	—

* Not available on all models

Indicator	Name	On/Blinking	Explanation	Message
	Gear Position Indicator*	Indicates 1st to 6th gear position.	- If you shift gears very slowly, a different gear position may be displayed for a moment. - The display can be turned ON/OFF in customized features in driver information interface or audio/information screen. - Under the following conditions, gear positions and frame borders are not displayed. - The select lever is in R position. - The display of gear position indicator is turned OFF in customized features. - Under the following conditions, gear positions are not displayed. - The vehicle is stopped (approximately less than 2 mph or 3 km/h) - The select lever is in N position.	—

* Not available on all models

Indicator	Name	On/Blinking	Explanation	Message
	Seat Belt Reminder Indicator	- Comes on and the beeper sounds if you are not wearing a seat belt when you turn the ignition switch to ON *1. - If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later. - Blinks while driving if either you and/or the front passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals.	- The beeper stops and the indicator goes off when you and the front passenger fasten their seat belts. Stays on after you and/or the front passenger has fastened the seat belt(s) - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer.	 Fasten Seat Belt  Fasten Passenger's Seat Belt
	Low Fuel Indicator	- Comes on when the fuel reserve is running low (approximately 1.8 U.S. gal/7.0 Liter left). - Blinks if there is a problem with the fuel gauge.	Comes on - Refuel your vehicle as soon as possible. Blinks - Have your vehicle checked by a dealer.	 Fuel Low  Fuel Gauge System Problem

 
 
 
*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Anti-lock Brake System (ABS) Indicator	- Comes on for a few seconds when you turn the ignition switch to ON ^{*1}, then goes off. - If it comes on at any other time, there is a problem with the ABS.	Stays on constantly - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function.	 Anti-Lock Brake System Problem
	Supplemental Restraint System Indicator	- Comes on for a few seconds when you turn the ignition switch to ON ^{*1}, then goes off. - Comes on if a problem with any of the following is detected: - Supplemental restraint system - Side airbag system - Side curtain airbag system - Seat belt tensioner	Stays on constantly or does not come on at all - Have your vehicle checked by a dealer.	 Airbag System (SRS) Problem
	Electric Power Steering (EPS) System Indicator	- Comes on when you turn the ignition switch to ON ^{*1}, and goes off when the engine starts. - Comes on if there is a problem with the EPS system.	Stays on constantly or does not come on at all - Have your vehicle checked by a dealer.	 Power Steering System (EPS) Problem

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Vehicle Stability Assist™ (VSA®) System Indicator	- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Blinks when VSA® is active. - Comes on if there is a problem with the brake assist system, VSA® system or hill start assist system.	Stays on constantly - Have your vehicle checked by a dealer.	 Vehicle Stability Assist (VSA) Problem  Hill Start Assist Problem
		Comes on if the VSA® system is deactivated temporarily after the battery has been disconnected, then re-connected.	Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.	 Drive Carefully Systems Initializing...
		- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Comes on when you partially disable VSA®.	—	 Vehicle Stability Assist (VSA) OFF
	Vehicle Stability Assist™ (VSA®) OFF Indicator	2.0 L engine models	—	 Vehicle Stability Assist System Fully OFF
		Comes on when you press and hold the  (VSA OFF) button while +R mode is selected.	—	
		Comes on if the VSA® system is deactivated temporarily after the battery has been disconnected, then re-connected.	Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.	 Drive Carefully Systems Initializing...

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
 U.S. models Low Tire Pressure/TPMS Indicator	Low Tire Pressure/TPMS Indicator	- Comes on for a few seconds when you turn the ignition switch to ON *1. - May come on briefly if the ignition switch is turned to ON *1 and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. - Comes on and stays on when: - One or more tires' pressures are determined to be significantly low. - The system has not been calibrated.	Comes on while driving - Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary. Stays on after the tires are inflated to the recommended pressures - The system needs to be calibrated.	
		Blinks for about one minute, and then stays on if there is a problem with the TPMS, or when a spare tire* is temporarily installed.	Blinks and remains on - Have your vehicle checked by a dealer. If the vehicle is fitted with a spare tire*, get your regular tire repaired or replaced and put back on your vehicle as soon as you can.	
		Comes on if the TPMS is deactivated temporarily after the battery has been disconnected, then re-connected.	Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.	

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	System Message Indicator	Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time.	- While the indicator is on, press the  (display/information) button to see the message again. - Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Take the appropriate action for the message. - The driver information interface does not return to the normal screen unless the warning is canceled, or the  button is pressed.	—
	Turn Signal and Hazard Warning Indicators	- Blinks when you operate the turn signal lever. - Blink along with all turn signals when you press the hazard warning button.	—	—
	High Beam Indicator	Comes on when the high beam headlights are on.	—	—
	Lights On Indicator	Comes on when the light switch is in a position other than OFF or when the switch is set to AUTO and the exterior lights come on.	If you remove the key from the ignition switch*1 while the exterior lights are on, a chime sounds when the driver's door is opened.	—

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Fog Light Indicator*	Comes on when the fog lights are on.	—	—
	Auto High-Beam Indicator	Comes on when all the operating conditions of the Auto high-beam are met.	—	—
  	Drive Mode Indicator*	Comes on when each drive mode is selected by drive mode switch.	—	

Instrument Panel

* Not available on all models

 
Indicator	Name	On/Blinking	Explanation	Message*2
	Immobilizer System Indicator	Blinks if the immobilizer system cannot recognize the key information.	Blinks - You cannot start the engine. Turn the ignition switch to LOCK [0]*1, pull the key out*2, and then insert the key and turn it to ON [II]*1 again. Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer. - Do not attempt to alter this system or add other devices to it. Electrical problems can occur.	Models without smart entry system  To Start Engine: Fully Depress Brake + Turn  To Start Engine: Fully Depress Brake + Clutch + Turn  Return Ignition Switch To Lock (0) Position Models with smart entry system  To Start Engine: Fully Depress Brake + Push  To Start Engine: Fully Depress Brake + Clutch + Push  Fully Release Brake + Push  Fully Release Clutch + Push

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

 
*2: Canadian models only: Apply and hold the brake pedal before turning the ignition on.

 
Indicator	Name	On/Blinking	Explanation	Message
 Indicator	Security System Alarm Indicator	Blinks when the security system alarm has been set.	—	—
	ECON Mode Indicator*	Comes on when ECON mode is on.	—	

* Not available on all models

Indicator	Name	On/Blinking	Explanation	Message
	Road Departure Mitigation (RDM) Indicator	- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Comes on if there is a problem with the RDM system.	Stays on constantly - Have your vehicle checked by a dealer.	
		Comes on if the RDM is deactivated temporarily after the battery has been disconnected, then re-connected.	Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.	

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Road Departure Mitigation (RDM) Indicator	Comes on when the RDM system shuts itself off.	- Indicator may come on temporarily when passing through an enclosed space, such as a tunnel. - The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe the debris off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. - Have your vehicle checked by a dealer if the indicator does not go off even after you have cleaned the sensor cover.	
			Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down.	

Indicator	Name	On/Blinking	Explanation	Message
	Road Departure Mitigation (RDM) Indicator	Comes on when the RDM system shuts itself off.	Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe the debris off with a soft cloth. - Have your vehicle checked by a dealer if the indicator and message come back on after you cleaned the area around the camera.	
		Indicator may come on temporarily when the Maximum Load Limit is exceeded.	- Make sure the total load is within the Maximum Load Limit. Stays on constantly - Have your vehicle checked by a dealer.	

Indicator	Name	On/Blinking	Explanation	Message
ACC	Adaptive Cruise Control (ACC) with Low Speed Follow* Indicator (Amber)	- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Comes on if there is a problem with ACC with Low Speed Follow*.	Comes on while driving - Have your vehicle checked by a dealer.	
		Comes on if the ACC with Low Speed Follow* is deactivated temporarily after the battery has been disconnected, then re-connected.	Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.	
		- Indicator may come on temporarily when the Maximum Load Limit is exceeded. - ACC with Low Speed Follow* has been automatically canceled.	- Make sure the total load is within the Maximum Load Limit. Stays on constantly - Have your vehicle checked by a dealer.	

Instrument Panel

 
 
*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

* Not available on all models

Indicator	Name	On/Blinking	Explanation	Message
ACC	Adaptive Cruise Control (ACC) with Low Speed Follow* Indicator (Green)	Comes on when you press the MAIN button.	—	—
LKAS	Lane Keeping Assist System (LKAS) Indicator (Amber)	- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Comes on if there is a problem with the LKAS.	Stays on constantly - Have your vehicle checked by a dealer.	
LKAS	Lane Keeping Assist System (LKAS) Indicator (Green)	Comes on when you press the MAIN button.	—	—

 
*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

 
* Not available on all models

Indicator	Name	On/Blinking	Explanation	Message
	Collision Mitigation Braking System™ (CMBS™) Indicator	- Comes on for a few seconds when you turn the ignition switch to ON *1, then goes off. - Comes on when you deactivate the CMBS™. A driver information interface message appears for five seconds. - Comes on if there is a problem with the CMBS™.	Stays on constantly without the CMBS™ off - Have your vehicle checked by a dealer.	 
		Comes on if the CMBS™ is deactivated temporarily after the battery has been disconnected, then re-connected.	Drive a short distance at more than 12 mph (20 km/h). The indicator should go off. If it does not, have your vehicle checked by a dealer.	

Instrument Panel

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Indicator	Name	On/Blinking	Explanation	Message
	Collision Mitigation Braking System™ (CMBS™) Indicator	Comes on when the CMBS™ shuts itself off.	Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. - Have your vehicle checked by a dealer if the indicator does not go off even after you cleaned the camera.	
			Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down.	

Indicator	Name	On/Blinking	Explanation	Message
	Collision Mitigation Braking System™ (CMBS™) Indicator	Comes on when the CMBS™ system shuts itself off.	- Indicator may come on temporarily when passing through an enclosed space, such as a tunnel. - The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. - Have your vehicle checked by a dealer if the indicator does not go off even after you have cleaned the sensor cover.	
		Indicator may come on temporarily when the Maximum Load Limit is exceeded.	- Make sure the total load is within the Maximum Load Limit. Stays on constantly - Have your vehicle checked by a dealer.	—