




## Driver Information Interface


The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.

### Switching the Display

Press the  (display/information) button and press  or  to change the display. Press **ENTER** to see detailed information.


### Switching the Display

You can edit, add, or delete the meter contents using the audio/information screen.

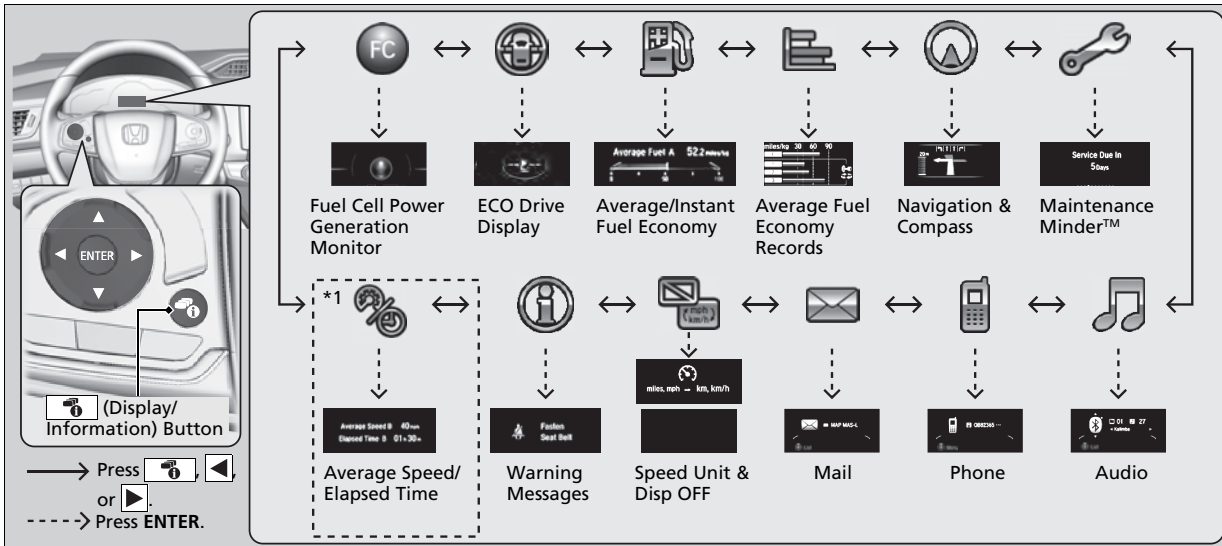

\*1: You can add the content using the audio/information screen.

Press the **TRIP** button to change the display.

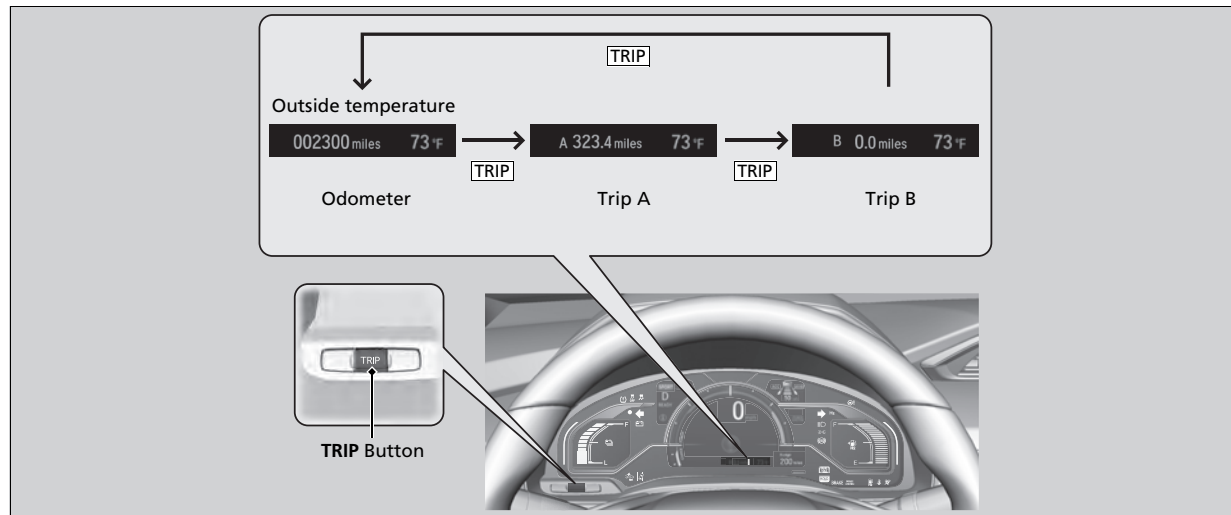

## ■ Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

## ■ Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

### ■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the **TRIP** button. The trip meter is reset to **0.0**.

## ■ Outside Temperature

Shows the outside temperature in Fahrenheit.

### ■ Adjusting the outside temperature display

Adjust the temperature reading up to  $\pm 5^{\circ}\text{F}$  if the temperature reading seems incorrect.

## ■ Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in miles/kg or km/kg. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

### » Trip Meter

Switch between trip meter A and trip meter B by pressing the **TRIP** button.

### » Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

Use the audio/information screen's customized features to correct the temperature.

### » Average Fuel Economy

You can change when to reset the average fuel economy.

## ■ Instant Fuel Economy

Shows the instant fuel economy as a bar graph in miles/kg or km/kg.

## ■ Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

## ■ Average Speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

## ■ Turn-by-Turn Directions

Shows you turn-by-turn driving directions to your destination linked with the navigation system.

### ⌘ Elapsed Time

You can change when to reset the elapsed time.

### ⌘ Average Speed

You can change when to reset the average speed.

### ⌘ Turn-by-Turn Directions

The driver information interface shows a compass when the route guidance is not used.

You can select whether the turn-by-turn display comes on or not during the route guidance.

## ■ Maintenance Minder™

Shows the Maintenance Minder™.

## ■ Audio

Shows the current audio information.


## ■ Mail

Shows the current mail information.

## ■ Phone

Shows the current phone information.


## Fuel Cell Power Generation Monitor

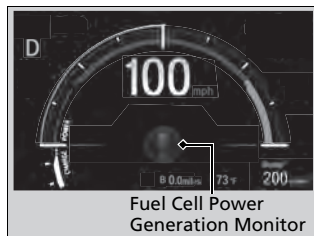

Shows the amount of power generated by the fuel cell.

A circle displayed in the monitor expands and contracts to show how much power is being generated. The larger the circle, the more power that is being generated.

## Average Fuel Economy Records

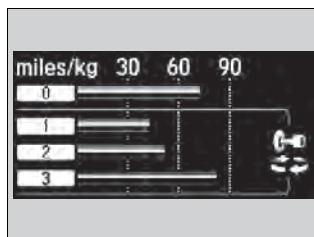

Shows the average fuel economy for the last three driving cycles (1 – 3), and the current driving cycle (0) in miles/kg or km/kg.

Each time you set the power mode to ON, the display is updated, and the oldest record is deleted.

## ■ Eco Drive Display

The vehicle icon on the display moves forward or backward while driving.  
 The more aggressive the acceleration is, the further the icon moves forward.  
 The more aggressive the deceleration is, the further the icon moves backward.  
 Keep the icon near the center of the circle for better fuel economy while driving.

