

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Accessories Precautions

The GPS antenna is located in the dashboard. Metallic front or side window tinting can seriously degrade or obstruct GPS reception.

Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

Important Safety Information

WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Certain on-screen controls are disabled when driving, however most of the voice commands continue to function. Pull to the side of the road if you need to devote more attention and time to look at the screen or access additional menus.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.


The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.


NOTICE

This vehicle's navigation display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste. Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on navigation screens.


* Not available on all models

 
HOME Screen


The system displays various functions from the HOME screen. Press the  (Home) icon at any time to return to the main HOME screen.

 (Home)
Display the HOME screen.

VOL (Volume)
Increase or decrease the audio volume.

 (Menu)
Display the map menu.

 (Back)
Go back to the previous screen.


 (Display Mode)
Switch between Day and Night modes manually.



MAP
Display the map screen.

Navigation
Display the navigation feature that was used the last time.
At start-up, the navigation top screen is displayed.

Navigation Top Screen

Display the map screen and operate the navigation features. From the HOME screen, select **MAP** and then press the  (Back) icon. The navigation top screen is displayed.

GPS signal strength
Display the satellites' status.

Where To?
Select search methods to enter a destination for route guidance.

Apps
Display the useful functions incorporated into the navigation system.

 
View Map
Display the map screen.

Settings
Change the settings for the navigation functions.

* Not available on all models

Map Screen Legend

The color of the map is different depending on the selected Map Theme.

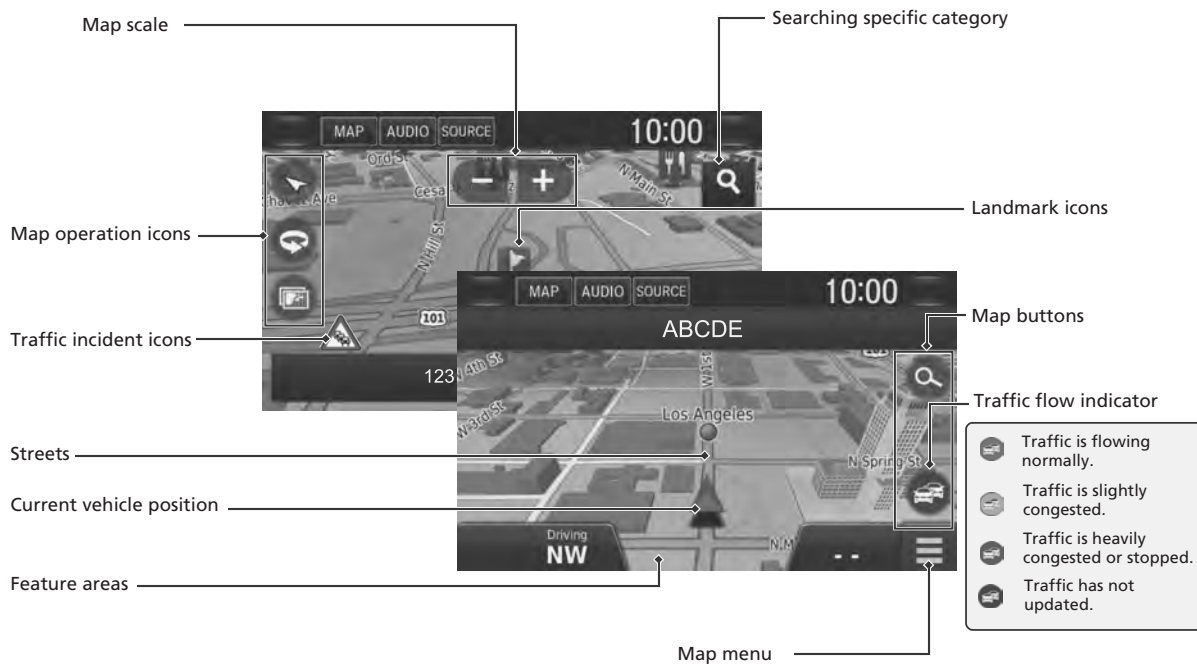

During Route Guidance

 
During route guidance, route information is displayed on the map screen.

You can see the detailed information on the turn information screen.

Map Screen




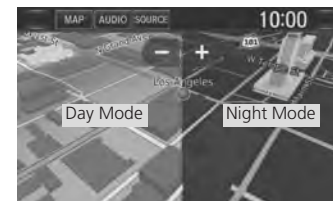 
Guidance Screen

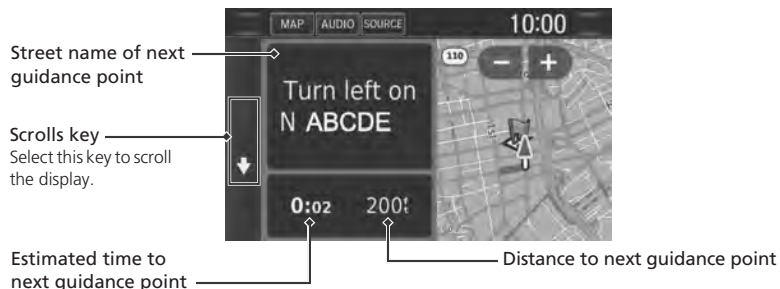

* Not available on all models

 
Day or Night Mode

Press the  (Display Mode) icon to manually switch between Day and Night modes.



Turn-by-Turn Directions

The next guidance point appears on the Driver Information Interface (DII).

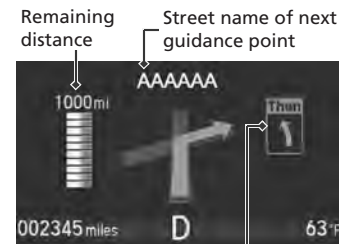

Next driving maneuver is approaching.

Navigation—Home Addresses and Going Home


The “Home” feature automatically routes you to your home address from any location simply by selecting **Go Home**.

You can store one home address.

The order of the steps may change depending on the map data loaded on your system.

Storing Your Home Address

1 Select **MAP**.

2 Select .

3 Press the  (Menu) icon and then select **Set Home Location**.



4 Select **Enter My Address**.



 
5 Select **Search All**.



6 Enter a house number and then select **Done**.

7 Enter a street and then select **Done**.

8 Select a street from the list.

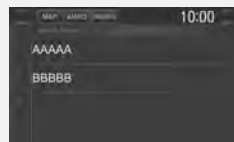


If the select city screen is displayed, select a city.

9 Select an address from the list.

 
10 Select **Select**.



Going Home

1 Select **MAP**.

2 Select .

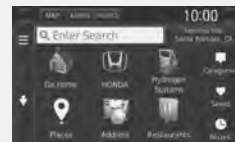3 Select **Go Home**.



Alternatively, you can say  “Navigation” and then  “Go Home” from any screen.

Navigation—Entering a Destination

 
Enter your destination using one of several methods, then follow route guidance on the map to your destination.

The order of the steps may change depending on the map data loaded on your system.

1 Select **MAP**.

2 Select .

3 Select **Address**.

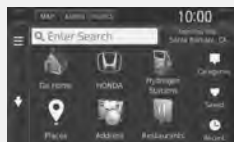

4 Select **Search All**.



 
5 Enter the house number and select **Done** if necessary.



6 Enter the name of your destination street and select **Done**.



7 Select your destination street from the list.

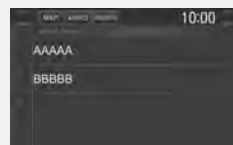


If the select city screen is displayed, select a city.

8 Select an address from the list.

9 Select **Go!**.

 Route guidance to the destination begins.

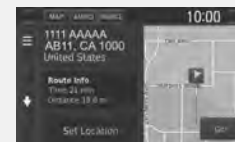

* Not available on all models