

Driver Information Interface

The driver information interface displays the speedometer, tachometer, odometer, trip computer, outside temperature, and other gauges. It also displays important messages such as warnings and other helpful information.

■ Speedometer

Displays your driving speed in mph or km/h.

■ Tachometer

Shows the number of engine revolutions per minute.

 
» Speedometer

You can set the speedometer and the displayed measurements to read in either mph and km/h.

» Tachometer


You can turn on or off the tachometer display.

Odometer

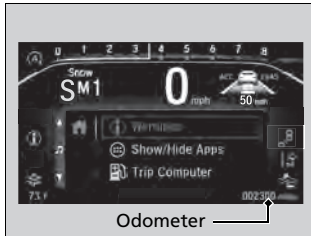

Shows the total number of miles or kilometers that your vehicle has accumulated.

 Outside Temperature

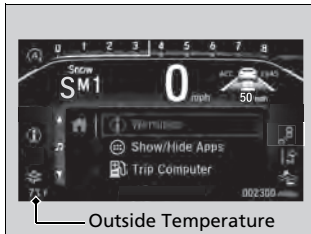

Shows the outside temperature in Fahrenheit (U.S.) or Celsius (Canada).

Adjusting the outside temperature display

 
Adjust the temperature reading by up to $\pm 5^{\circ}\text{F}$ or $\pm 3^{\circ}\text{C}$ if the temperature reading seems incorrect.

Use the audio/information screen to correct the temperature.

Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).


It may take several minutes for the display to be updated after the temperature reading has stabilized.

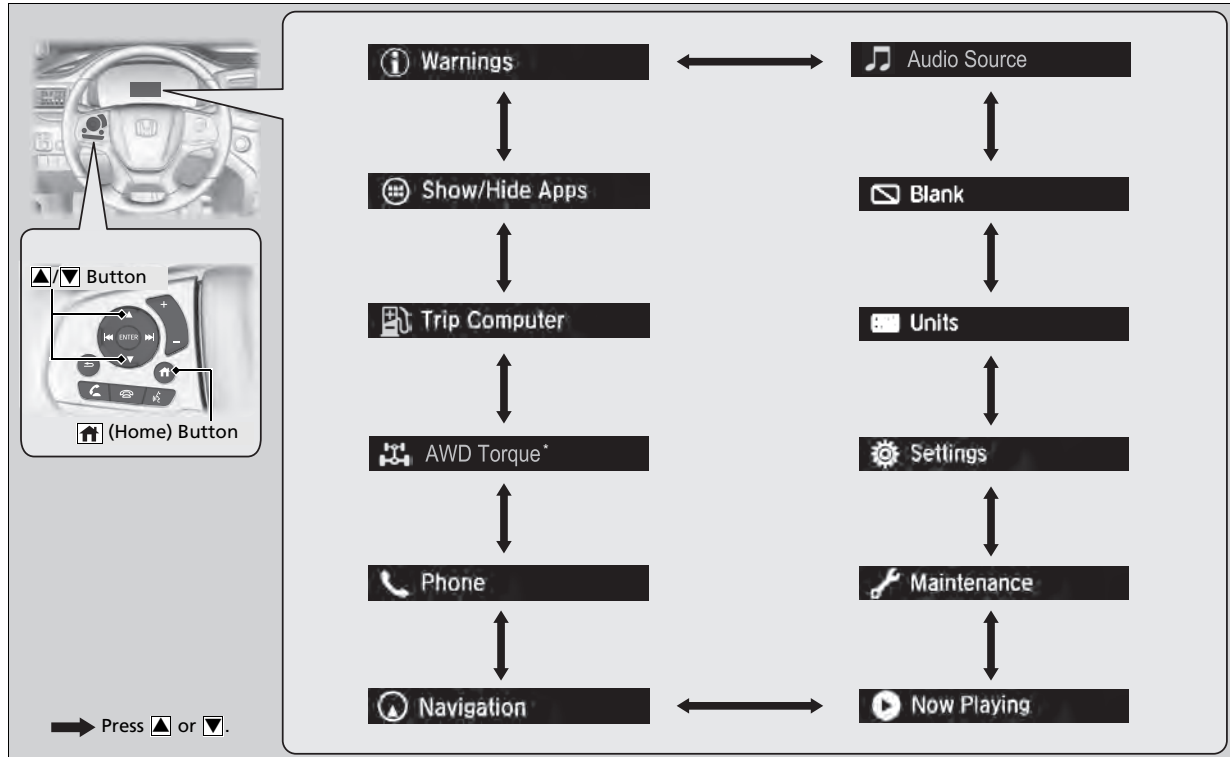

* Not available on all models

■ Trip Computer

 Press the **ENTER** button to switch between trip computer A and trip computer B.

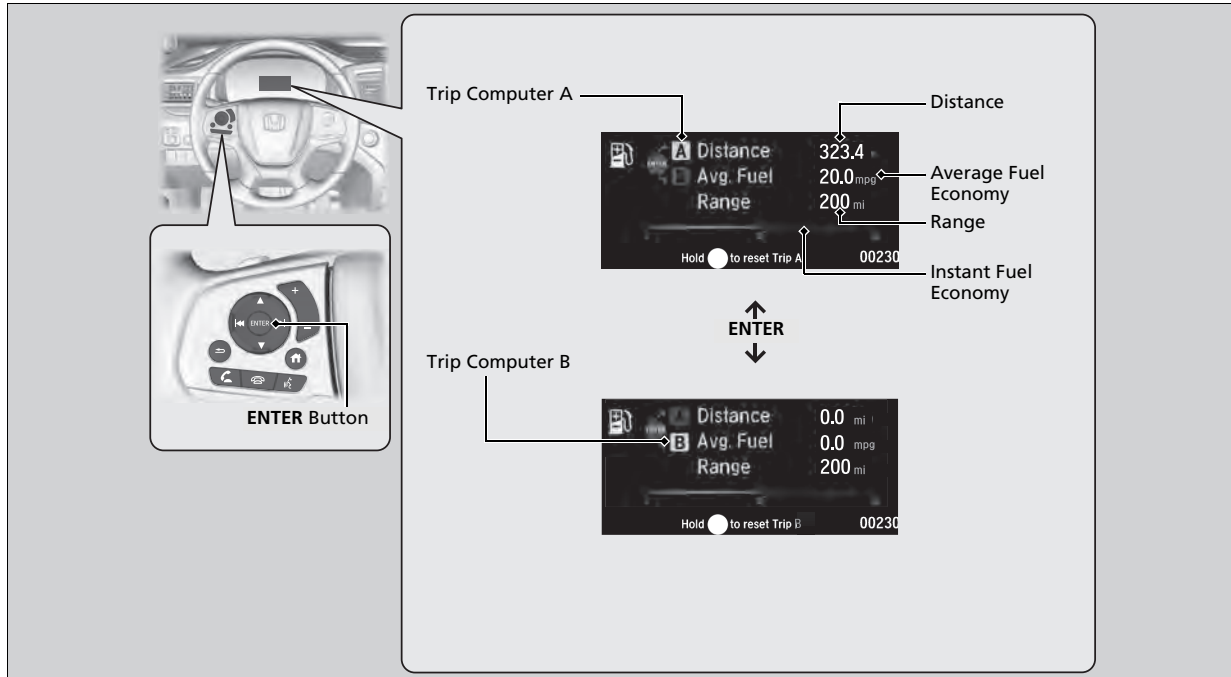

Instrument Panel

■ **Distance**

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting distance

To reset the **Distance**, display it and then press and hold the **ENTER** button until the **Distance** is reset to **0.0**.

■ **Average fuel economy (Avg. Fuel)**

Shows the estimated average fuel economy of each **Distance** in mpg or l/100 km. The display is updated at set intervals. When a **Distance** is reset, the average fuel economy is also reset.

■ **Instant fuel economy**

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

■ **Range**

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

☒ Distance

Switch between **Distance A** and **Distance B** by pressing the **ENTER** button.

 
☒ Average fuel economy (Avg. Fuel)

You can change when the average fuel economy is reset.

Navigation



Turn-By-Turn Driving Directions



Compass

Display Audio shows you turn-by-turn directions to your destination.

Models with navigation system

When the navigation system is not providing driving guidance, an image of a compass appears in the driver information interface.

Warnings



(Example)

Navigation

Turn-by-turn directions will be shown on the driver information interface only when your android phone is connected to Android Auto™.

You can select whether to have the turn-by-turn display come on or not during the route guidance.

 
Warnings

The **Warnings** app is dynamic and will only appear when there are active warnings. If there are no Warnings, this app will not be shown.

Maintenance




Shows the current condition of the tire pressure and the remaining oil life.

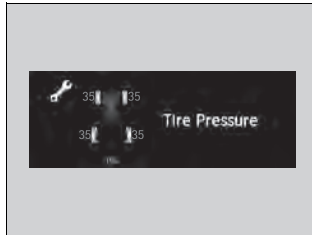

■ Tire Pressure

 Shows the tire pressure of each tire.

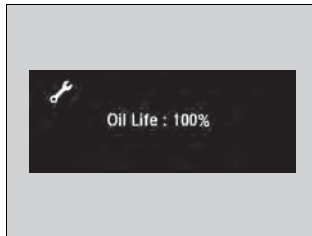


■ Oil Life

Shows the remaining oil life and Maintenance Minder™.

 
■ Settings

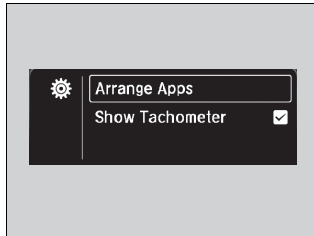


Change the settings to your liking.



 ■ Arrange Apps

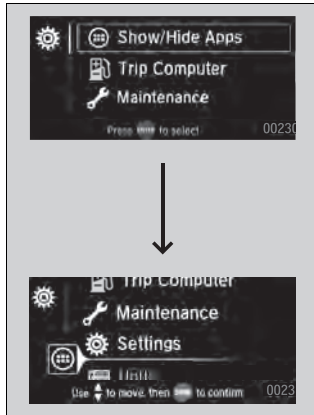
You can change the order of the apps on the home screen.





1. Press the  button to select **Arrange Apps**, then press the **ENTER** button.
2. Press the  button to select the icon you want to move, then press the **ENTER** button.
3. Press the  button repeatedly to move the icon to your desired position, then press the **ENTER** button.

 ■ Show Tachometer

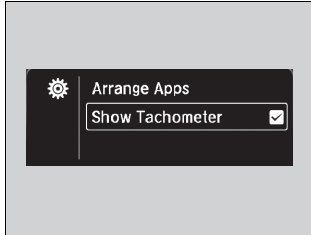You can show or hide the tachometer.



Press the / button to select **Show Tachometer**, then press the **ENTER** button.

- The tachometer appears when the check box is checked.