

Honda Sensing® is a driver support system which employs the use of two distinctly different kinds of sensors: a radar sensor located behind the emblem and a front sensor camera mounted to the interior side of the windshield, behind the rearview mirror.

Honda Sensing® has following functions.


■ **The functions which do not require switch operations to activate**

- Collision Mitigation Braking System™ (CMBS)™
- Road Departure Mitigation (RDM) System

■ **The functions which require switch operations to activate**

- Adaptive Cruise Control (ACC)
- Lane Keeping Assist System (LKAS)

## ■ Operation Switches for the ACC/LKAS

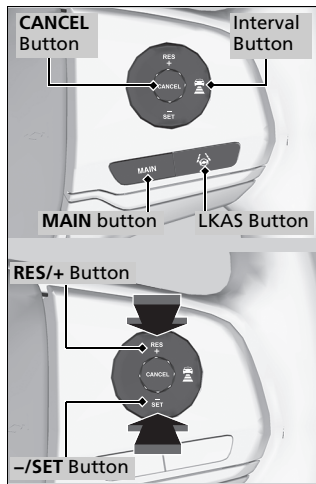

### ■ MAIN Button

Press to activate standby mode for ACC and LKAS. Or press to cancel these systems.

### ■ LKAS Button


Press to activate or cancel the LKAS.

### ■ RES/+/-/SET Button

Press **RES/+** to resume the ACC or increase the vehicle speed.

Press **-/SET** to set the ACC or decrease the vehicle speed.


### ■ Interval Button

Press the  (interval) button to change the ACC following-interval.

### ■ CANCEL Button

Press to cancel ACC.

## Multi-Information Display Content

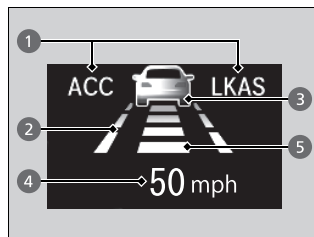

You can see the current state of ACC and LKAS.

- 1 Indicates that ACC and LKAS are ready to be activated.
- 2 Indicates that LKAS is activated and whether or not traffic lane lines are detected.
- 3 Indicates whether or not a vehicle is detected ahead.
- 4 Shows the set vehicle speed.
- 5 Shows the set vehicle interval.