


# Instrument Panel

## Indicators /Driver Information Interface Gauges

### System Indicators

-  Malfunction Indicator Lamp
-  Charging System Indicator
-  Electric Power Steering (EPS) System Indicator
-  Low Fuel Indicator
-  Vehicle Stability Assist™ (VSA®) System Indicator
-  VSA® OFF Indicator
-  Automatic Brake Hold System Indicator
-  U.S. Automatic Brake Hold Indicator
-  Canada Automatic Brake Hold Indicator
-  U.S. Parking Brake and Brake System Indicator (Amber)
-  Canada Parking Brake and Brake System Indicator (Amber)
-  Anti-lock Brake System (ABS) Indicator
-  Cruise Mode Indicator (White/Green)

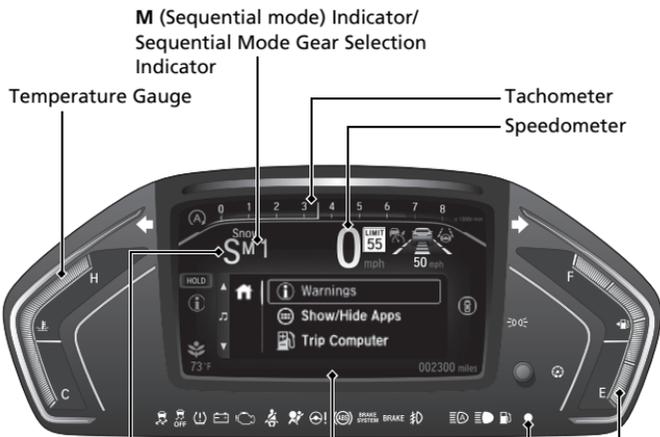

- Gear Position Indicator/ Transmission System Indicator**
- Immobilizer System Indicator/ Security System Alarm Indicator**

### System Indicators

-  Lane Keeping Assist System (LKAS) Indicator (Green/Amber/White)
-  Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Green/Amber/White)

### Lights Indicators

-  Lights On Indicator
-  High Beam Indicator
-  Fog Light Indicator\*
-  Auto High-Beam Indicator

### System Indicators

-  Turn Signal and Hazard Warning Indicators
-  Low Tire Pressure/TPMS Indicator
-  U.S. Parking Brake and Brake System Indicator (Red)
-  Canada Parking Brake and Brake System Indicator (Red)
-  Seat Belt Reminder Indicator
-  Supplemental Restraint System Indicator
-  Econ Mode Indicator
-  Auto Idle Stop System Indicator (Amber)/ Auto Idle Stop Indicator (Green)
-  Auto Idle Stop OFF Indicator
-  Auto Idle Stop Suspend Indicator
-  Snow Mode Indicator
-  Normal Mode Indicator
-  System Message Indicator
-  Safety Support Indicator (Green/Amber/Gray)

\* Not available on all models

## Driver Information Interface

The driver information interface displays the speedometer, tachometer, odometer, trip computer, outside temperature, and other gauges. It also displays important messages such as warnings and other helpful information.

### ■ Speedometer

Displays your driving speed in mph or km/h.

### ■ Tachometer

Shows the number of engine revolutions per minute.

#### ☒ Speedometer

You can set the speedometer and the displayed measurements to read in either mph and km/h.


☒ **Units** P. 138

#### ☒ Tachometer

You can turn on or off the tachometer display.


☒ **Show Tachometer** P. 142

## Odometer

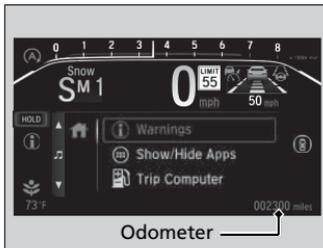

Shows the total number of miles or kilometers that your vehicle has accumulated.

## Outside Temperature\*

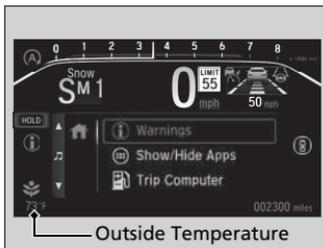

Shows the outside temperature in Fahrenheit (U.S.) or Celsius (Canada).

### Adjusting the outside temperature display

Adjust the temperature reading by up to  $\pm 5^{\circ}\text{F}$  or  $\pm 3^{\circ}\text{C}$  if the temperature reading seems incorrect.

Use the audio/information screen to correct the temperature.

▶ **Customized Features** P. 463

### Outside Temperature\*

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

\* Not available on all models

## ■ Traffic Sign Recognition System

Shows the traffic sign recognition system.

➤ **Traffic Sign Recognition System** P. 630

## ■ Accessing Content

Press the  (home) button, then press the  button to scroll to the content you want to see. Press **ENTER** to see detailed information.

\*1: Models with color audio system

\*2: Models with Display Audio

## ⊗ Traffic Sign Recognition System

You can turn on or off the traffic sign recognition system.

**Models with color audio system**

➤ **Vehicle Customization** P. 143

**Models with Display Audio**

➤ **Customized Features** P. 463


## ⊗ Accessing Content

To go back to the previous screen, press the \*1/ \*2 (back) button.

You can edit, add, or delete the meter contents using the driver information interface.

➤ **Arrange Apps** P. 141


➤ **Show/Hide Apps** P. 140

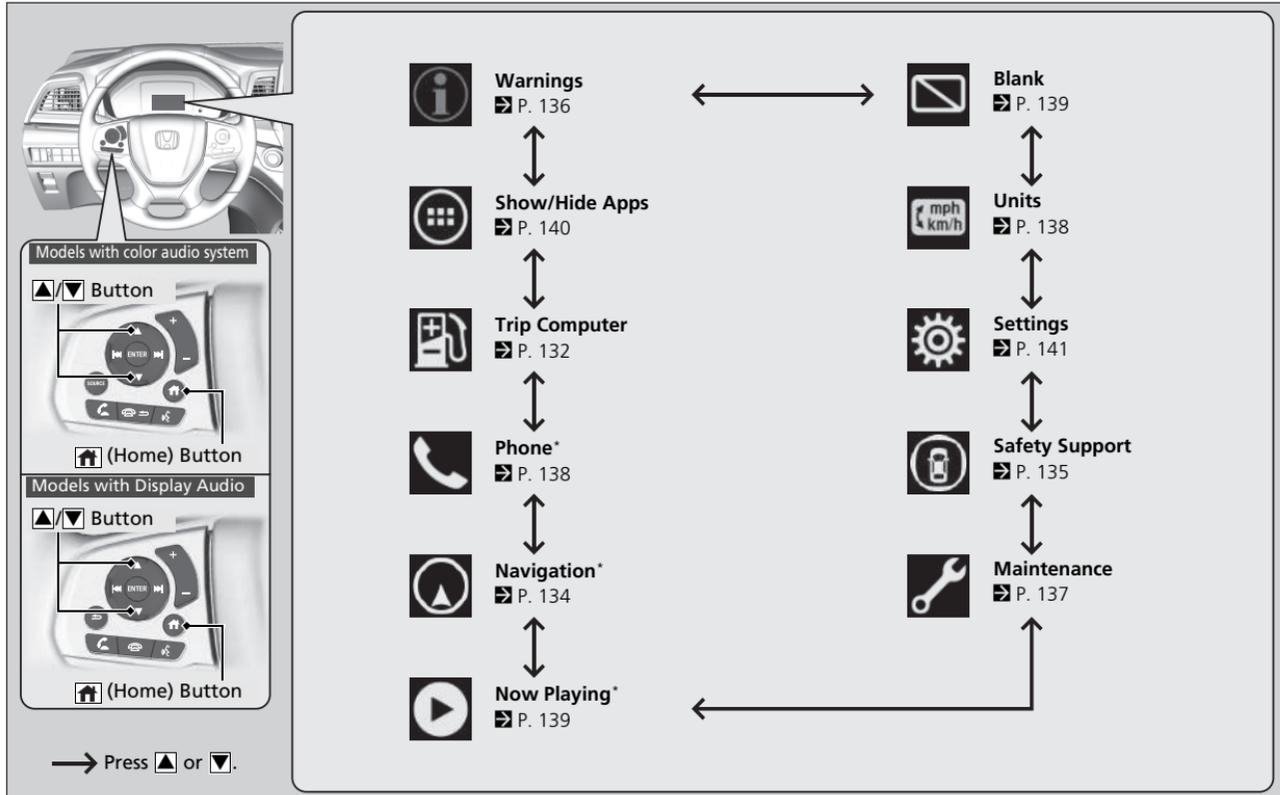

\* Not available on all models

## ■ Trip Computer

Press the **ENTER** button to switch between trip computer A and trip computer B.

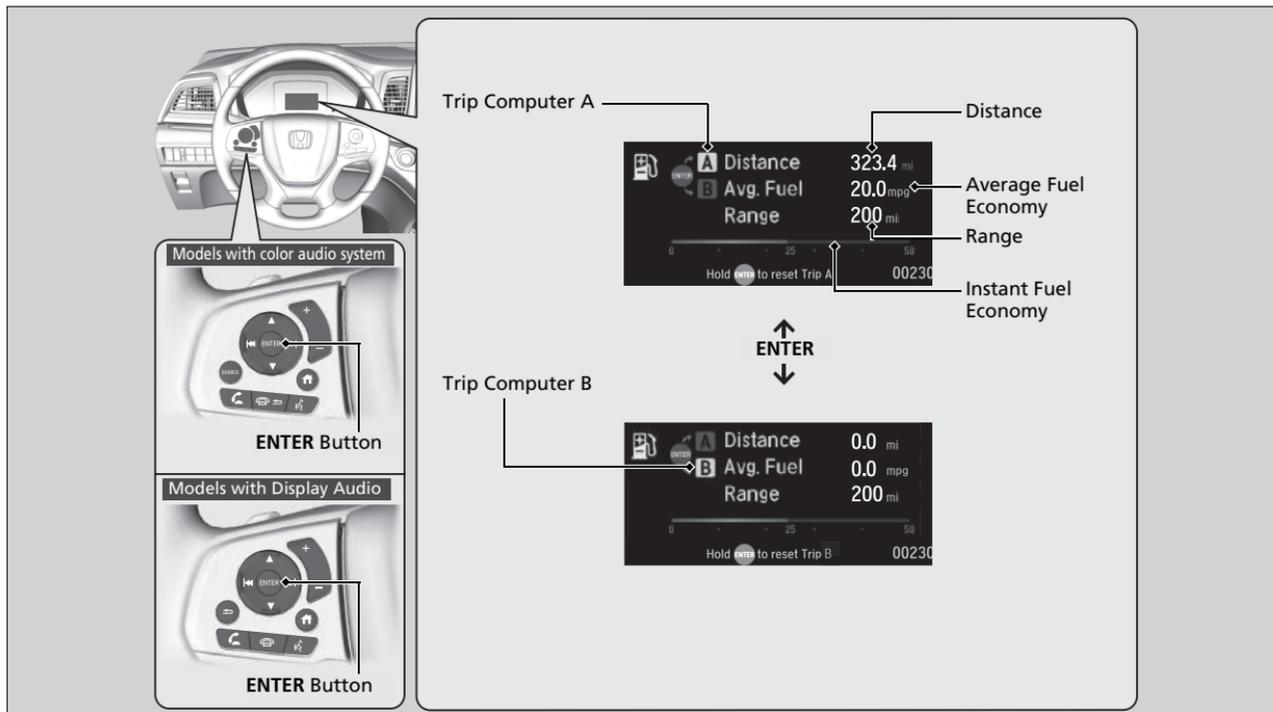

### ■ Distance

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

### Resetting distance

To reset the **Distance**, display it and then press and hold the **ENTER** button until the **Distance** is reset to **0.0**.

### ■ Average fuel economy (Avg. Fuel)

Shows the estimated average fuel economy of each **Distance** in mpg or l/100 km. The display is updated at set intervals. When a **Distance** is reset, the average fuel economy is also reset.

### ■ Instant fuel economy

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

### ■ Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

#### Distance

Switch between **Distance A** and **Distance B** by pressing the **ENTER** button.

#### Average fuel economy (Avg. Fuel)

You can change when the average fuel economy is reset.


Models with color audio system

➔ **Vehicle Customization** P. 143

Models with Display Audio

➔ **Customized Features** P. 463

## Navigation\*

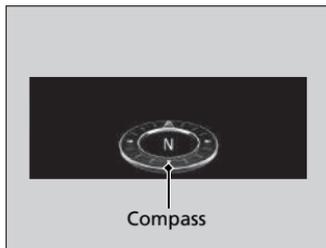

### ■ Compass

Shows the compass screen.



### ■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system\* or Android Auto, turn-by-turn directions to your destination appear.

➤ Refer to the Navigation System Manual

➤ Android Auto P. 376

## Navigation\*

You can select whether to have the turn-by-turn display come on or not during route guidance.

➤ Customized Features P. 463

### Models with navigation system

When the compass or turn-by-turn directions are displayed, you can control some navigation system functions on the driver information interface by pressing the **ENTER** button.

➤ Refer to the Navigation System Manual


\* Not available on all models

## Safety Support

Indicates the state of RDM, CMBS™ and Blind spot information System\*, such as On, Off, or Failure, by color and letters.

The following colors indicate the state of any of the above mentioned systems:

- Green: The system is on.
- Gray: The system is off.
- Amber: There is a problem with the system.

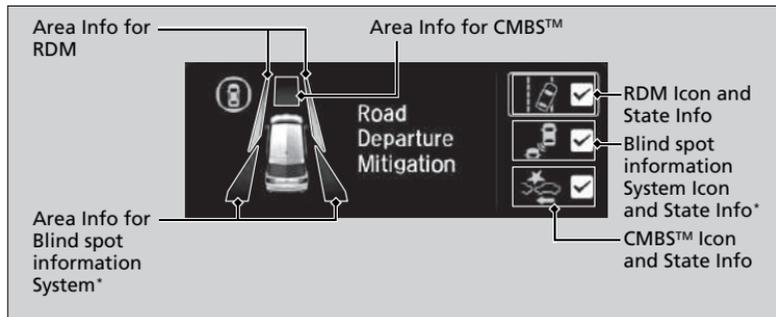

\* Not available on all models

Continued

## Safety Support

If a system is indicated by the color amber, have your vehicle checked by a dealer immediately.

To turn on or off each system, first press the ▲/▼ button to switch displays. From the next display you can select which system to turn on or off.

▶ **RDM On and Off** P. 627

▶ **CMBS™ On and Off** P. 593


▶ **Blind spot information system on and off** P. 583

You can also confirm the state of the each function by the color of the safety support indicator.

▶ **Safety Support Indicator (Amber)** P. 104

▶ **Safety Support Indicator (Green/Gray)** P. 107

## Warnings

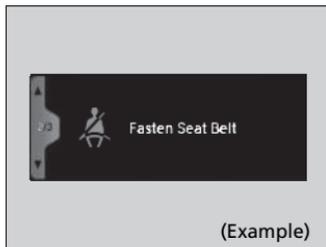

### Driver Information Interface Warning and Information Messages P. 108


## Warnings

The **Warnings** app is dynamic and will only appear when there are active warnings. If there are no Warnings, this app will not be shown.

## Maintenance



Shows the current condition of the tire pressure and the remaining oil life.

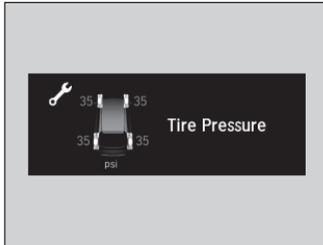

### ■ Tire Pressure

Shows the tire pressure of each tire.

➤ **Tire Pressure Monitoring System (TPMS) with Tire Fill Assist** P. 577




### ■ Oil Life

Shows the remaining oil life and Maintenance Minder™.

➤ **Maintenance Minder™** P. 667

*Continued*


## Phone\*

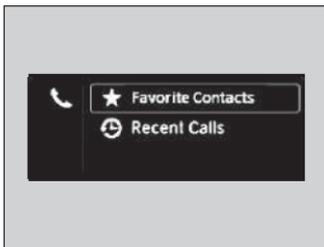

Shows the current phone information.

► **Bluetooth® HandsFreeLink®** P. 510

## Units

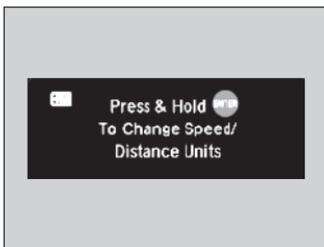

Enables you to set the speedometer and the displayed measurements to read in either mph or km/h.

Press and hold the **ENTER** button. Each time you do this, the unit will change from mph to km/h or vice versa. After this, a confirmation screen will appear for a few seconds.

\* Not available on all models

## Blank

Shows blank screen.

## Now Playing\*



Shows the current audio information.

▶ **Audio System Basic Operation** P. 300

\* Not available on all models

## Show/Hide Apps

You can show or hide the meter contents.



Select the content you wish to show or hide, then press **ENTER**.

- Repeat it if you want to show or hide more than one app.

### Show/Hide Apps

You cannot hide apps with the  icon on the right side.

Selecting **Default All** in **Vehicle Customization** does not restore these settings to their original state.


#### Models with Display Audio

You can also add the **Android Auto**, **Apple CarPlay**, **Sirius XM\***, **My Honda Music**, **USB**, **AM**, **FM**, **Bluetooth Audio**, **Social Playlist**, **AUX Input**, **CD\*** and **Rear Entertainment\*** apps.

\* Not available on all models


## Settings

Change the settings to your liking.

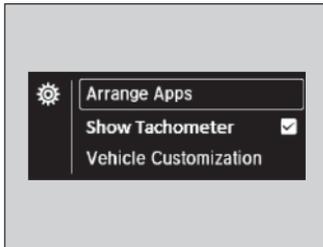

### ■ Arrange Apps

You can change the order of the apps on the home screen.

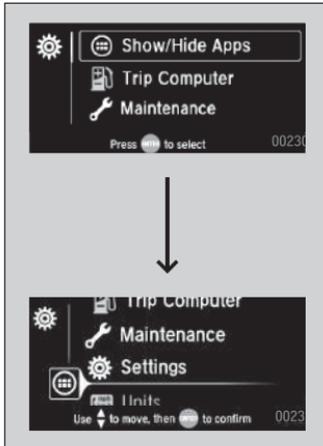

1. Press the ▲/▼ button to select **Arrange Apps**, then press **ENTER**.
2. Press the ▲/▼ button to select the icon you want to move, then press **ENTER**.
  
3. Press the ▲/▼ button repeatedly to move the icon to your desired position, then press **ENTER**.


### ⌘ Arrange Apps

Selecting **Default All** in **Vehicle Customization** does not restore these settings to their original state.

*Continued*

## ■ Show Tachometer

You can show or hide the tachometer.

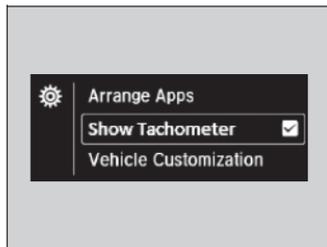

Press the  button to select **Show Tachometer**, then press **ENTER**.

- The tachometer appears when the checkbox is checked.

## ☒ Show Tachometer

Selecting **Default All** in **Vehicle Customization** does not restore these settings to their original state.


Models with color audio system

■ **Vehicle Customization**

Use the driver information interface to customize certain vehicle features.

**How to customize**

First, make sure the vehicle is at a complete stop and that the power mode is set to ON. Next, press the  (home) button, then press the  button to select **Settings**. Finally, press the **ENTER** button.

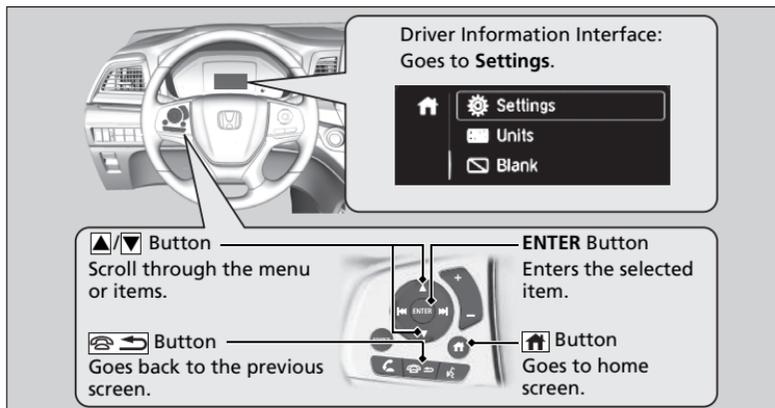

»» Vehicle Customization

To customize other features, press the  button.

 **List of customizable options** P. 146


 **Example of how to customize a setting**  
P. 150


Change to  before you attempt to change a customized setting.

### Customization flow

Press the  (home) button.

Instrument Panel

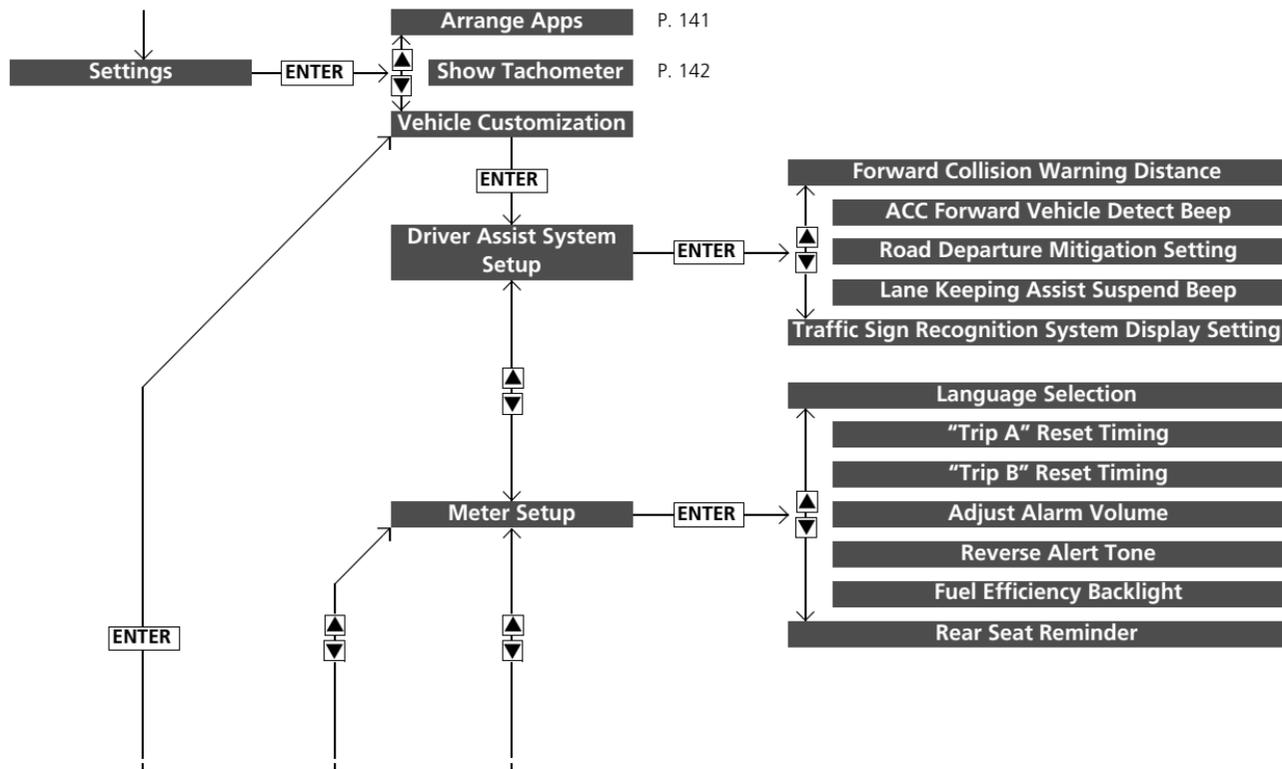

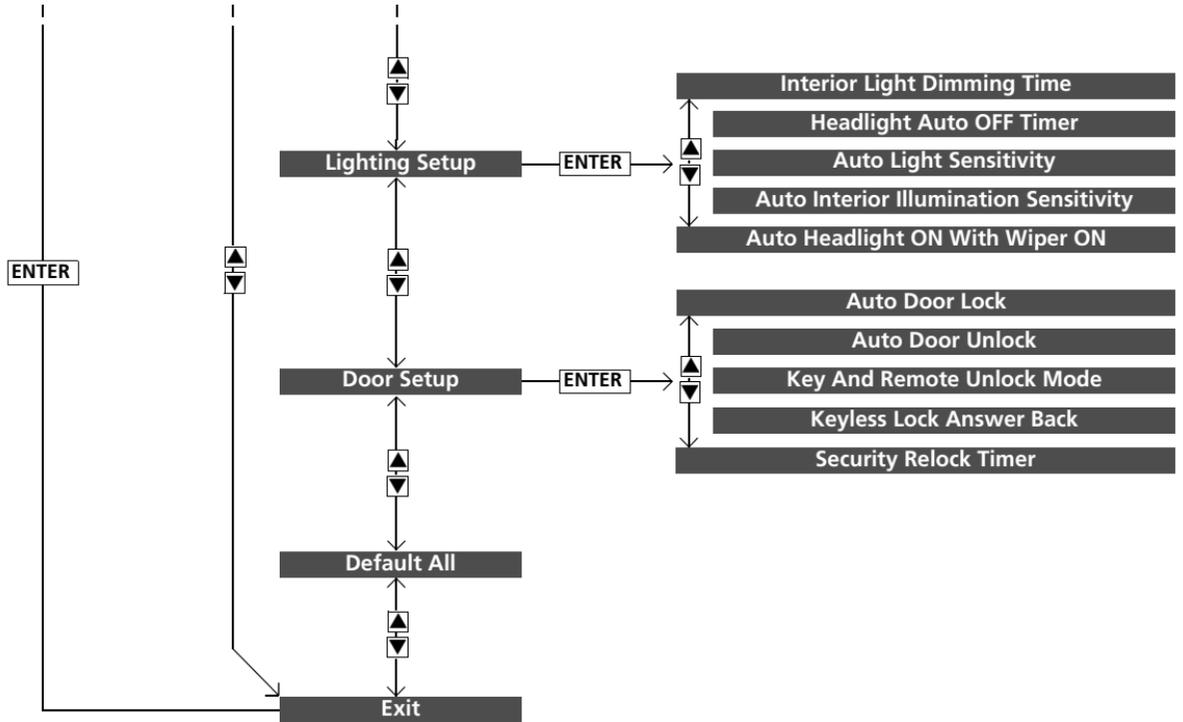

Instrument Panel

■ List of customizable options

Setup Group	Customizable Features	Description	Selectable Settings
Driver Assist System Setup	<b>Forward Collision Warning Distance</b>	Changes the distance at which CMBS™ alerts.	<b>Long/Normal*<sup>1</sup>/Short</b>
	<b>ACC Forward Vehicle Detect Beep</b>	Causes the system to beep when the system detects a vehicle, or when the vehicle goes out of ACC range.	<b>ON/OFF*<sup>1</sup></b>
	<b>Road Departure Mitigation Setting</b>	Changes the setting for the road departure mitigation system.	<b>Narrow/Normal*<sup>1</sup>/Wide/Warning Only</b>
	<b>Lane Keeping Assist Suspend Beep</b>	Causes the system to beep when the LKAS is suspended.	<b>ON/OFF*<sup>1</sup></b>
	<b>Traffic Sign Recognition System Display Setting</b>	Selects whether the traffic sign icons come on.	<b>ON*<sup>1</sup>/OFF</b>

\*1:Default Setting

Setup Group	Customizable Features	Description	Selectable settings
<b>Meter Setup</b>	<b>Language Selection</b>	Changes the displayed language.	<b>English<sup>*1</sup>/Français/Español</b>
	<b>“Trip A” Reset Timing</b>	Changes the setting of how the distance and average fuel economy of trip computer A is reset.	<b>When Fully Refueled/IGN OFF/Manually Reset<sup>*1</sup></b>
	<b>“Trip B” Reset Timing</b>	Changes the setting of how the distance and average fuel economy of trip computer B is reset.	<b>When Fully Refueled/IGN OFF/Manually Reset<sup>*1</sup></b>
	<b>Adjust Alarm Volume</b>	Changes the volume setting for buzzers, warnings, turn signals, and other alerting systems.	<b>High/Mid<sup>*1</sup>/Low</b>
	<b>Reverse Alert Tone</b>	Causes the beeper to sound once when the gear position is changed to <b>R</b> .	<b>ON<sup>*1</sup>/OFF</b>
	<b>Fuel Efficiency Backlight</b>	Turns the ambient meter feature on and off.	<b>ON<sup>*1</sup>/OFF</b>
	<b>Rear Seat Reminder</b>	Turns the Rear Seat Reminder feature on and off.	<b>ON<sup>*1</sup>/OFF</b>

\*1:Default Setting

Setup Group	Customizable Features	Description	Selectable settings
Lighting Setup	<b>Interior Light Dimming Time</b>	Changes the length of time the interior lights stay on after you close the doors.	<b>60sec/30sec<sup>*1</sup>/15sec</b>
	<b>Headlight Auto OFF Timer</b>	Changes the length of time the exterior lights stay on after you close the driver's door.	<b>60sec/30sec/15sec<sup>*1</sup>/0sec</b>
	<b>Auto Light Sensitivity</b>	Changes the timing for the headlights to come on.	<b>Max/High/Mid<sup>*1</sup>/Low/Min</b>
	<b>Auto Interior Illumination Sensitivity</b>	Changes the sensitivity of the brightness of the instrument panel when the headlight switch is in the <b>AUTO</b> position.	<b>Max/High/Mid<sup>*1</sup>/Low/Min</b>
	<b>Auto Headlight ON With Wiper ON</b>	Changes the settings for the wiper operation when the headlights automatically come on while the headlight switch is in the <b>AUTO</b> position.	<b>ON<sup>*1</sup>/OFF</b>


\*1:Default Setting

Setup Group	Customizable Features	Description	Selectable settings
<b>Door Setup</b>	<b>Auto Door Lock</b>	Changes the setting for when the doors automatically lock.	<b>With Vehicle Speed*1/Shift From P/OFF</b>
	<b>Auto Door Unlock</b>	Changes the setting for when the doors automatically unlock.	<b>All Doors When Driver's Door Opens*1/All Doors When Shifted To Park/All Doors When Ignition Switched OFF/OFF</b>
	<b>Key And Remote Unlock Mode</b>	Sets up either the driver's door or all doors to unlock on the first operation of the remote or built-in key.	<b>Driver Door*1/All Doors</b>
	<b>Keyless Lock Answer Back</b>	LOCK/UNLOCK - The exterior lights flash. LOCK (2nd push)- The beeper sounds.	<b>ON*1/OFF</b>
	<b>Security Relock Timer</b>	Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening a door.	<b>90sec/60sec/30sec*1</b>
<b>Default All</b>	—	Cancels customized changes you have made or restores them to their default setting.	<b>Cancel/Set</b>


\*1:Default Setting

### Example of how to customize a setting


Below are steps that explain how to change the reset timing for trip A from the default setting (manual) so that it resets automatically when the vehicle is fully refueled.

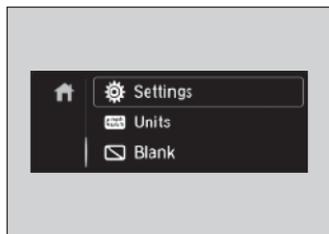


1. Press the  (home) button and then the  button to select **Settings**, then press the **ENTER** button.

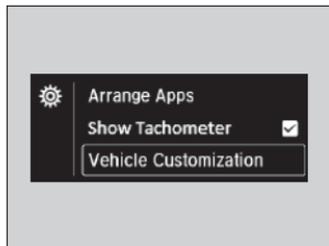


2. Press the  button to select **Vehicle Customization**, then press the **ENTER** button.

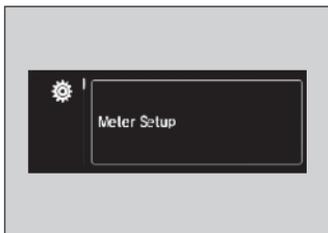

3. Press the  button to select **Meter Setup**, then press the **ENTER** button.
  - ▶ **Language Selection** appears first in the display.

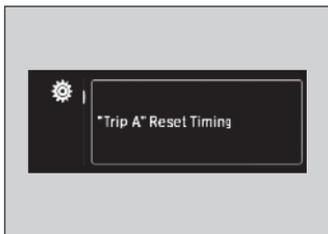

4. Press the  button to select **"Trip A" Reset Timing**, then press the **ENTER** button.
  - ▶ The display switches to the customization setup screen, where you can select **When Fully Refueled**, **IGN OFF**, **Manually Reset**, or **Exit**.

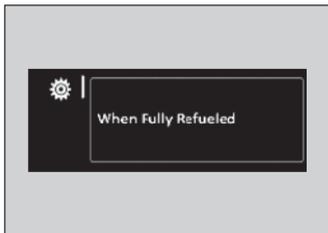

5. Press the  button to select **When Fully Refueled**, then press the **ENTER** button.
  - ▶ The **SETUP "When Fully Refueled"** screen appears, then the display returns to the customization menu screen.



6. Press the  button until **Exit** appears on the display, then press the **ENTER** button.
7. Repeat Step 6 until you return to the **Vehicle Customization** screen, then press the  (home) or  (back) button to return to the home screen.