

Driver Information Interface (A-type Meter)

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.


When a warning message displays, please check the message and contact a dealer and have the vehicle inspected if necessary. Please refer to the pages below if the

Engine oil pressure low or **Engine temperature too hot** message is displayed.

➤ **If the Engine oil pressure low Warning Appears** P. 795

➤ **Overheating** P. 791


Switching the Display

Press the  (home) button, then roll the left selector wheel to scroll to the content you want to see. Press the left selector wheel to see detailed information.

Switching the Display


You can add or delete the meter contents.

➤ **Customize Display** P. 136

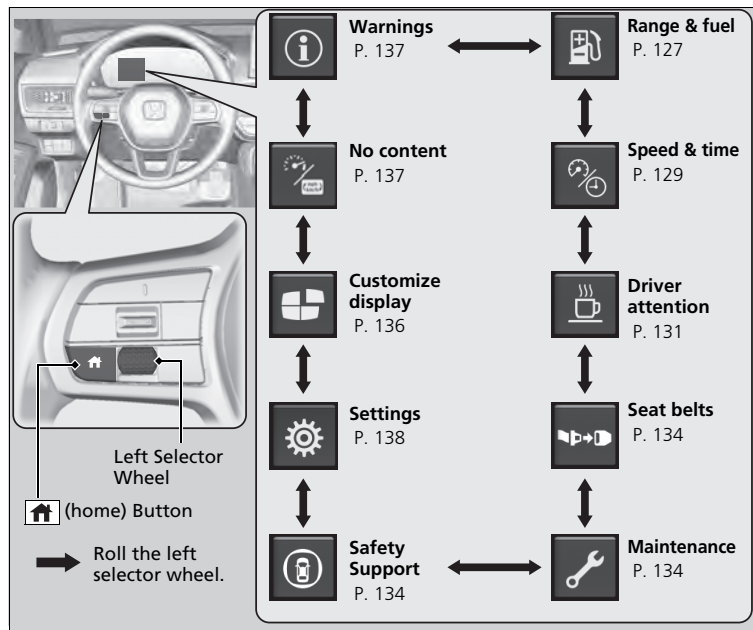

Range / Fuel / Trip Meter

Roll the left selector wheel to switch between trip meter A and trip meter B.

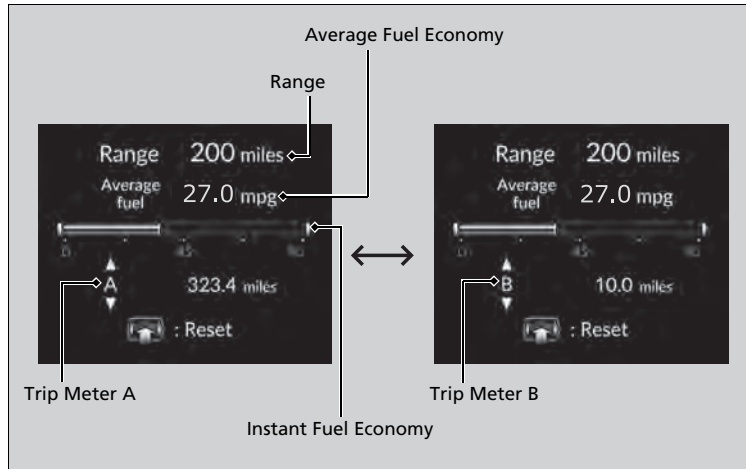

■ Trip meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press the left selector wheel and then select **Reset**.

- The trip meter is reset to 0.0.

■ Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

■ Average fuel economy

Shows the estimated average fuel economy of each trip meter in mpg or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ Instant fuel economy

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

⊗ Range

The driving range displayed is only an estimate and may differ to the actual distance the vehicle can travel.


⊗ Average fuel economy

You can change when to reset the average fuel economy.

- **Settings** P. 138

Speed/Time/Trip Meter

Roll the left selector wheel to switch between trip meter A and trip meter B.

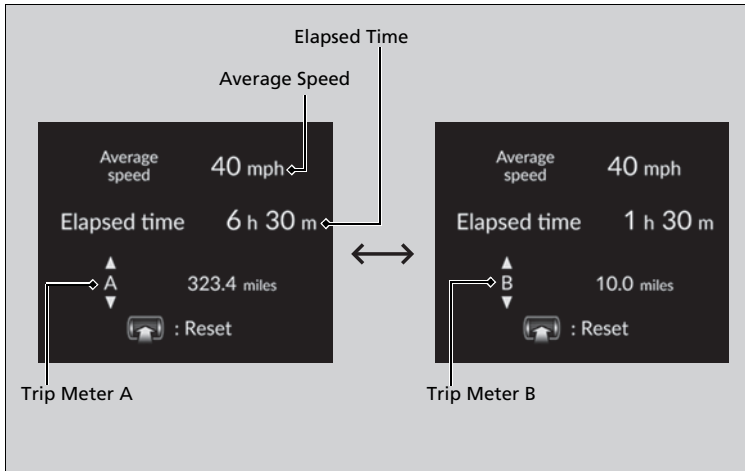

■ Trip meter

☞ Trip meter P. 128

■ Average speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

■ Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

☞ Average speed

You can change when to reset the average speed.

☞ Settings P. 138


☞ Elapsed time

You can change when to reset the elapsed time.

☞ Settings P. 138

Driver Attention Monitor

The Driver Attention Monitor analyzes steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

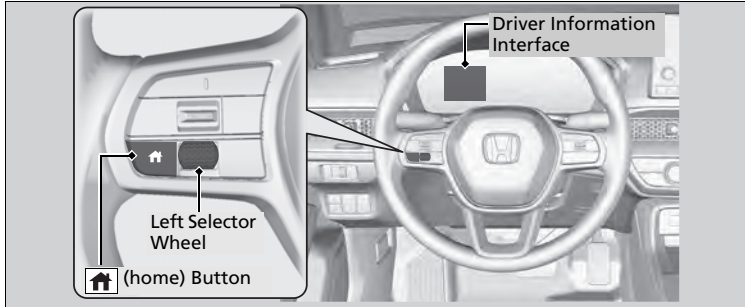


When you select **Driver attention** on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.

▶ **Switching the Display** P. 125


Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.

Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.

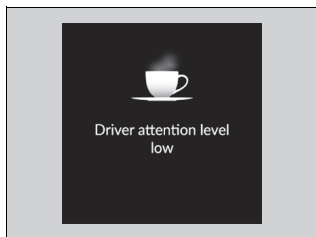

If two bars light up, the **Driver attention level low** message will appear.

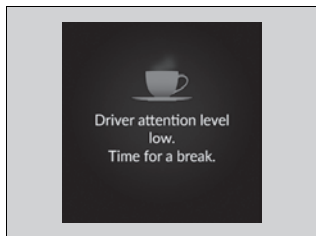

If one bar lights up, the **Driver attention level low. Time for a break.** message will appear, a beep will sound, and the steering wheel will vibrate.

If this message appears, stop in a safe location and rest for as long as needed.

The message will disappear when the left selector wheel is pressed or when the system has determined that the driver is driving normally.

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

The message does not appear when the traveling time is 30 minutes or less.

■ **The Driver Attention Monitor resets when:**

- The engine is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

■ **For the Driver Attention Monitor to function:**

- The vehicle must be traveling above 25 mph (40 km/h).
- The electric power steering (EPS) system indicator must be off.

■ **Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:**

- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
 - ▶ **Lane Keeping Assist System (LKAS)** P. 618
- The condition of the road is poor, e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner such as changing lanes or accelerating.

■ **Customizing**

You can change the Driver Attention Monitor settings. Select **Tactile and audible alert**, **Tactile alert** or **OFF**.

- ▶ **Settings** P. 138

▶▶ For the Driver Attention Monitor to function:

The bars on the driver information interface remain grayed out unless the Driver Attention Monitor is functioning.

■ Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

- **Seat Belt Reminder** P. 50

■ Maintenance

Shows the remaining oil life and Maintenance Minder™.

- **Maintenance Minder™** P. 695

■ Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS™, and blind spot information system* such as On, Off, or Failure, by color and letters.

The following colors indicate the status of any of the above mentioned systems:

- Green: The system is on.
- Gray: The system is off.
- Amber: There is a problem with the system.

⊗ Safety Support

If a system is indicated by the color amber, have your vehicle checked by a dealer immediately.

To turn on or off each system, first rotate the left selector wheel to switch displays. From the next display you can select which system to turn on or off.

- **Road Departure Mitigation system On and Off** P. 642

- **Blind Spot Information System On and Off** P. 549


- **CMBS™ On and Off** P. 559

You can also confirm the status of each function by the color of the safety support indicator.

- **Safety Support Indicator (Amber)** P. 115

- **Safety Support Indicator (Green/Gray)** P. 117


* Not available on all models

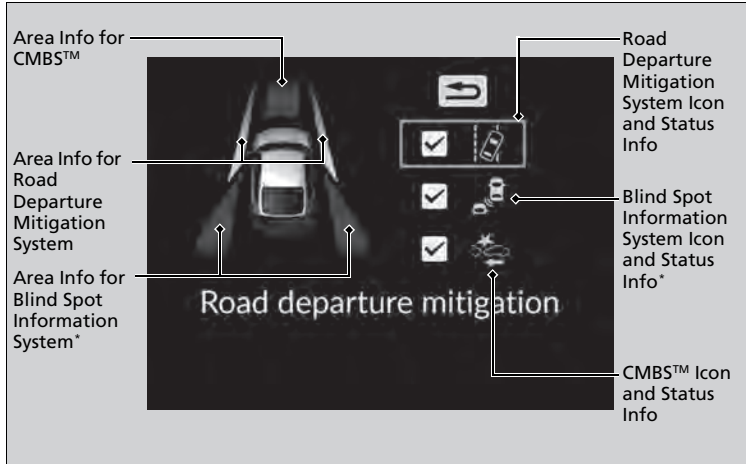


* Not available on all models

■ Customize Display

You can choose which icons to display on the home screen.

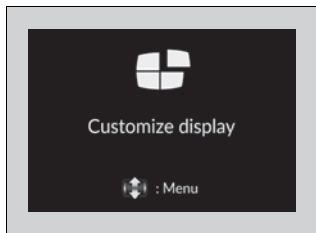

1. Roll the left selector wheel to scroll to select **Customize display**, then press the left selector wheel.
2. Roll the left selector wheel.

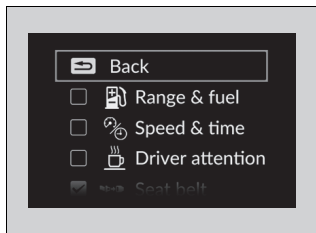

3. Roll the left selector wheel to scroll between icons, then press the left selector wheel to check or uncheck them.

⊗ Customize Display

Icons that are gray cannot be removed from the home screen.


Continuously variable transmission models


When you customize settings, shift to **P**.

Manual transmission models

When you customize settings, set the parking brake.

Speed/Distance Units



Press and hold  to change speed/distance units

Enables you to show another unit on the driver information interface and set the displayed measurements to read in either miles and mph or km and km/h.

Press and hold the left selector wheel when you select **No content** on the driver information interface. Each time you do this, the unit will change from miles and mph to km and km/h or vice versa. After this, a confirmation screen will appear for a few seconds.

Warnings

You can check if there are any active warning messages.

» Warnings


If there are multiple warnings, you can roll the left selector wheel to see other warnings.


Continued

Settings

Use the driver information interface to customize certain features.

How to customize

Press the  (home) button, then select the **Settings** screen by rolling the left selector wheel while the power mode is in ON, the vehicle is at a complete stop, and the shift position is in **P** (continuously variable transmission) or the parking brake is set (manual transmission). Then, press the left selector wheel.

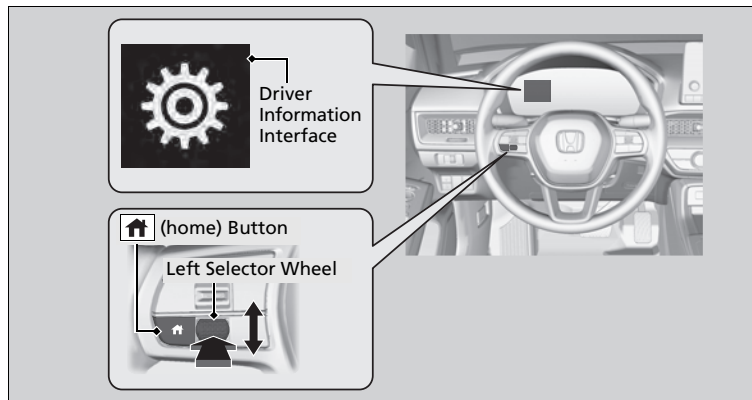

Settings

To customize other features, roll the left selector wheel.

► **List of customizable options** P. 139

► **Example of customization settings** P. 145

Continuously variable transmission models

When you customize settings, shift to **P**.

Manual transmission models

When you customize settings, set the parking brake.

■ List of customizable options

Setup Group	Customizable Features	Description	Selectable Settings
Driver assist system setup	TPMS calibration*	Calibrates the TPMS.	Cancel/Calibrate
	Forward collision warning distance	Changes the distance at which CMBS™ alerts.	Long/Normal*¹/Short
	ACC forward vehicle detect beep	Causes the system to beep when a vehicle is detected or when the vehicle is out of ACC with Low Speed Follow* range.	ON/OFF*¹
	Road departure mitigation setting	Changes the setting for the Road Departure Mitigation system.	Narrow/Normal*¹/Wide/Warning only
	Lane keeping assist suspend beep	Causes the system to beep when the LKAS is suspended.	ON/OFF*¹
	Blind spot information*	Changes the setting for the blind spot information.	Audible and visual alert*¹/Visual alert

*1:Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Driver assist system setup	Traffic sign recognition system display setting	Turns the traffic sign recognition system on and off.	ON^{*1}/OFF
	Traffic sign recognition system exceeding speed warning	Turns the traffic sign recognition system over speed warning on and off.	ON^{*1}/OFF
	Speed limit warning threshold setting	Changes the setting speed the traffic sign recognition system over speed warning is activated.	Speed limit^{*1}/ Speed limit+3mph/ Speed limit+5mph/ Speed limit+10mph (When mph is selected) Speed limit^{*1}/ Speed limit+5km/h/ Speed limit+10km/h/ Speed limit+15km/h (When km/h is selected)
	Driver attention monitor	Changes the setting for the driver attention monitor.	Tactile and audible alert^{*1}/ Tactile alert/OFF

*1:Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Meter setup	Language selection	Changes the displayed language.	English^{*1}/Français/ Español
	Adjust outside temp. display	Adjusts the temperature reading by a few degrees.	-5°F ~ ±0°F^{*1} ~ +5°F (U.S.) -3°C ~ ±0°C^{*1} ~ +3°C (Canada)
	"Trip A" reset timing	Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A.	When fully refueled/ IGN OFF/Manually reset^{*1}
	"Trip B" reset timing	Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B.	When fully refueled/ IGN OFF/Manually reset^{*1}
	Adjust alarm volume	Changes the alarm volume, such as buzzers, warnings, turn signal sound, and so on.	High/Mid^{*1}/Low
	Fuel efficiency backlight	Turns the ambient meter feature on and off.	ON^{*1}/OFF
	Rear seat reminder	Turns the Rear Seat Reminder feature on and off.	ON^{*1}/OFF
	Speed/distance units	Selects the trip meter units.	km/h·km/mph·miles^{*1} (U.S.) km/h·km^{*1}/mph·miles (Canada)
Tachometer	Selects whether the tachometer is displayed on the instrument panel.	ON^{*1}/OFF	

*1:Default Setting

Continued

Setup Group	Customizable Features	Description	Selectable Settings
Keyless access setup*	Door unlock mode	Changes which doors unlock when you grab the driver's door handle.	Driver door only*¹/All doors
	Keyless access light flash	Causes some exterior lights to flash when you unlock/lock the doors.	ON*¹/OFF
	Keyless access beep	Causes the beeper to sound when you unlock/lock the doors.	ON*¹/OFF
	Remote start system ON/OFF*	Turns the remote engine start feature on and off.	ON*¹/OFF
Lighting setup	Auto high-beam	Turns the auto high-beam on and off.	ON*¹/OFF
	Interior light dimming time	Changes the length of time the interior lights stay on after you close the doors.	60sec/30sec*¹/15sec
	Headlight auto off timer	Changes the length of time the exterior lights stay on after you close the driver's door.	60sec/30sec/15sec*¹/0sec
	Auto light sensitivity*	Changes the timing for the headlights to come on.	Max/High/Mid*¹/Low/Min
	Auto headlight ON with wiper ON	Changes the settings for the wiper operation when the headlights automatically come on while the headlight switch is in the AUTO position.	ON*¹/OFF

*1:Default Setting

* Not available on all models

Setup Group	Customizable Features	Description	Selectable Settings
Door setup	Auto door lock	Changes the setting for when the doors automatically lock.	<p>Continuously variable transmission models With vehicle speed^{*1}/Shift from P/OFF</p> <p>Manual transmission models With vehicle speed^{*1}/OFF</p>
	Auto door unlock	Changes the setting for when the doors automatically unlock.	<p>Continuously variable transmission models All doors when driver's door opens^{*1}/All doors when shifted to Park/All doors when ignition switched OFF/OFF</p> <p>Manual transmission models All doors when driver's door opens^{*1}/All doors when ignition switched OFF/OFF</p>
	Key and remote unlock mode	Sets up either the driver's door or all doors to unlock on the first operation of the keyless remote or built-in key.	Driver door^{*1}/All doors
	Walk away auto lock[*]	Changes the settings for the automatic locking the doors when you walk away from the vehicle while carrying the keyless remote.	ON/OFF^{*1}
	Keyless lock answer back	LOCK/UNLOCK- The exterior lights flash. LOCK (2nd push)- The beeper sounds.	ON^{*1}/OFF
	Keyless remote power window control	Turns remote window control using the keyless remote on and off.	ON^{*1}/OFF

*1:Default Setting

* Not available on all models

Continued


Setup Group	Customizable Features	Description	Selectable Settings
Door setup	Lockout prevention*	Changes the settings for the lockout protection function.	ON*1/OFF
Maintenance reset	—	Resets the Maintenance Minder display when you have performed the maintenance service.	(Selects Reset Items)
Default all	—	Cancels customized changes you have made or restores them to their default setting.	Cancel/Set


*1:Default Setting


* Not available on all models

■ Example of customization settings


The steps for changing the **“Trip A” reset timing** setting to **When fully refueled** are shown below. The default setting for **“Trip A” reset timing** is **Manually reset**.

1. Press the  (home) button to select **Settings**, then press the left selector wheel.

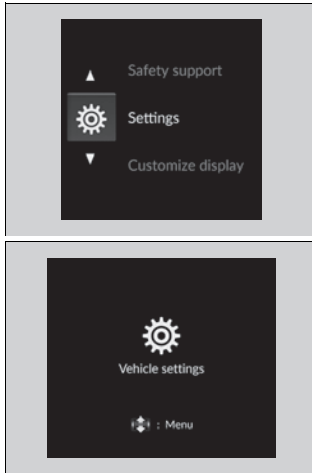


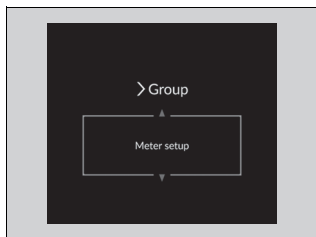


2. Roll the left selector wheel until **Meter setup** appears on the display.
3. Press the left selector wheel.
 - **Language selection** appears first in the display.

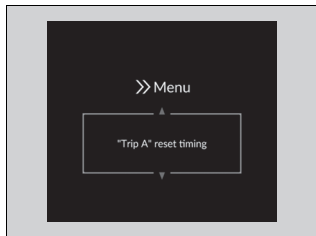

4. Roll the left selector wheel until **"Trip A" reset timing** appears on the display, then press the left selector wheel.
 - The display switches to the customization setup screen, where you can select **When fully refueled**, **IGN OFF**, **Manually reset**, or **Back**.

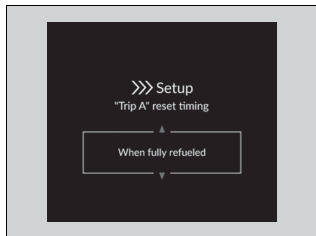

5. Roll the left selector wheel and select **When fully refueled**, then press the left selector wheel.
 - The **Selected** appears, then the display returns to the customization menu screen.

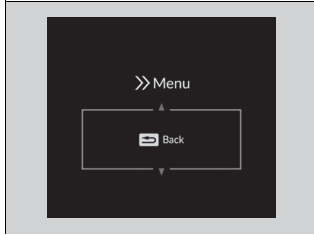

6. Press the left selector wheel after **Back** appears on the display.
7. Repeat Step 6 until you return to the normal screen.

Driver Information Interface Left Side Area (B-type-Meter)

Shows the current mode for audio and phone information, etc.

- ▶ **Audio Remote Controls** P. 260
- ▶ **Bluetooth® HandsFreeLink®** P. 464

■ Clock

Shows the clock.

▶ Clock

You can adjust the time manually and change the clock display to show the 12 hour clock or 24 hour clock.


- ▶ **Clock** P. 174

You can choose whether the clock is displayed on the driver information interface.

- ▶ **Customize Display** P. 151

■ Stopwatch*

Measures the lap time, and displays the previously measured times and the fastest lap time.

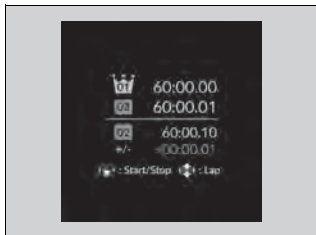

■ Measuring LAP Time

1. Change the display content on the left side area to **Stopwatch**.

▶ **Select the display content on the left side area** P. 153

2. Press the left selector wheel to display the stopwatch menu screen.

3. Select **Start/Stop** or **LogR Lap Timer** and press the left selector wheel to display the lap time measurement screen.

4. Press the left selector wheel to start measurement.

5. Press the left selector wheel to stop measurement.

▶ To measure the time per lap, roll the left selector wheel at the end of each lap.

▶ To return to the stopwatch menu screen, press and hold the left selector wheel.

▶▶ Stopwatch*


Be sure to use this measurement function only where and when it is safe to do so.

Lap time is displayed from 00:00.00 to 9:59:59.99.

A maximum of 20 lap times can be stored at a time.

When measuring lap time with Honda LogR, times are displayed on the driver information interface.

▶ **Honda LogR*** P. 414

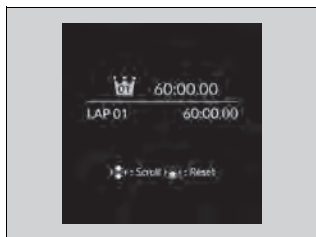

■ Checking/Clearing history


To check or clear the history, select **History/Reset** on the stopwatch menu screen and press the left selector wheel.

- ▶ To scroll through the lap times, roll the left selector wheel.
- ▶ To clear the history, press the left selector wheel on the stopwatch history screen while the lap time is not being measured, then select and press **Reset**.
- ▶ To return to the stopwatch menu screen, press and hold the left selector wheel.


Customize Display

Arrange audio source on the left side area


You can choose which sources to display on the audio source screen.

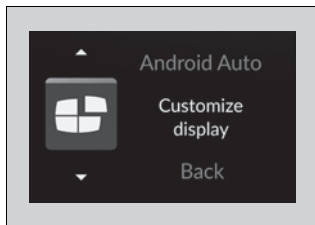

1. Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

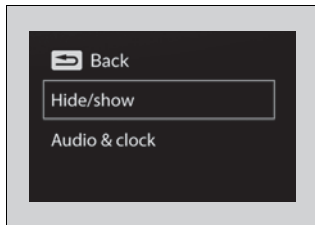

2. Roll the left selector wheel to scroll to select **Hide/show**, then press the left selector wheel.

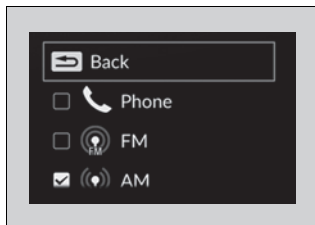

3. Roll the left selector wheel to scroll between audio sources, then press the left selector wheel to check or uncheck them.

Customize Display

Continuously variable transmission models

When you customize settings, shift to [P].

Manual transmission models


When you customize settings, set the parking brake.

Models with Auto Idle Stop


■ Turn the displaying on the left side area on and off

You can select whether the current audio information and clock appear on the left side area.


Instrument Panel

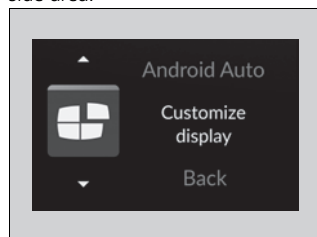

1. Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

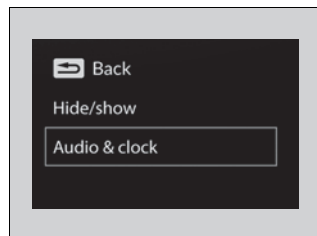

2. Roll the left selector wheel to scroll to select **Audio & clock**, then press the left selector wheel.

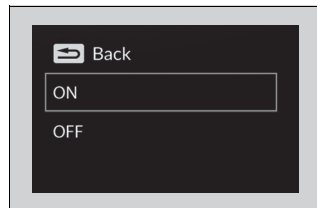

3. Roll the left selector wheel to scroll to select your desired settings, then press the left selector wheel.


Models without Auto Idle Stop

■ **Select the display content on the left side area**


You can change the display content on the left side area. Select **Audio & clock**, **Stopwatch**, or **OFF**.



1. Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

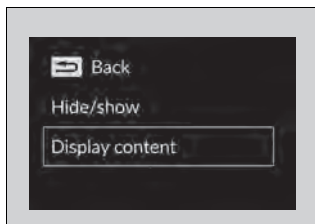

2. Roll the left selector wheel to scroll to select **Display content**, then press the left selector wheel.

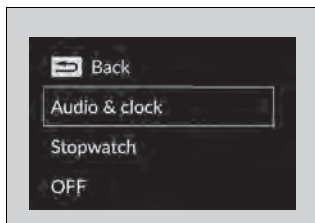

3. Roll the left selector wheel to scroll to select your desired content, then press the left selector wheel.

Driver Information Interface Right Side Area (B-type-Meter)

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.

When a warning message displays, please check the message and contact a dealer and have the vehicle inspected if necessary. Please refer to the pages below if the **Engine oil pressure low** or **Engine temperature too hot** message is displayed.

- **If the Engine oil pressure low Warning Appears** P. 795
- **Overheating** P. 791

Switching the Display




Roll the right selector wheel to view different types of content.

Switching the Display


You can add or delete the meter contents.

► **Customize Display** P. 170


Models with Auto Idle Stop

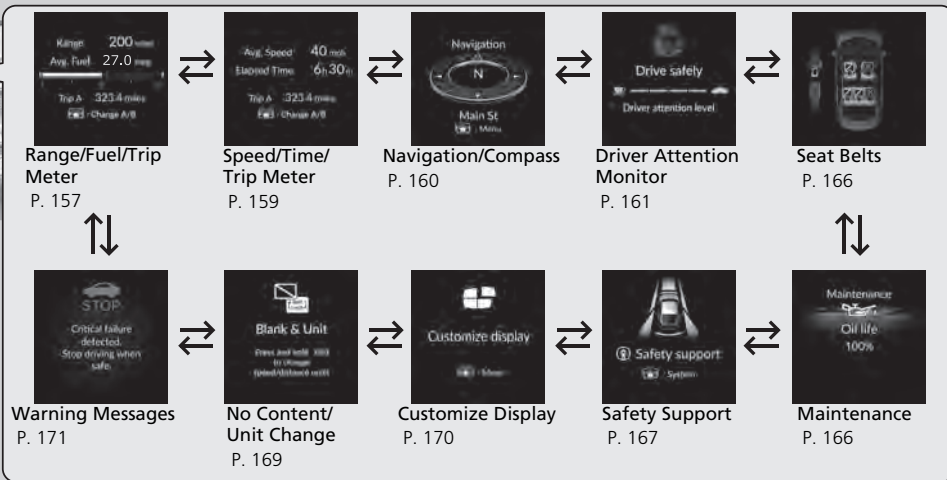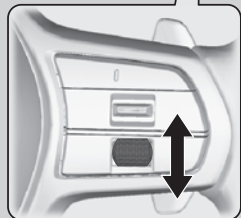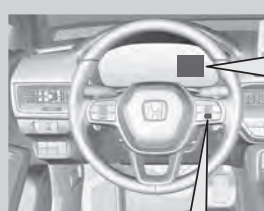

Models without Auto Idle Stop

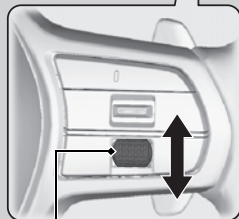


Right Selector Wheel

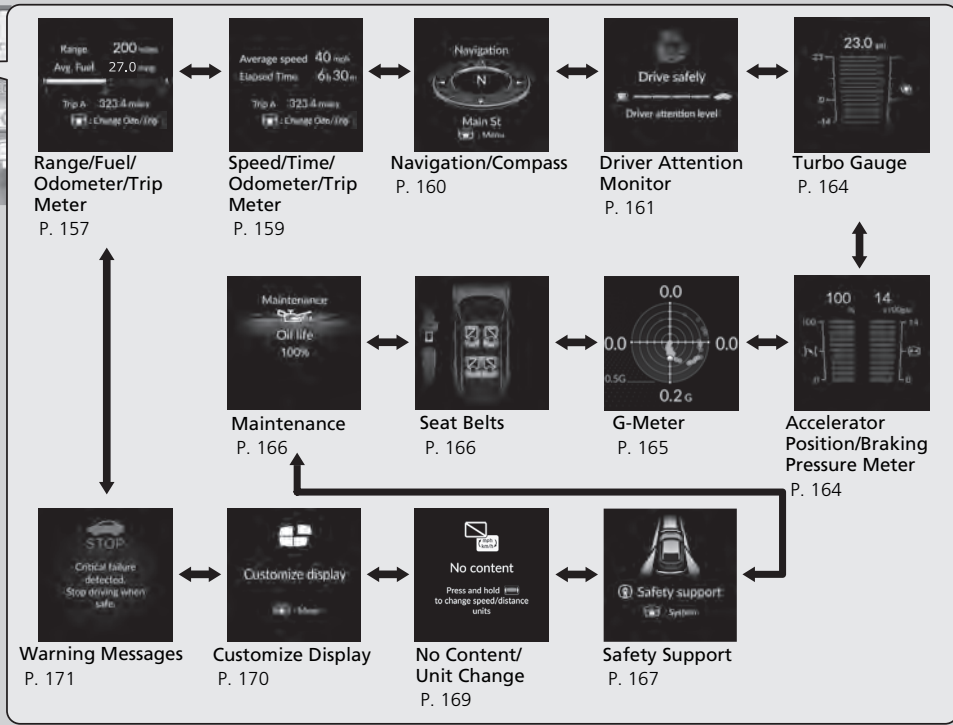

Range/Fuel/Odometer*/Trip Meter

Press the right selector wheel to switch trip meter A, trip meter B, and odometer*.

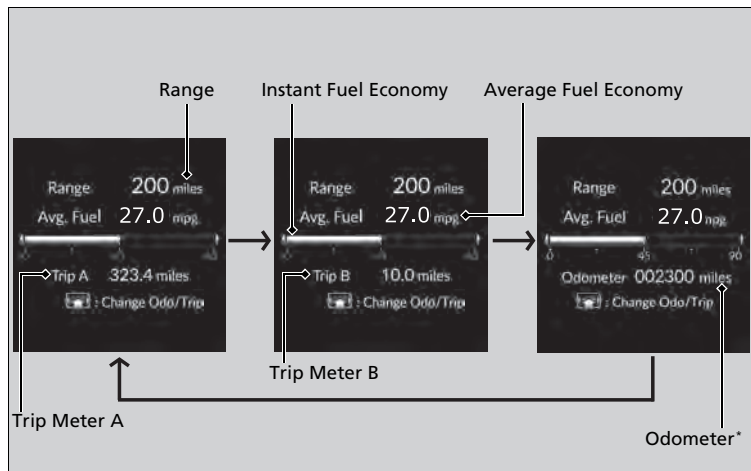

* Not available on all models

■ Odometer*

Shows the total number of miles or kilometers that your vehicle has accumulated.

■ Trip meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press and hold the right selector wheel and then select **Reset**.

- The trip meter is reset to 0.0.

■ Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

■ Average fuel economy

Shows the estimated average fuel economy of each trip meter in mpg or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ Instant fuel economy

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

* Not available on all models

⊗ Range

The driving range displayed is only an estimate and may differ to the actual distance the vehicle can travel.


⊗ Average fuel economy

You can change when to reset the average fuel economy.

➤ **Customized Features** P. 390

Speed/Time/Odometer*/Trip Meter

Press the right selector wheel to switch trip meter A, trip meter B, and odometer*.

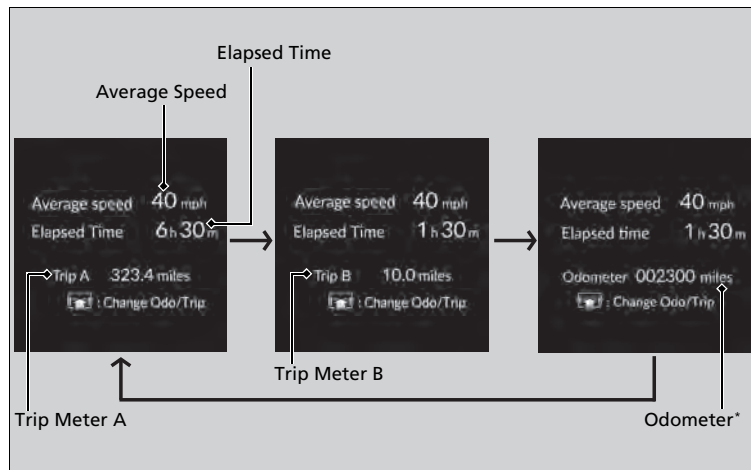

* Not available on all models

■ Odometer*

➤ Odometer* P. 158

■ Trip meter

➤ Trip meter P. 158

■ Average speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

■ Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

■ Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system, Apple CarPlay or Android Auto, turn-by-turn directions to your destination appear.

➤ **Refer to the Navigation System Manual**

➤ **Android Auto™** P. 285

➤ **Apple CarPlay** P. 346

⊗ Average speed

You can change when to reset the average speed.

➤ **Customized Features** P. 390

⊗ Elapsed time

You can change when to reset the elapsed time.

➤ **Customized Features** P. 390

⊗ Navigation

You can select whether to have the turn-by-turn display come on or not during the route guidance.

➤ **Customized Features** P. 390

When the compass or turn-by-turn directions are displayed, you can control some navigation system functions on the driver information interface by pressing the right selector wheel.


➤ **Refer to the Navigation System Manual**

Turn-by-turn directions may not be available for all apps.

* Not available on all models

Driver Attention Monitor

The Driver Attention Monitor analyzes steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

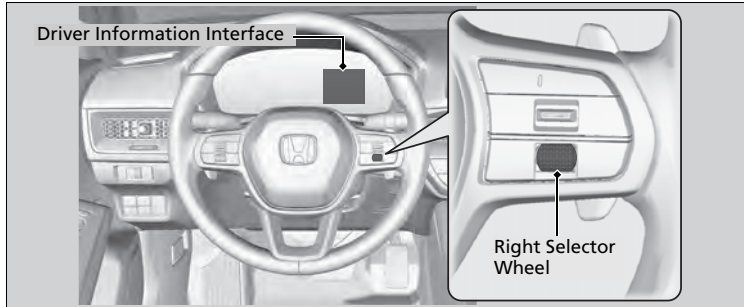


When you select Driver Attention Monitor on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.

▶ **Switching the Display** P. 155


Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.

Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.

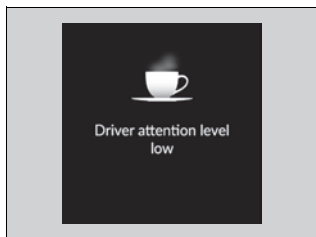

If two bars light up, the **Driver attention level low** message will appear.

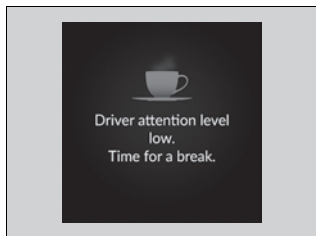

If one bar lights up, the **Driver attention level low. Time for a break.** message will appear, a beep will sound, and the steering wheel will vibrate.

If this message appears, stop in a safe location and rest for as long as needed.

The message will disappear when the right selector wheel is rolled or when the system has determined that the driver is driving normally.

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

The message does not appear when the traveling time is 30 minutes or less.

■ **The Driver Attention Monitor resets when:**

- The engine is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

■ **For the Driver Attention Monitor to function:**

- The vehicle must be traveling above 25 mph (40 km/h).
- The electric power steering (EPS) system indicator must be off.

■ **Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:**

- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
 - **Lane Keeping Assist System (LKAS)** P. 618
- The condition of the road is poor, e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner such as changing lanes or accelerating.

■ **Customizing**

You can change the Driver Attention Monitor settings. Select **Tactile And Audible Alert, Tactile Alert, or OFF**.

- **Customized Features** P. 390


⌘ For the Driver Attention Monitor to function:

The bars on the driver information interface remain grayed out unless the Driver Attention Monitor is functioning.

■ Turbo Gauge*

When the turbo is producing boost, this gauge indicates boost pressure is building.

■ Accelerator Position/Braking Pressure Meter*

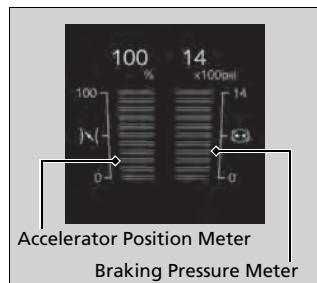

■ Accelerator Position Meter


Displays the accelerator position in degrees of %.

■ Braking Pressure Meter

Displays the brake pressure in psi when the brake is applied.

G-Meter*

Displays the strength (G) and direction of the load that is applied to the vehicle during driving.

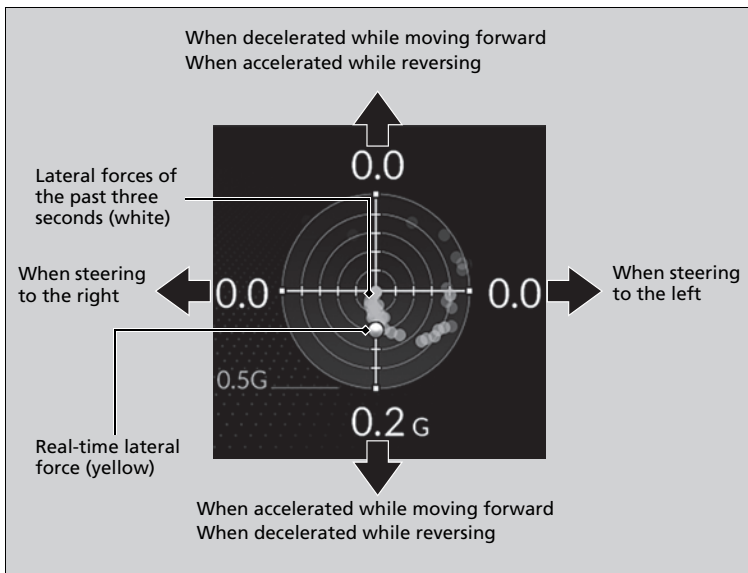

* Not available on all models

Continued

G-Meter*

You can change the maximum displayed strength (G).

▶ Honda LogR* P. 414

■ Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

- **Seat Belt Reminder** P. 50

■ Maintenance

Shows the remaining oil life and Maintenance Minder™.

- **Maintenance Minder™** P. 695

Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS™, Low Speed Braking Control* and blind spot information system such as On, Off, or Failure, by color and letters.

The following colors indicate the status of any of the above mentioned systems:

- Green: The system is on.
- Gray: The system is off.
- Amber: There is a problem with the system.

Safety Support

If a system is indicated by the color amber, have your vehicle checked by a dealer immediately.

To turn on or off each system, first press the right selector wheel to switch displays. From the next display you can select which system to turn on or off.

➤ **Road Departure Mitigation system On and Off** P. 642

➤ **Blind Spot Information System On and Off** P. 549

➤ **System On and Off** P. 570, 575

➤ **CMBS™ On and Off** P. 559

You can also confirm the status of each function by the color of the safety support indicator.


➤ **Safety Support Indicator (Amber)** P. 115

➤ **Safety Support Indicator (Green/Gray)** P. 117

Models with Low Speed Braking Control

Even when the Low Speed Braking Control icon is green, if the parking sensor is turned off for the rear only, the brake assist will not operate when reversing.

➤ **Turning off All Rear Sensors** P. 676

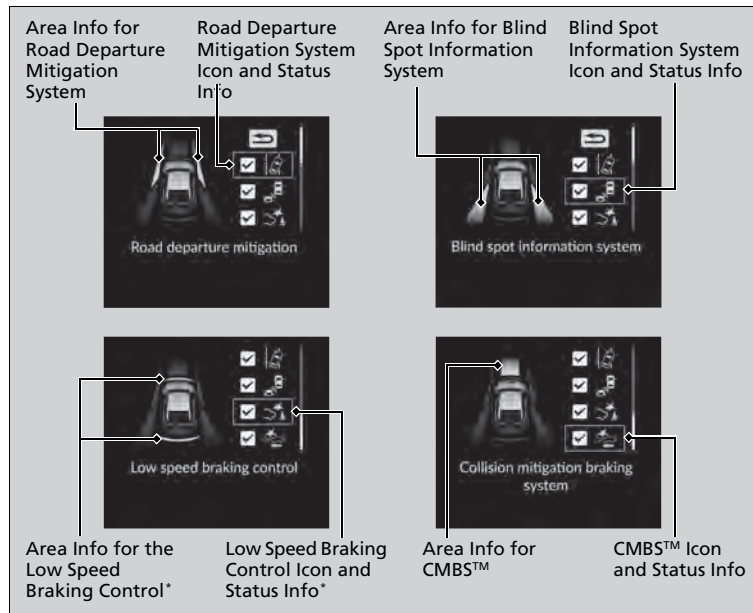


* Not available on all models

Speed/Distance Units

Models with Auto Idle Stop



Models without Auto Idle Stop

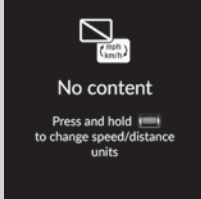


Enables you to show another unit on the driver information interface and set the displayed measurements to read in either miles and mph or km and km/h.

Press and hold the right selector wheel when you select the Blank/Unit change screen on the driver information interface. Each time you do this, the unit will change from miles and mph to km and km/h or vice versa. After this, a confirmation screen will appear for a few seconds.


■ Customize Display

■ Arrange content on the right side area

You can choose which contents to display on the right side area.

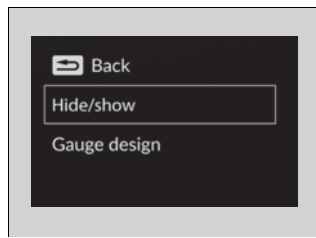

1. Press the right selector wheel when you select the **Customize display** on the driver information interface.
2. Roll the right selector wheel to scroll to select **Hide/show**, then press the right selector wheel.

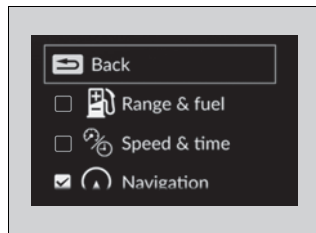

3. Roll the right selector wheel to scroll between contents, then press the right selector wheel to check or uncheck them.

⊗ Arrange content on the right side area

Contents that are gray cannot be removed from the right side area.

Continuously variable transmission models


When you customize settings, shift to **P**.

Manual transmission models


When you customize settings, set the parking brake.

■ Change gauge design

You can change the gauge design to a round or bar design.

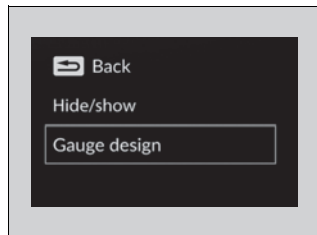

1. Press the right selector wheel when you select the **Customize display** on the driver information interface.
2. Roll the right selector wheel to scroll to select **Gauge design**, then press the right selector wheel.

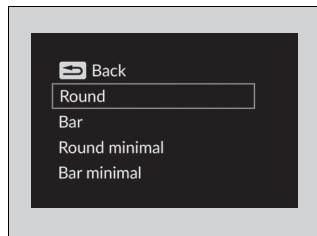

3. Roll the right selector wheel to scroll to select your desired settings, then press the right selector wheel.

■ Warnings

You can check if there are any active warning messages.

⌘ Change gauge design

When using the **Round minimal** or **Bar minimal** gauge design, a simplified display is used when ACC with Low Speed Follow* is in operation.

The **+R** gauge design cannot be changed.

⌘ Warnings

If there are multiple warnings or informations, you can roll the right selector wheel to see other warnings.

* Not available on all models