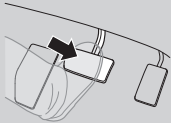
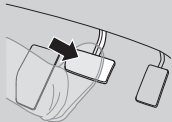
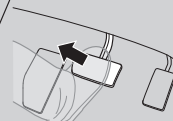
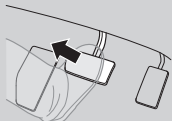
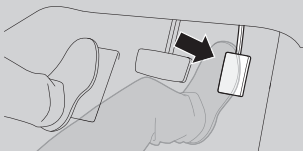




Auto Idle Stop Function

To improve fuel economy, the engine stops and then restarts as detailed below. When Auto Idle Stop is on, the Auto Idle Stop indicator (green) comes on.  **P 492**

At	Automatic transmission	Engine status
Deceleration 	 Stop the vehicle and depress the brake pedal.	 On
Stop 	U.S. Canada     Keep the brake pedal depressed. With the automatic brake hold system activated, you can release the brake pedal when the (A) indicator comes on.	 Off
Start-up	  Release the brake pedal. With the automatic brake hold system activated, depress the accelerator pedal.	 Restarting


Indicator	Name	On/Blinking	Explanation	Message
	Auto Idle Stop Indicator (Green)	Comes on when Auto Idle Stop is in operation. The engine automatically shuts off.	 Auto Idle Stop P. 492	—
	Auto Idle Stop OFF Indicator	Comes on when the Auto Idle Stop system has been turned off by the Auto Idle Stop OFF Button.	 Auto Idle Stop System ON/OFF P. 493	
	Auto Idle Stop System Indicator (Amber)	- Comes on for a few seconds when you set the power mode to ON, then goes off. - Blinks if there is a problem with the Auto Idle Stop system.		

Indicator	Name	On/Blinking	Explanation	Message
	Auto Idle Stop Suspend Indicator	Comes on while Auto Idle Stop is temporarily suspended in the following situations.	—	—
		- Brake pedal is not fully pressed.	Depress the brake pedal firmly.	 Idle Stop Temporarily Interrupted: Fully Press Brake to Engage Hold  for Status OFF
		- The transmission is in a position other than D .	 Auto Idle Stop P. 492	 Idle Stop Temporarily Interrupted: Switch Gear To Enable Hold  for Status OFF
		- System charging is prioritized.		 Idle Stop Temporarily Interrupted: System Warming Up Or Charging Hold  for Status OFF
		- Climate control system is prioritized.		 Idle Stop Temporarily Interrupted: Adjust Climate to Enable Hold  for Status OFF
		- Engine coolant temperature is not in operating range.		 Idle Stop Temporarily Interrupted: System Warming Up Or Charging Hold  for Status OFF
		- The Intelligent Traction Management is set to Snow .		 Idle Stop Temporarily Interrupted: Switch Drive Mode to Enable Hold  for Status OFF
		- The battery temperature is too low. - Auto Idle Stop does not activate for some reason.		 Idle Stop Temporarily Interrupted Hold  for Status OFF

  Indicator	Name	On/Blinking	Explanation	Message
	Auto Idle Stop Suspend Indicator	—	If you press and hold the Auto Idle Stop OFF button, you can select whether to display the status messages or not.	
	Lane Keeping Assist System (LKAS) Indicator (Amber)	- Comes on for a few seconds when you set the power mode to ON, then goes off. - Comes on if there is a problem with the LKAS.	Stays on constantly - Have your vehicle checked by a dealer.	
	Lane Keeping Assist System (LKAS) Indicator (White/Green)	- Lights up in white when you press the LKAS button. - Lights up in green when the LKAS is in operation.	☑ Lane Keeping Assist System (LKAS) P. 539	—

Auto Idle Stop

To help maximize fuel economy, the engine automatically stops when the vehicle comes to a stop, depending on environmental and vehicle operating conditions. The indicator (green) comes on at this time.

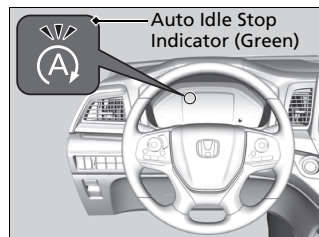


The environmental and vehicle conditions that impact Auto Idle Stop system operation are varied.

► **Auto Idle Stop Activates When:** P. 494, 495

The engine then restarts once the vehicle is about to move again, and the indicator (green) goes off.

► **The Engine Automatically Restarts When:** P. 495

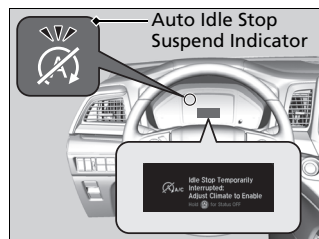

The Auto Idle Stop suspend indicator comes on and a message appears on the driver information interface when the Auto Idle Stop system cannot be activated.

► **Indicators** P. 88

► **Auto Idle Stop System ON/OFF** P. 493

If the driver's door is opened while the indicator comes on, a buzzer sounds to notify you that the Auto Idle Stop function is in operation.

A message associated with Auto Idle Stop appears on the driver information interface.

► **Indicators** P. 102

Auto Idle Stop


The 12-volt battery installed in this vehicle is specifically designed for a model with Auto Idle Stop. Using a 12-volt battery other than this specified type may shorten the 12-volt battery life, and prevent Auto Idle Stop from activating. If you need to replace the 12-volt battery, make sure to select the specified type. Ask a dealer for more details.

The duration of the Auto Idle Stop operation:

- **Increase** in the ECON mode, compared to when the ECON mode is off, with climate control in use.

► **ECON Button** P. 497

Auto Idle Stop System ON/OFF

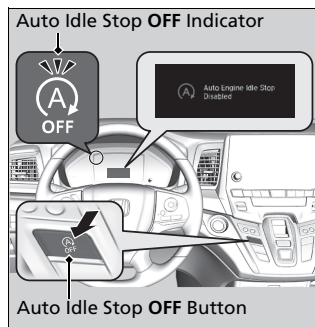

To turn the Auto Idle Stop system off, press this button. The Auto Idle Stop system stops.

- ▶ The Auto Idle Stop system will stop and the indicator will come on.

The Auto Idle Stop system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

Auto Idle Stop System ON/OFF

If you turn off the Auto Idle Stop system while it is activated, the engine will restart.

If you hold the Auto Idle Stop **OFF** button, you can disable idle stop messages.

▶ **Indicators** P. 102

■ Auto Idle Stop Activates When:

The vehicle stops with the gear position in **[D]** and the brake pedal depressed. When you put the transmission into **[P]**, the Auto Idle Stop continues to operate, even if the brake pedal is released.

► If you depress the brake pedal, the engine may automatically restart.

■ Auto Idle Stop does not activate when:

- The Auto Idle Stop **OFF** button is pressed.
- The driver's seat belt is not fastened.
- The engine is not adequately warmed up or coolant temperature is high.
- The transmission fluid temperature is low or high.
- The vehicle comes to a stop again before the vehicle speed reaches 3 mph (5 km/h) after the engine starts.
- The vehicle is stopped on a steep incline.
- The transmission is in a position other than **[D]**.
- The engine is started with the hood open.
 - Turn off the engine. Close the hood before you restart the engine to activate Auto Idle Stop.
- The battery charge is low.
- The internal temperature of the battery is 14°F (–10°C) or less.
- The climate control system is in use, and the outside temperature is below –4°F (–20°C) or over 104°F (40°C).
- The climate control system is in use, and the temperature is set to **Hi** or **Lo**.
- **[FRONT FAN]** is on (indicator on).
- The rear fan is set to maximum speed.
 - Auto Idle Stop may not activate under other conditions when the rear climate control system is in use.
- When the Intelligent Traction Management is set to **Snow**.

⊠ Auto Idle Stop Activates When:

Do not open the hood while the Auto Idle Stop function is activated. If the hood is opened, the engine will not restart automatically.

In this case, restart the engine with the **ENGINE START/STOP** button.

⊠ **Starting the Engine** P. 476

When ACC with Low Speed Follow is in operation, the vehicle stops without depressing the brake pedal and Auto Idle Stop may activate. In such cases, the engine may restart if you change the shift position other than **[D]**.

Pressing the **ENGINE START/STOP** button causes the engine to no longer restart automatically. Follow the standard procedure to start the engine.

⊠ **Starting the Engine** P. 476

■ **Auto Idle Stop may not activate when:**

- The vehicle is stopped by braking suddenly.
- The steering wheel is operated.
- The fan speed is high.
- The climate control system is in use, and there is a significant difference between the set temperature and the actual interior temperature.
- The climate control system is in use, and humidity in the interior is high.
- The rear fan is set to maximum speed.
 - Auto Idle Stop may not activate under other conditions when the rear climate control system is in use.

■ **The Engine Automatically Restarts When:**

- The brake pedal is released (without the automatic brake hold system activated).
- The accelerator pedal is depressed (with the automatic brake hold system activated).

➤ **Automatic Brake Hold** P. 565

⌘ **The Engine Automatically Restarts When:**

If you are using an electronic device during Auto Idle Stop, the device may temporarily be turned off when the engine restarts.

■ The engine restarts even if the brake pedal is depressed*1 when:

- The Auto Idle Stop **OFF** button is pressed.
- The steering wheel is operated.
- The transmission is put into **[R]** or **[S]**, or when it is set from **[N]** to **[D]**.
 - If you put the transmission into **[P]** after the Auto Idle Stop activates, the Auto Idle Stop continues to operate. In this case, the engine restarts when you depress the brake pedal.
- The pressure on the brake pedal is reduced and the vehicle starts moving while stopped on an incline.
- The brake pedal is released slightly during a stop.
- The battery charge becomes low.
- The accelerator pedal is depressed.
- The driver's seat belt is unlatched.
-  is on (indicator on).
- The climate control system is in use, and the difference between the set temperature and actual interior temperature becomes significant.
- The climate control system is being used to dehumidify the interior.
- The rear fan is set to maximum speed.
 - Auto Idle Stop may not activate under other conditions when the rear climate control system is in use.
- When the Intelligent Traction Management is set to **Snow**.
- The vehicle ahead of you starts again when your vehicle stops automatically with ACC with Low Speed Follow.

■ Starting Assist Brake Function

Briefly keeps the brake applied after releasing the brake pedal to restart the engine. This can keep your vehicle from unexpectedly moving while on an incline.

⌘ The engine restarts even if the brake pedal is depressed*1 when:

*1: With the automatic brake hold system activated, you can release the brake pedal while Auto Idle Stop is in operation.

If the automatic brake hold system has been turned off, or if there is a problem with the system, the engine will restart automatically when you release the brake pedal.

➤ **Automatic Brake Hold** P. 565