
Multi-Information Display


The multi-information display shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.

Switching the Display

Press the ▲①/▼ (information) or **RESET** button to change the display.

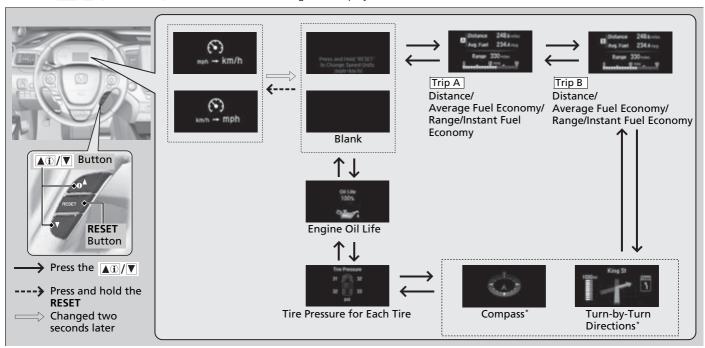

* Not available on all models Continued

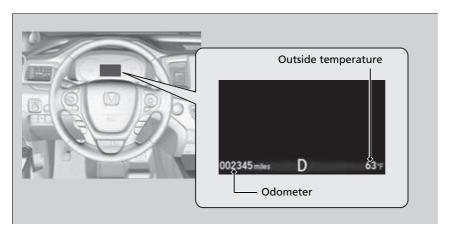

Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

Outside Temperature

Shows the outside temperature in Fahrenheit (U.S.) or Celsius (Canada).

■ Adjusting the outside temperature display

Adjust the temperature reading by up to $\pm 5^{\circ}$ F or $\pm 3^{\circ}$ C if the temperature reading seems incorrect.

■ Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the **RESET** button until the trip meter is reset to **0.0**.

Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in mpg or I/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

You can adjust the temperature reading.

Customized Features P. 299

∑Trip Meter

Switch between trip meter A and trip meter B by pressing the $\boxed{\blacksquare 0}/\boxed{\blacksquare}$ button.

You can change when to reset the average fuel economy.

Customized Features P. 299

Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

■ Instant Fuel Economy

Shows the instant fuel economy as a bar graph in mpg or I/100 km.

■ Tire Pressure Monitor

Shows each tire's pressure.

Tire Pressure Monitoring System (TPMS) with Tire Fill Assist P. 416

■ Maintenance Minder[™]

Shows the remaining oil life and Maintenance Minder™.

Maintenance Minder™ P. 491

Models with navigation system

Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system, turn-by-turn directions to your destination appear.

≥ Refer to the Navigation System Manual

You can select whether to have the turn-by-turn display come on or not during the route guidance.

- **≧** Customized Features P. 299
- Refer to the navigation system